
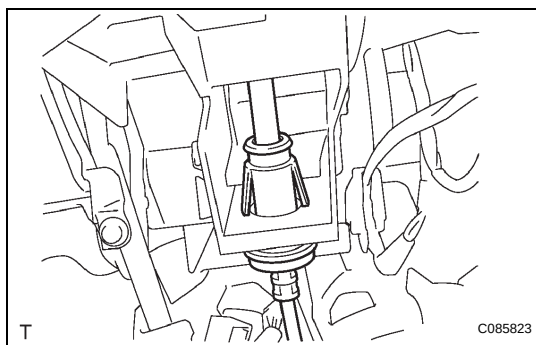


INSTALLATION


1. INSTALL TRANSMISSION CONTROL CABLE ASSEMBLY

- Install the retainer to the shift cable.
- Pull in the control cable assembly to the body.
- Install the 2 bolts.

Torque: 5.0 N*m (50 kgf*cm, 44 in.*lbf)

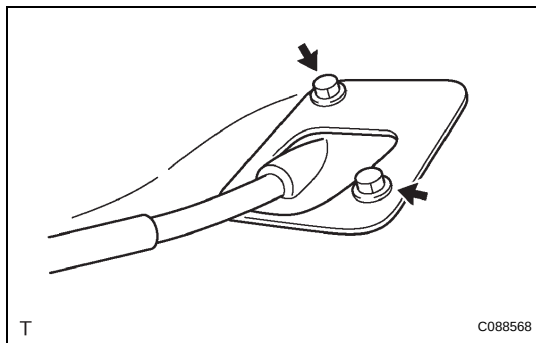


- Install the control cable to the shift lever plate.

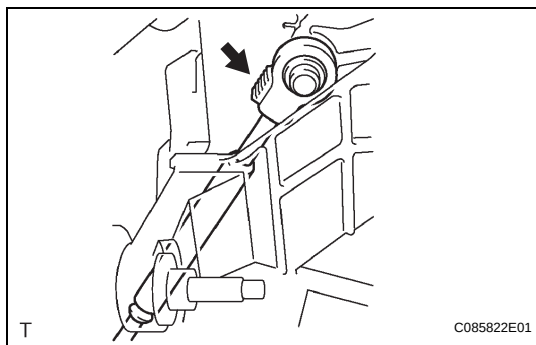


- Connect the control cable end to the floor shift assembly.

HINT:


Install it with the uneven surface facing up.

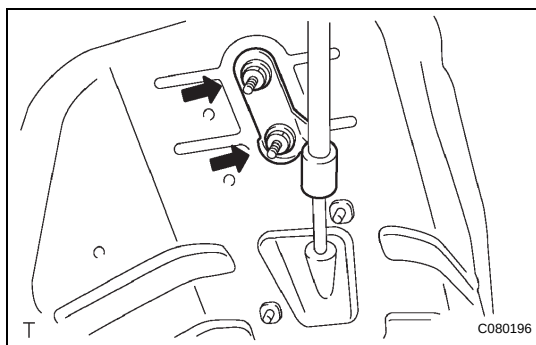

- Install the control cable with the 2 nuts to the body.
- Torque: 5.0 N*m (50 kgf*cm, 44 in.*lbf)**

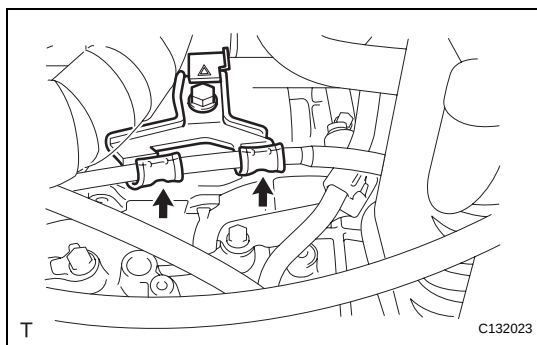

- (g) Connect the control cable to the control cable support.
- (h) Temporarily install the control cable to the control shaft lever with nut.

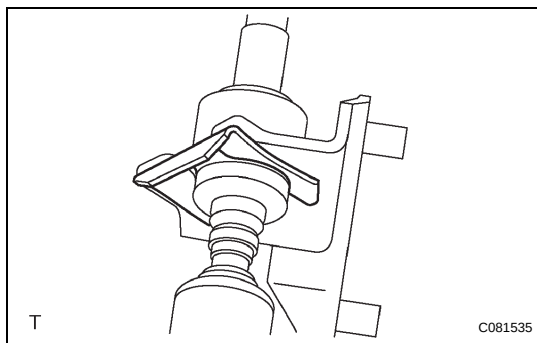

- (i) Install the control cable with the clip to the bracket.

NOTICE:

Insert the cable securely.

2. INSTALL AIR CLEANER ASSEMBLY WITH HOSE

Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

3. INSTALL FRONT FLOOR HEAT INSULATOR NO.1

- (a) Install the heat insulator with the 3 nuts.

Torque: 5.0 N*m (50 kgf*cm, 44 in.*lbf)

4. INSTALL EXHAUST PIPE ASSEMBLY FRONT

HINT:

(See page [EX-3](#))

5. INSTALL FLOOR PANEL BRACE FRONT

- (a) Install the floor panel brace with the 2 nuts.

Torque: 30 N*m (302 kgf*cm, 22 ft.*lbf)

6. INSTALL OXYGEN SENSOR CONNECTOR

- (a) Connect the oxygen sensor connector.
- (b) Install the floor carpet and foot rest.

7. INSTALL AIRBAG SENSOR ASSEMBLY CENTER
SST 09249-63010**8. ADJUST SHIFT LEVER POSITION (See page [AX-112](#))****9. INSPECT SHIFT LEVER POSITION (See page [AX-111](#))****10. INSPECT SRS WARNING LIGHT**

HINT:

(See page [RS-37](#))