
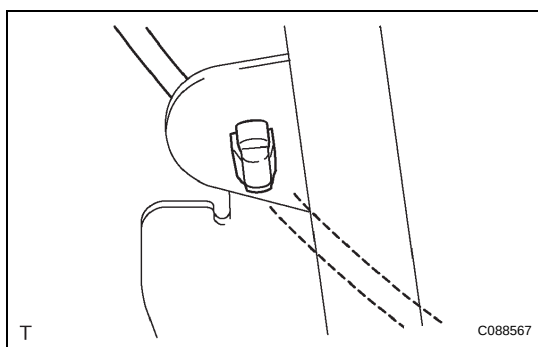



INSTALLATION

1. INSTALL FLOOR SHIFT PARKING LOCK CABLE ASSEMBLY


- (a) Turn the ignition switch ACC or ON.
- (b) Connect the cable to the upper bracket.

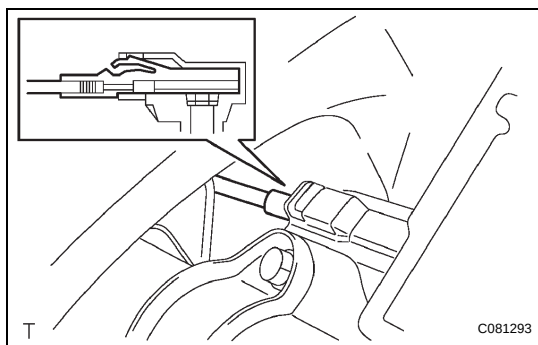


- (c) Connect the cable clamp.
- (d) Shift the shift lever to N position.

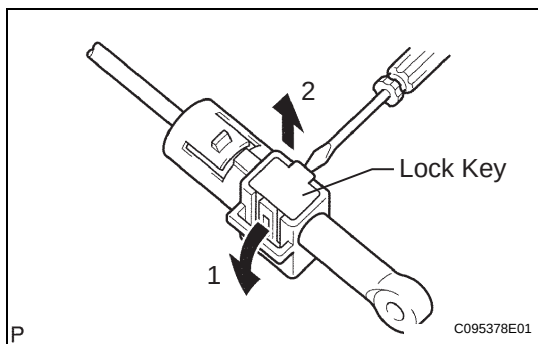


- (e) Using a screwdriver, unlock the claw of the lock key of automatic adjustment part.

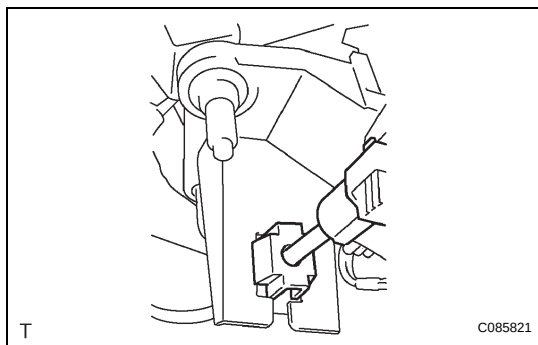

- (f) Pass the parking lock cable through the hole of shift lever plate.
- (g) Insert the slide cap into the shift lever plate.

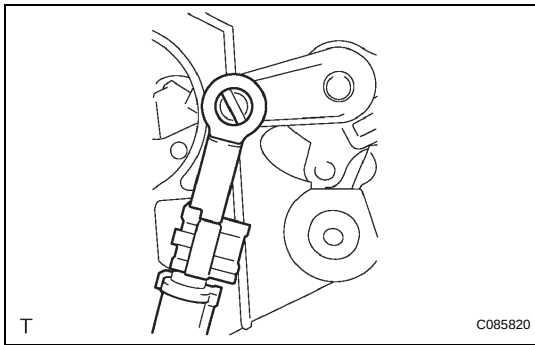

- (h) Apply MP grease to the shift lock release link.
- (i) Insert the lever pin into the hole in the cable end.

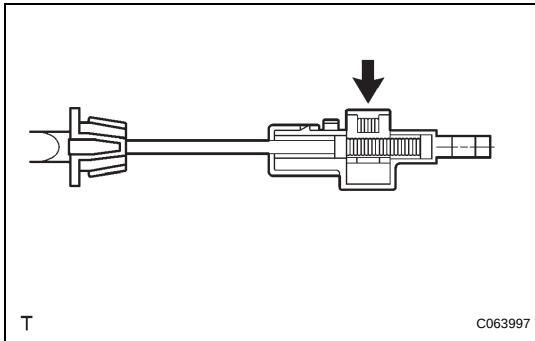

- (j) Lock the lock key.
HINT:
At this time, the shift lever should be in N position and the ignition key should be set to ACC or ON.

2. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER

HINT:
(See page [IP-11](#))

3. INSTALL INSTRUMENT PANEL BOX

HINT:
(See page [IP-11](#))

4. INSTALL INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY CTR

HINT:
(See page [IP-11](#))

5. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY CENTER

HINT:
(See page [IP-11](#))

6. INSTALL STEERING COLUMN COVER (See page [SR-10](#))

7. CHECK KEY INTERLOCK OPERATION

HINT:
(See page [AX-88](#))