



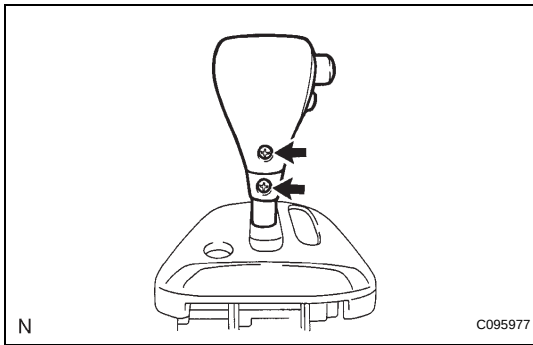


13. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY


- (a) Install the shift lever knob with the 2 screws.

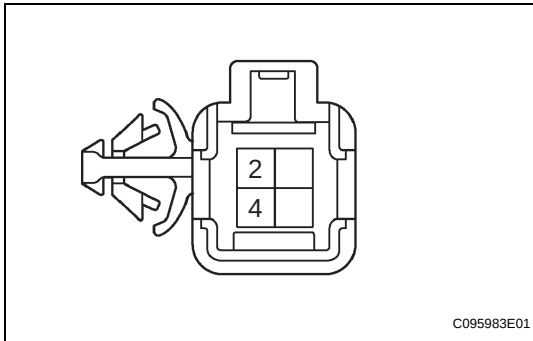

- (b) Connect the 2 wire harness of transmission control switch to the connector of indicator light wire.

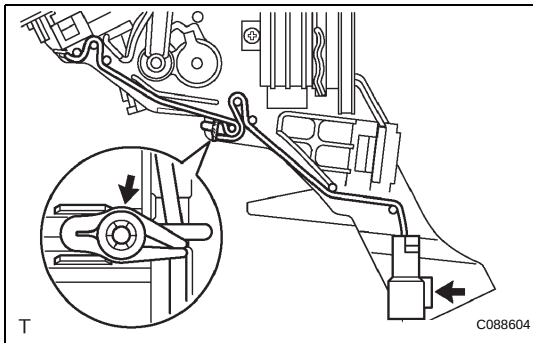

- (c) Install the wire harness with a new push nut to the shift lever plate as shown in the illustration.
- (d) Connect the indicator light wire connector to the shift lever plate.

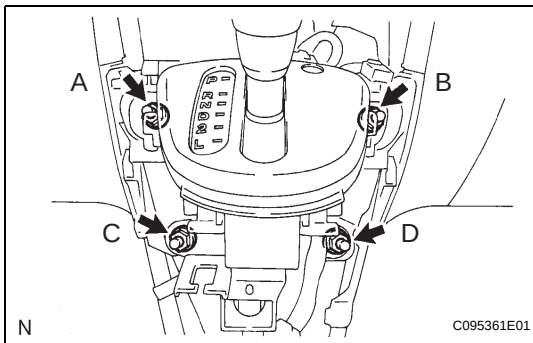

INSTALLATION


1. INSTALL FLOOR SHIFT ASSEMBLY

- (a) Install the floor shift assembly with the 4 nuts .


Torque: 12 N*m (122 kgf*cm, 9 ft.*lbf)

HINT:

Tighten them in the order, A, B, C and D.

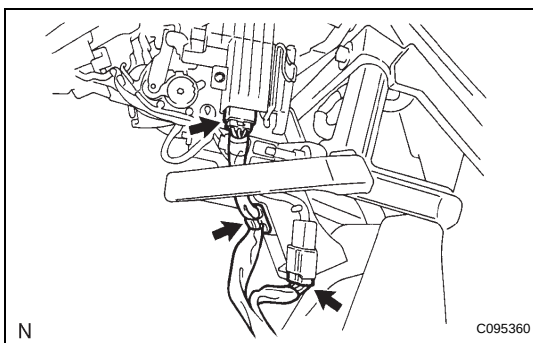


- (b) Connect the shift lock control ECU connector and indicator light wire connector.
- (c) Connect the wire harness clamp.

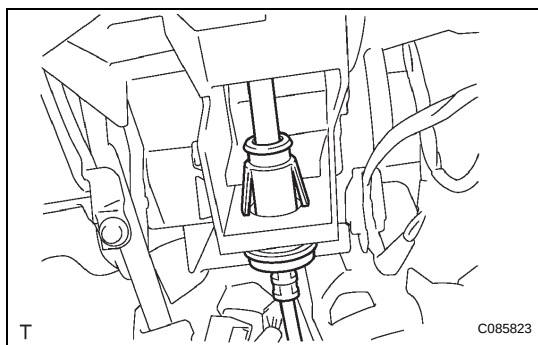

2. CONNECT TRANSMISSION CONTROL CABLE ASSEMBLY


(a) Install the control cable to the shift lever plate.

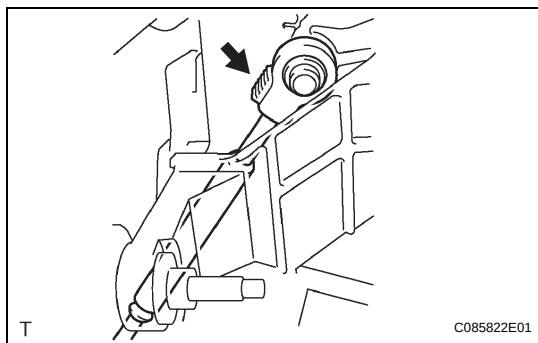

(b) Connect the control cable end to the floor shift assembly.

HINT:


Install it with the uneven surface facing up.

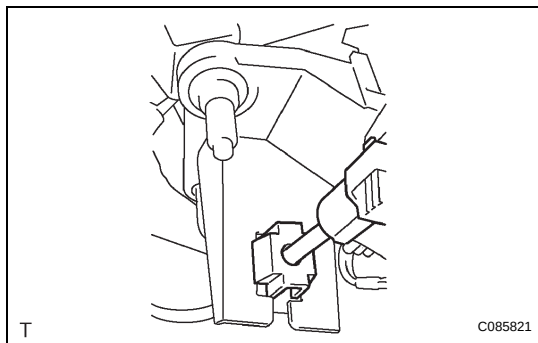

3. CONNECT FLOOR SHIFT PARKING LOCK CABLE ASSEMBLY

(a) Pass the parking lock cable through the hole of shift lever plate.

(b) Insert the slide cap into the shift lever plate.

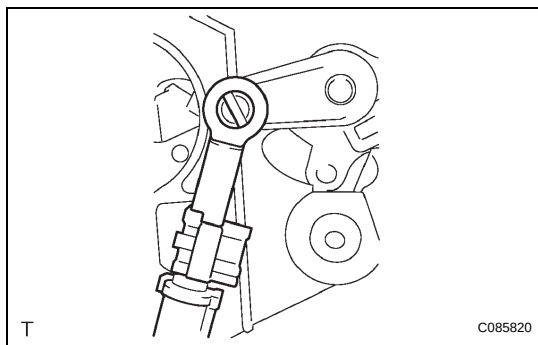

(c) Apply MP grease to the shift lock release link.

(d) Insert the lever pin into the hole in the cable end.

4. CHECK KEY INTERLOCK OPERATION

HINT:

(See page [AX-88](#))

5. CHECK SHIFT LOCK OPERATION

HINT:

(See page [AX-88](#))

6. CHECK SHIFT LOCK RELEASE BUTTON OPERATION

HINT:

(See page [AX-88](#))