



REMOVAL

1. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY
2. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY CTR (See page [IP-6](#))
3. REMOVE INSTRUMENT PANEL BOX (See page [IP-7](#))
4. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (See page [IP-7](#))
5. DISCONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT

- (a) Remove the clip, washer and disconnect the cable end of the shift cable from the shift lever assembly.

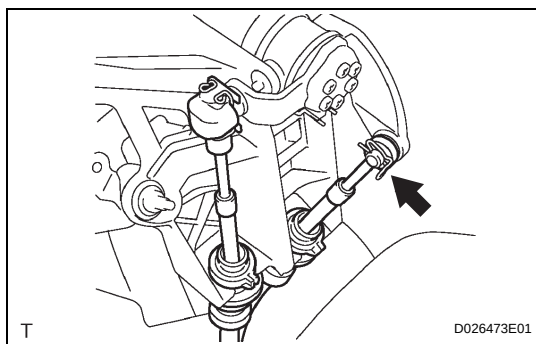


- (b) Turn the lock and disconnect the shift cable from the shift lever assembly.
- (c) Pull out the shift cable from the floor.

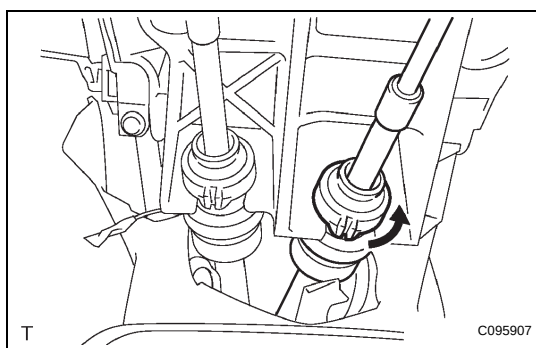



6. DISCONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT

- (a) Remove the clip and disconnect the cable end of the select cable from the shift lever assembly.

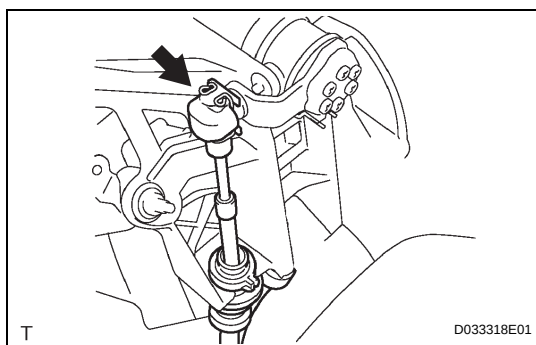


- (b) Turn the lock and disconnect the select cable from the shift lever assembly.
- (c) Pull out the select cable from the floor.

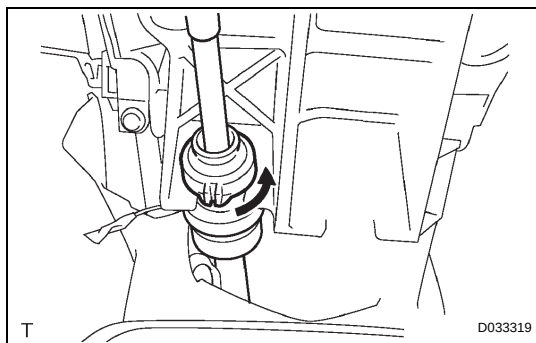

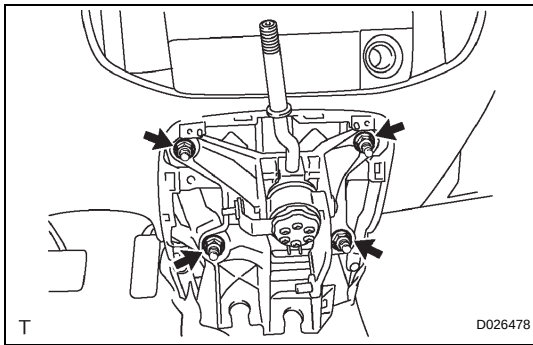


7. **REMOVE FLOOR SHIFT LEVER ASSEMBLY**
 (a) Remove the 4 nuts and shift lever assembly.

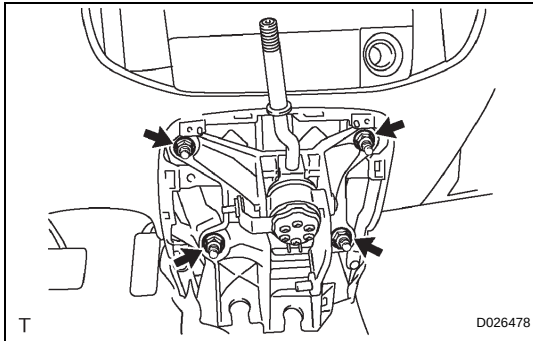


INSTALLATION


1. **INSTALL FLOOR SHIFT LEVER ASSEMBLY**
 (a) Install the shift lever assembly with the 4 nuts.
Torque: 12 N*m (120 kgf*cm, 9 ft.*lbf)

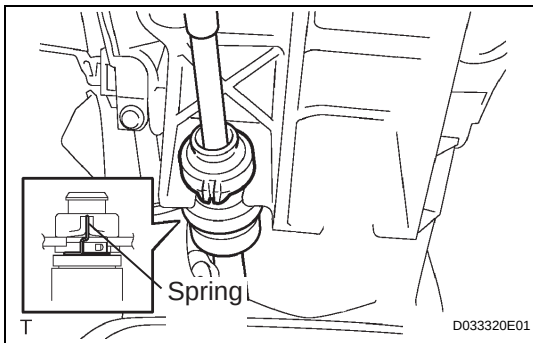


2. **CONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT**
 (a) Connect the select cable to the shift lever assembly.
NOTICE:
- The projecting part of the cable outer should face upward when the shift cable is installed.
 - Make sure that after installation the cable outer spring is moved to the place shown in the illustration.

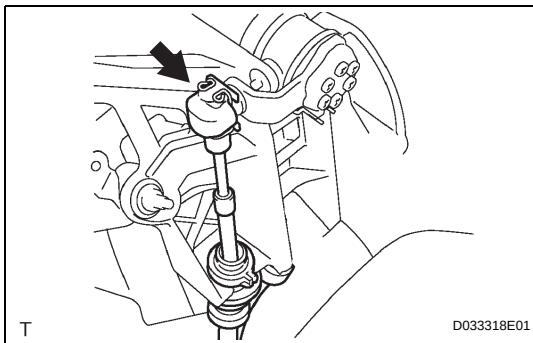

- (b) Connect the select cable end with the clip to the shift lever assembly.
 (c) Connect the select cable to the clamp.

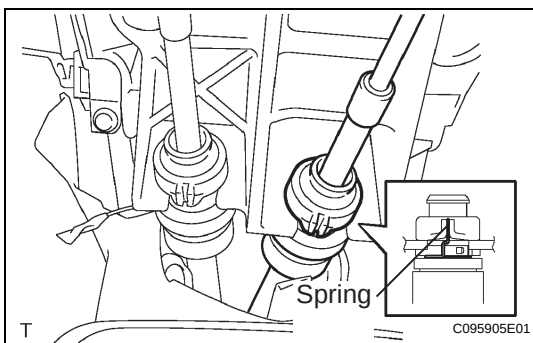

3. **CONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT**
 (a) Connect the shift cable with the clip to the shift lever assembly.
NOTICE:
- The projecting part of the cable outer should face upward when the shift cable is installed.
 - Make sure that after installation the cable outer spring is moved to the place shown in the illustration.

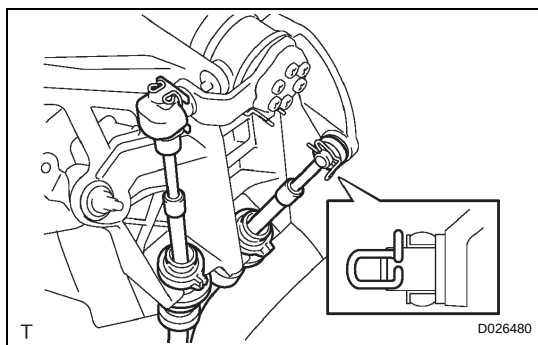

- (b) Connect the shift cable end as shown in the illustration.
- (c) Install the washer and clip.
- (d) Connect the shift cable to the clamp.

4. **INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER** (See page [IP-15](#))
5. **INSTALL INSTRUMENT PANEL BOX** (See page [IP-15](#))
6. **INSTALL INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY CTR** (See page [IP-15](#))
7. **INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY**