



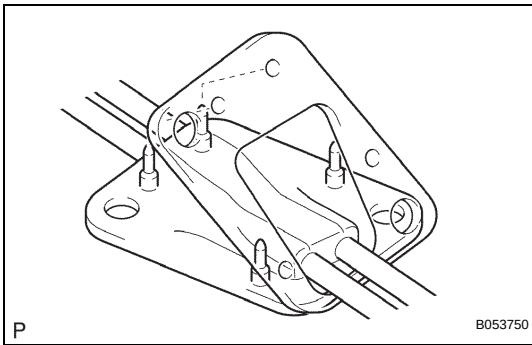

(g) Remove the retainer from the grommet.

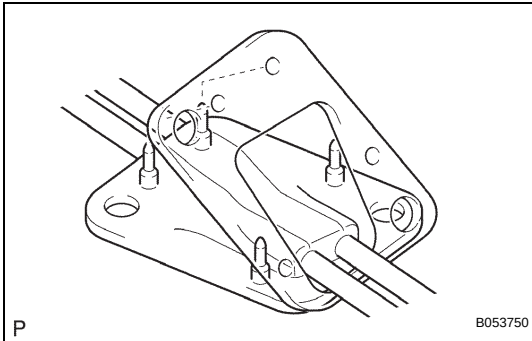


INSTALLATION

1. INSTALL TRANSMISSION CONTROL CABLE ASSEMBLY


(a) Install the retainer to the grommet.

NOTICE:


Fit 4 projections of the grommet into 4 holes of the retainer.

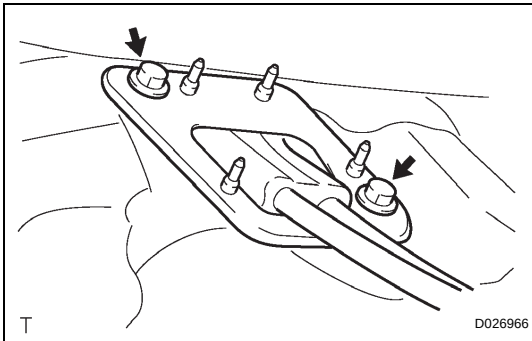

(b) Install the control cable assembly with the 2 bolts.
Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)

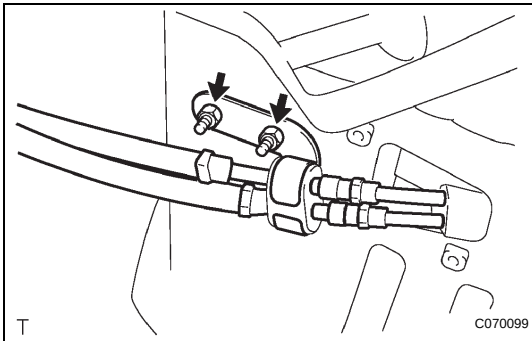


(c) Connect the shift cable with the 2 nuts.
Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)

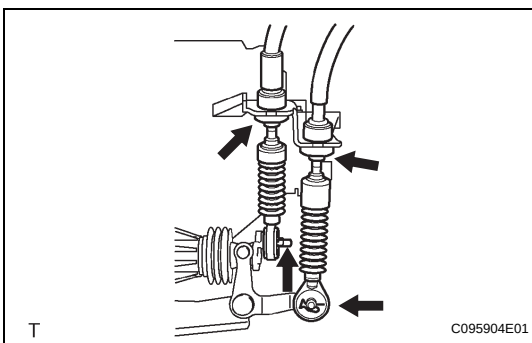

(d) Connect the shift cable with the 2 clip from the bracket.

(e) Connect the shift cable end of the shift cable with the 2 washer and 2 clip to the transaxle.

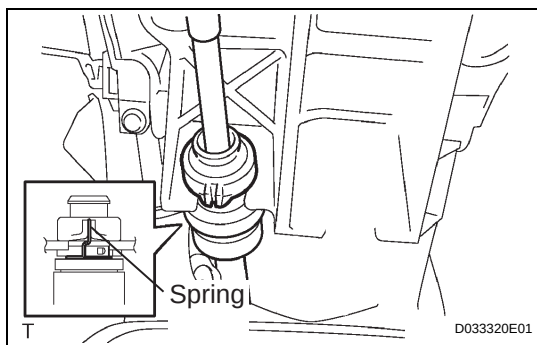


2. CONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT

- (a) Connect the select cable to the shift lever assembly.


NOTICE:

- The projecting part of the cable outer should face upward when the shift cable is installed.
- Make sure that after installation the cable outer spring is moved to the place shown in the illustration.

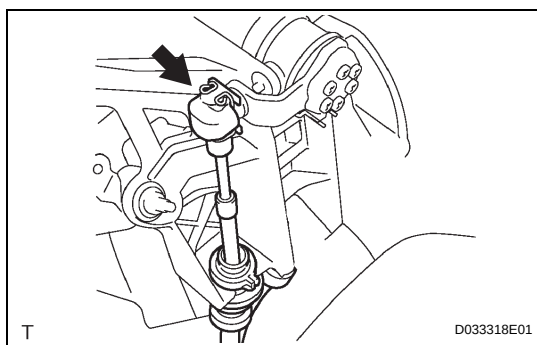

- (b) Connect the select cable end with the clip to the shift lever assembly.

- (c) Connect the select cable to the clamp.

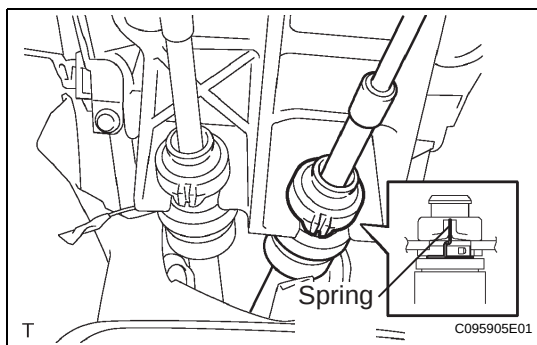


3. CONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT

- (a) Connect the shift cable to the shift lever assembly.

NOTICE:

- The projecting part of the cable outer should face upward when the shift cable is installed.
- Make sure that after installation the cable outer spring is moved to the place shown in the illustration.

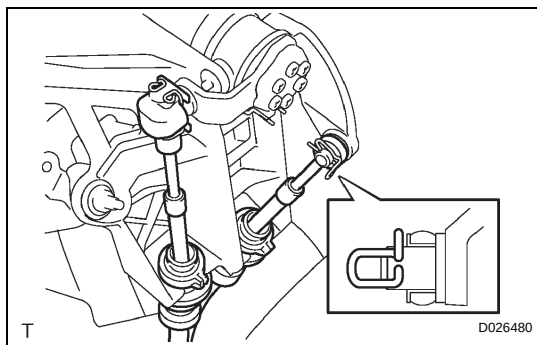

- (b) Connect the shift cable end as shown in the illustration.

- (c) Install the washer and clip.

- (d) Connect the shift cable to the clamp.

4. INSTALL FRONT FLOOR HEAT INSULATOR NO.1

- (a) Install the heat insulator No. 1 with the 3 nuts.

Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)

5. INSTALL EXHAUST PIPE ASSEMBLY

HINT:

(See page [EX-3](#))

6. INSTALL AIR BAG SENSOR ASSEMBLY CENTER (See page [RS-314](#))

7. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER (See page [IP-15](#))

8. INSTALL INSTRUMENT PANEL BOX (See page [IP-15](#))

9. INSTALL INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY CTR (See page [IP-15](#))

10. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

11. CONNECT BATTERY NEGATIVE TERMINAL

12. INSPECT SRS WARNING LIGHT