


REAR AXLE HUB BOLT

COMPONENTS


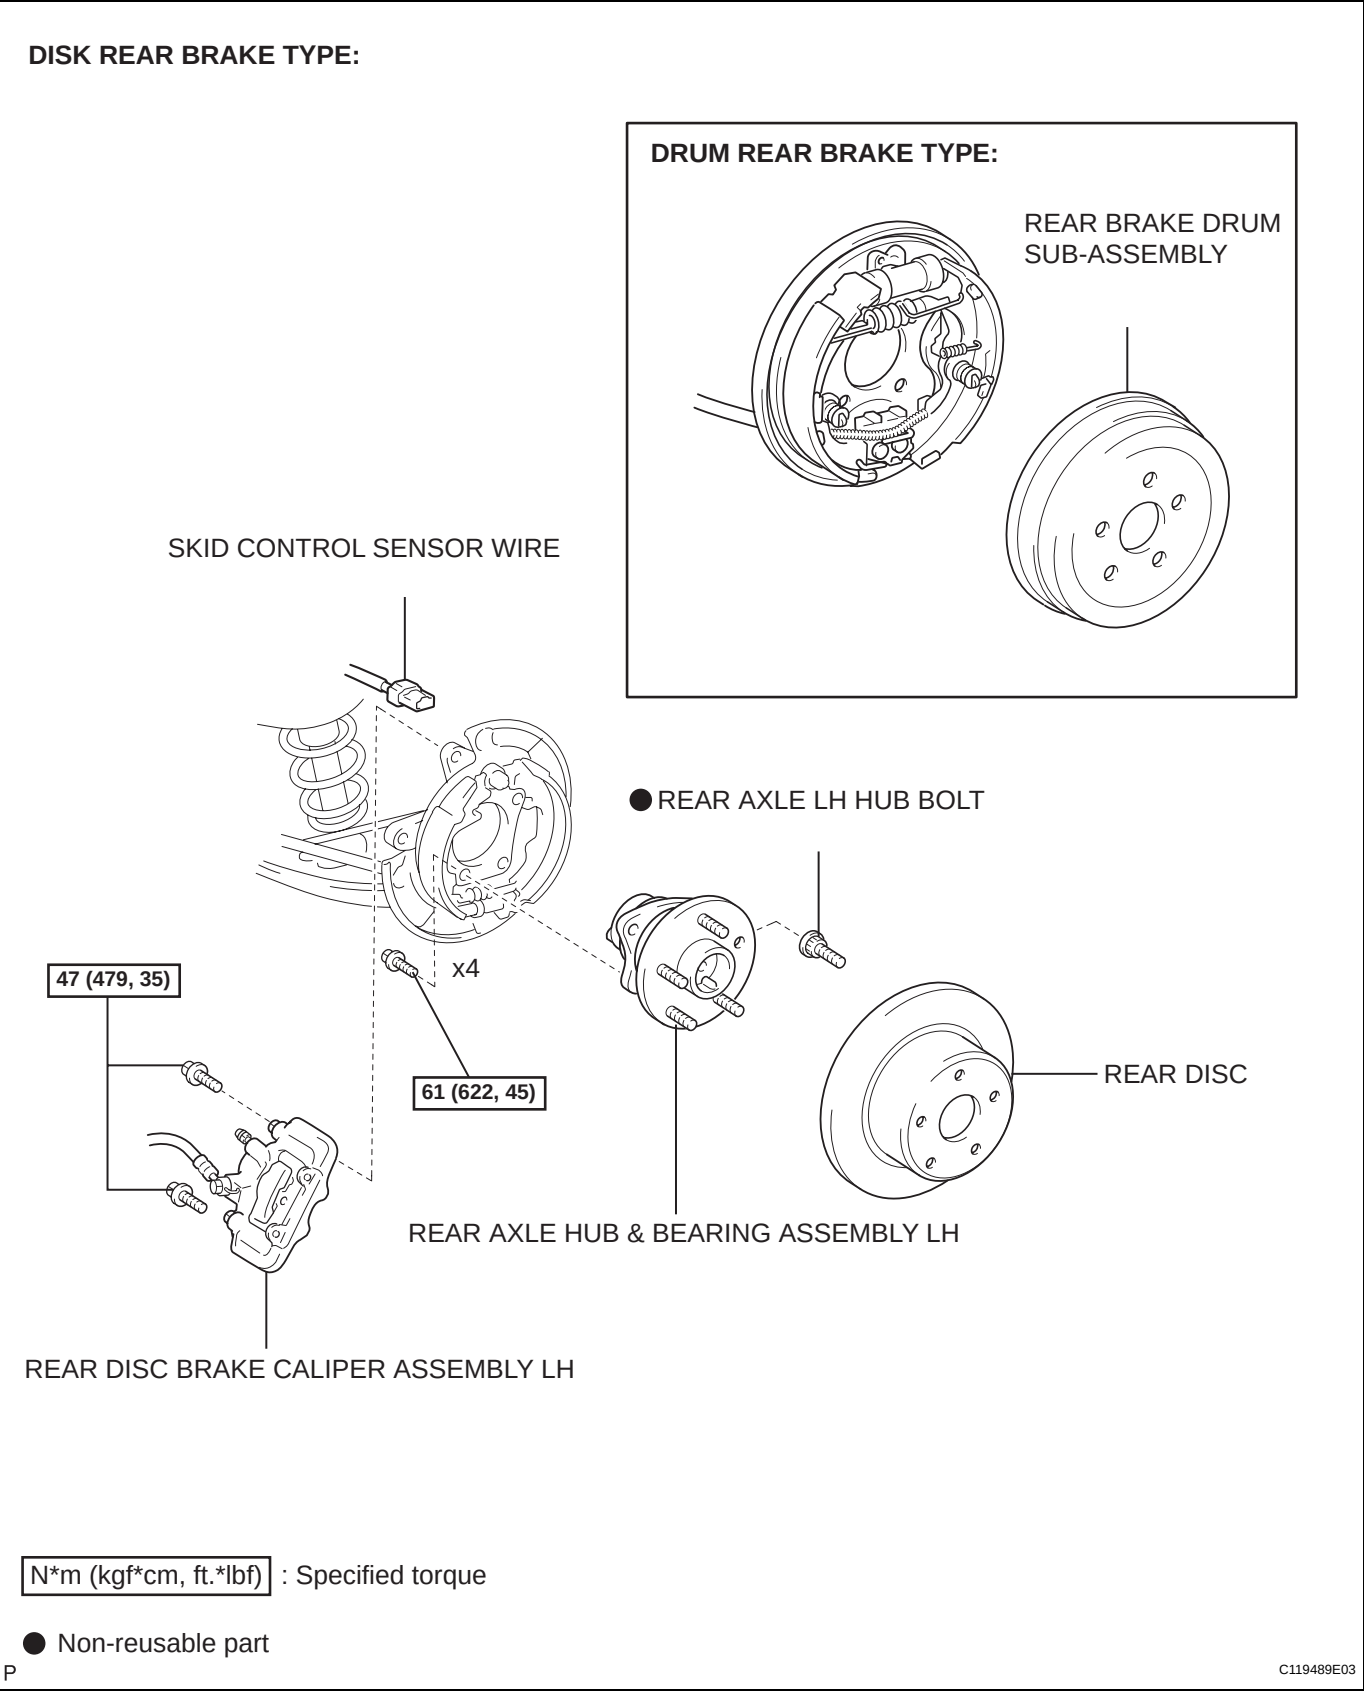


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

REMOVAL

1. REMOVE REAR WHEEL
2. SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH (DISC REAR BRAKE TYPE) (See page [AH-13](#))
3. REMOVE REAR DISC (DISC REAR BRAKE TYPE)
4. REMOVE REAR BRAKE DRUM SUB-ASSEMBLY (DRUM REAR BRAKE TYPE)
5. REMOVE REAR AXLE LH HUB BOLT
 - (a) Using SST and a hammer handle or an equivalent, remove the LH hub bolt.**SST 09628-10011**

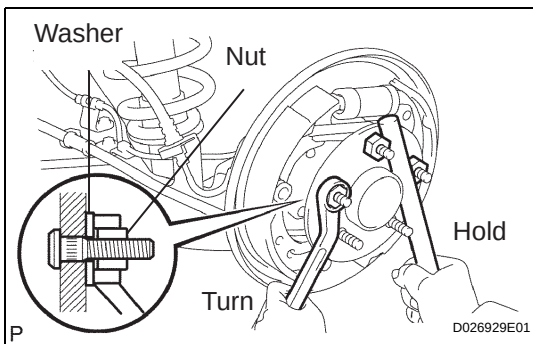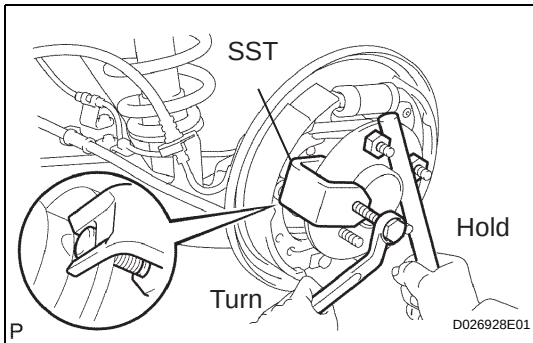

INSTALLATION

1. INSTALL REAR AXLE LH HUB BOLT
 - (a) Install a washer and nut to a new LH hub bolt as shown in the illustration.
 - (b) Using a hammer handle or an equivalent to hold the hub & bearing assembly, install the LH hub bolt by tightening the nut.
2. INSTALL REAR BRAKE DRUM SUB-ASSEMBLY (for Rear Drum Brake)
3. INSTALL REAR DISC (DISC REAR BRAKE TYPE) (See page [AH-14](#))
4. INSTALL REAR DISC BRAKE CALIPER ASSEMBLY LH (DISC REAR BRAKE TYPE) (See page [AH-14](#))
5. INSTALL REAR WHEEL
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)