
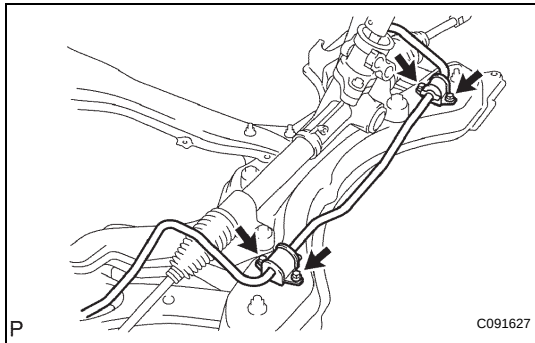


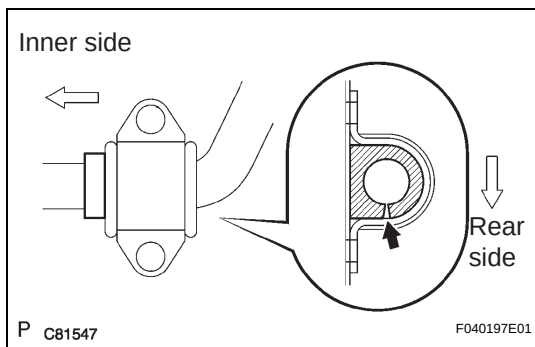

INSTALLATION

1. INSTALL STABILIZER BAR FRONT

- (a) Install 2 front stabilizer bar bushes No. 1, front stabilizer bracket No. 1 LH and front stabilizer bracket No. 1 RH to the stabilizer bar front.

HINT:

Install the bushing to the inner side of the bushing stopper on the stabilizer bar.

- (b) Install the stabilizer bar front and 4 bolts to the front suspension crossmember sub-assembly.

Torque: 19 N*m (194 kgf*cm, 14 ft.*lbf)

2. INSTALL FRONT SUSPENSION CROSSMEMBER SUB-ASSEMBLY (See page [SP-25](#))

3. INSTALL RACK & PINION POWER STEERING GEAR ASSEMBLY (See page [SP-26](#))

4. INSTALL FRONT SUSPENSION ARM SUB-ASSEMBLY LOWER NO. 1 LH (See page [SP-26](#))

5. INSTALL FRONT SUSPENSION ARM SUB-ASSEMBLY LOWER NO. 1 RH

HINT:

Install the RH side by the same procedures as the LH side.

6. INSTALL FRONT STABILIZER LINK ASSEMBLY LH

- (a) Install the stabilizer bar link with the 2 nuts.

Torque: 74 N*m (755 kgf*cm, 55 ft.*lbf)

HINT:

If the ball joint turns together with the nut, use a hexagon wrench (6 mm) to hold the stud.

7. INSTALL FRONT STABILIZER LINK ASSEMBLY RH

HINT:

Install the RH side by the same procedure as the LH side.

8. INSTALL FRONT WHEEL

Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)

9. INSPECT AND ADJUST FRONT WHEEL ALIGNMENT

HINT:

See page [SP-4](#)