


REAR SHOCK ABSORBER

COMPONENTS

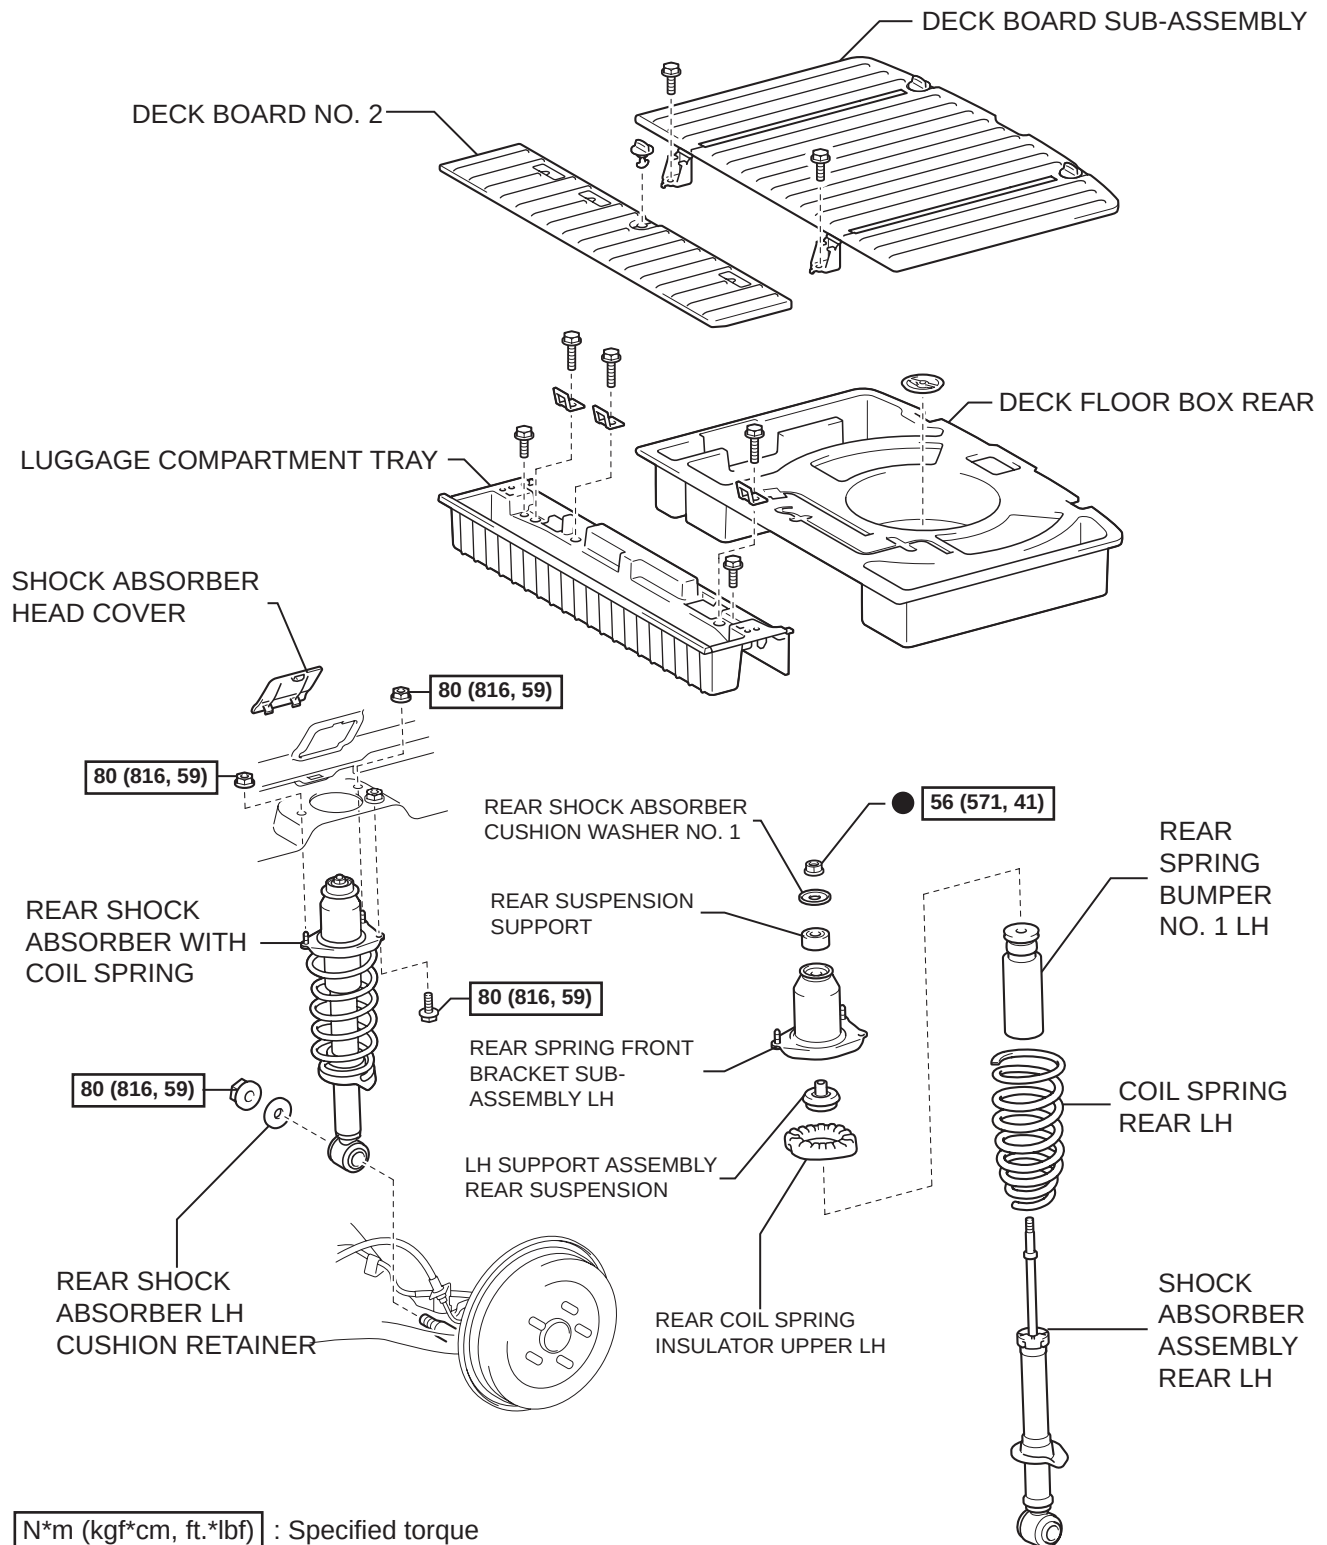

N*m (kgf*cm, ft.*lbf) : Specified torque



● Non-reusable part

P


C119472E01

REMOVAL

1. REMOVE REAR WHEEL
2. REMOVE DECK BOARD NO. 2
3. REMOVE DECK BOARD SUB-ASSEMBLY (See page [IR-6](#))
4. REMOVE DECK FLOOR BOX REAR (See page [IR-6](#))
5. REMOVE LUGGAGE COMPARTMENT TRAY (See page [IR-6](#))
6. REMOVE SHOCK ABSORBER HEAD COVER
7. REMOVE REAR SHOCK ABSORBER WITH COIL SPRING
 - (a) Support the rear axle beam assembly with jack.

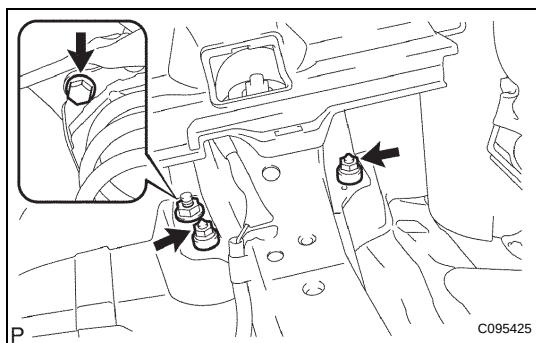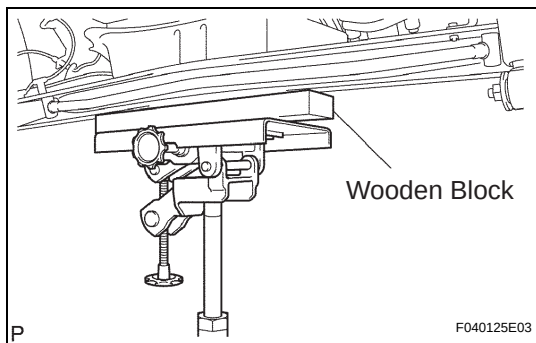

- (b) Remove the 2 nuts and bolt.

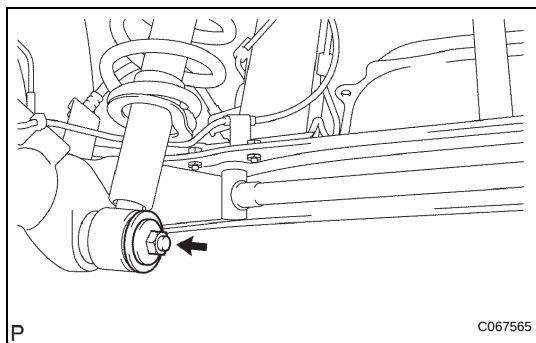

- (c) Remove the nut, rear shock absorber LH cushion retainer and rear shock absorber with coil spring.