



REAR AXLE BEAM

COMPONENTS

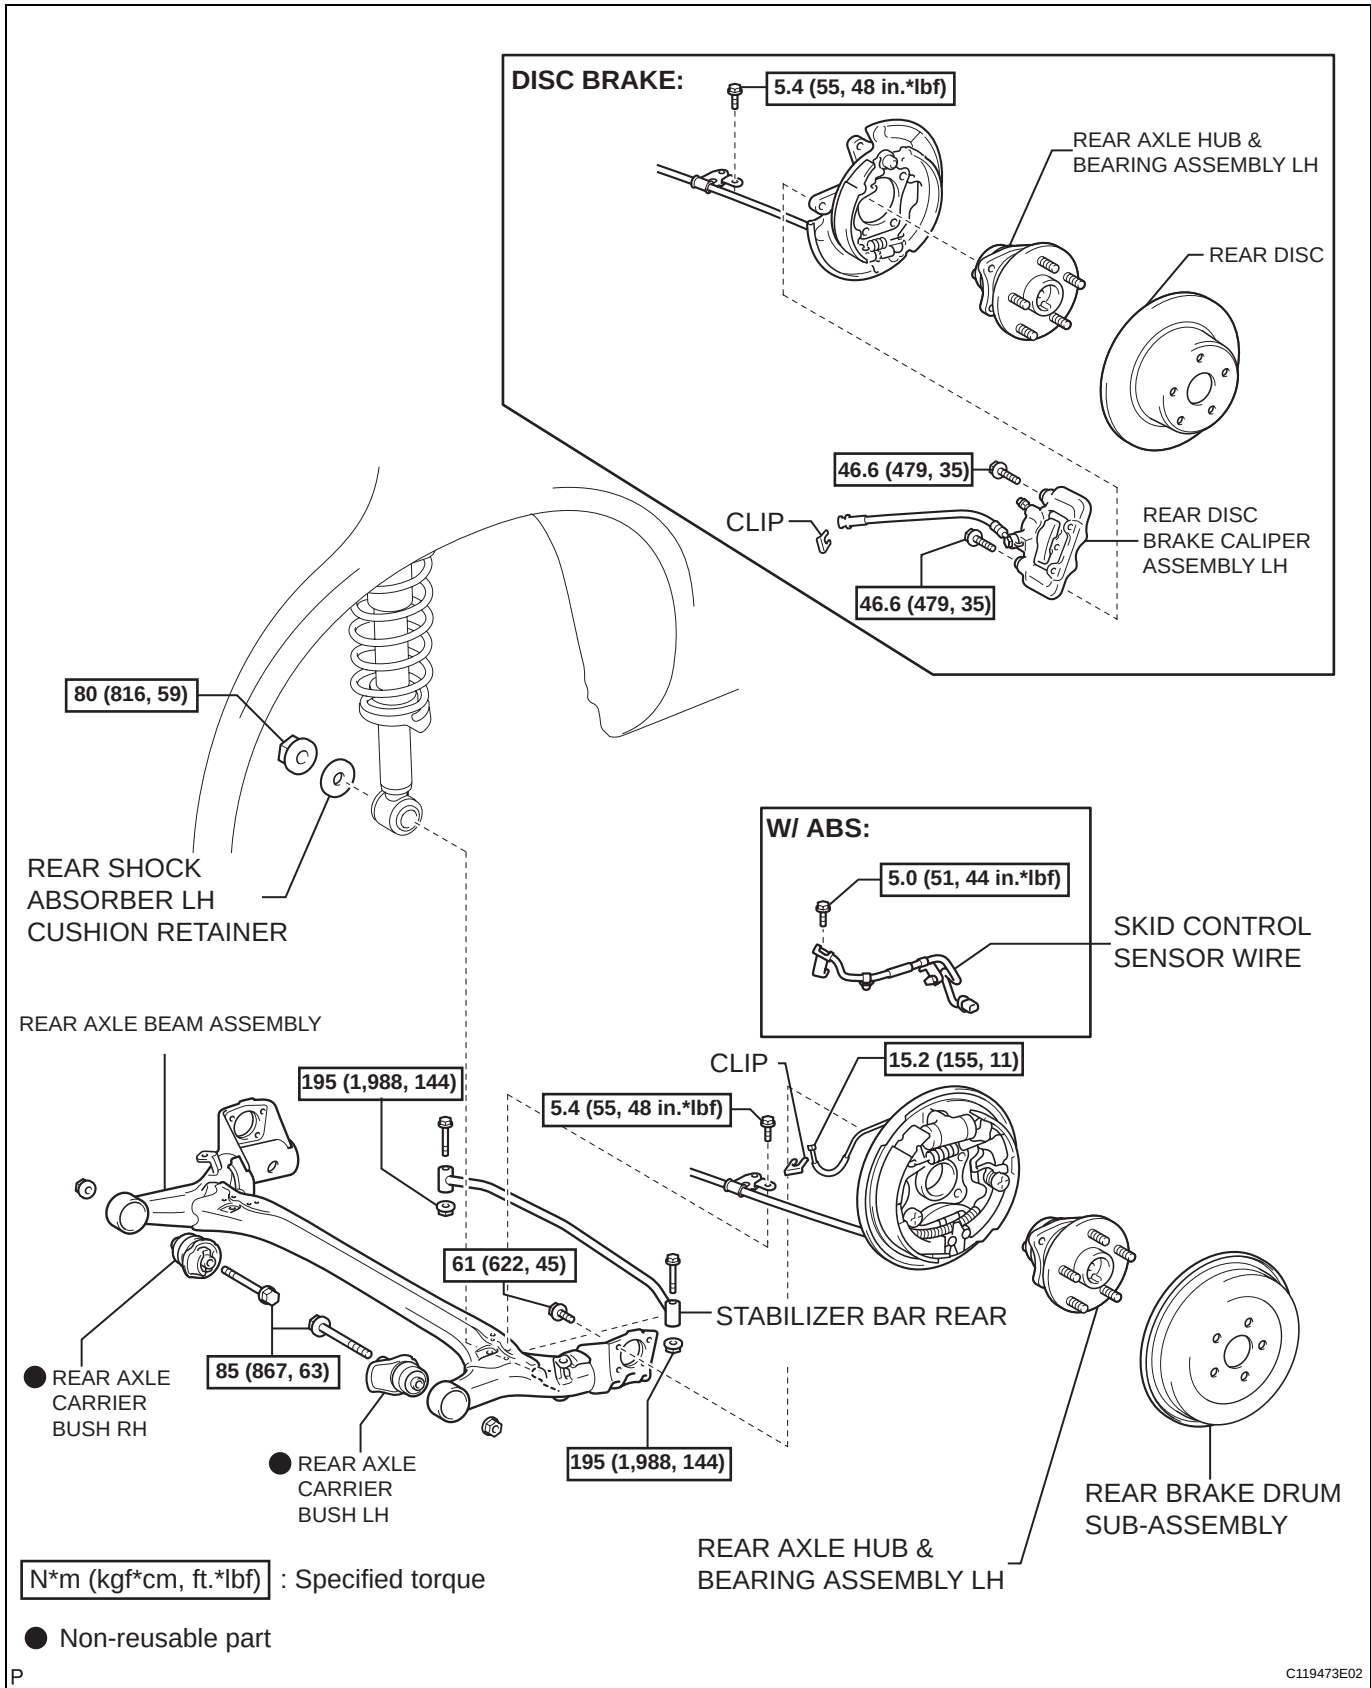


REMOVAL


1. REMOVE REAR WHEEL
2. SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH (for Disc Type) (See page [BR-35](#))
3. SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY RH (for Disc Type)
4. REMOVE REAR DISC (for Disc Type)
HINT:
Use the same manner described above to the other side.
5. REMOVE REAR BRAKE DRUM SUB-ASSEMBLY (for Drum Type)
HINT:
Use the same manner described above to the other side.

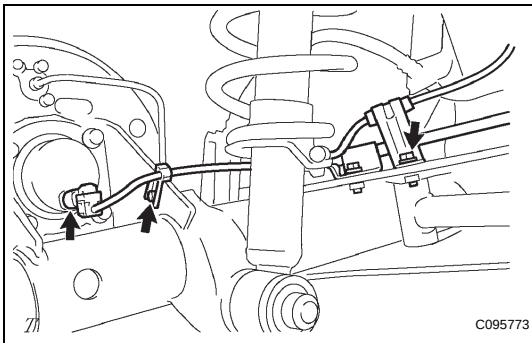

6. DISCONNECT SKID CONTROL SENSOR WIRE (w/ ABS)
 - (a) Disconnect the skid control sensor connector.
 - (b) Remove the bolt and clip, disconnect the skid control sensor wire.
 - (c) Use the same manner described above to the other side.
7. DISCONNECT PARKING BRAKE CABLE ASSEMBLY NO. 3
 - (a) Remove the bolt, disconnect parking brake cable No. 3.
8. DISCONNECT PARKING BRAKE CABLE ASSEMBLY NO. 2
 - (a) Remove the bolt, disconnect parking brake cable No. 2.

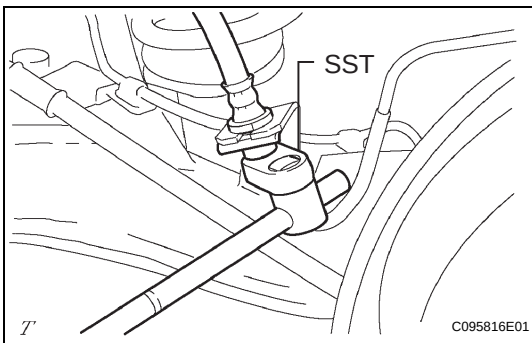

9. REMOVE STABILIZER BAR REAR (See page [SP-47](#))
10. DISCONNECT REAR BRAKE TUBE NO. 4 (for Drum Type)
 - (a) Using SST, disconnect the rear brake tube No. 4 from the flexible hose. Use a container to catch brake fluid as it drains out.
SST 09023-00101
 - (b) Remove the clip and disconnect the flexible hose.
11. DISCONNECT REAR BRAKE TUBE NO. 3 (for Drum Type)
SST 09023-00101
HINT:
Disconnect the RH side by the same procedures as the LH side.

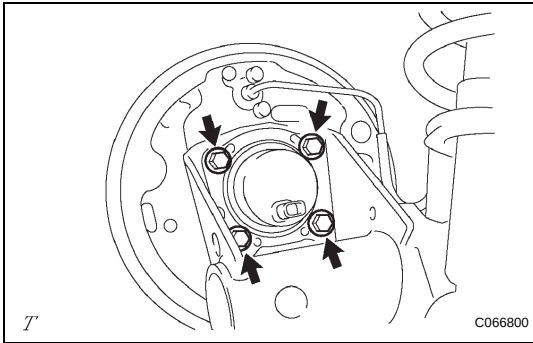


12. REMOVE REAR AXLE HUB & BEARING ASSEMBLY LH

- (a) Remove the 4 bolts and rear axle hub from the rear axle beam assembly.

13. REMOVE REAR AXLE HUB & BEARING ASSEMBLY RH


HINT:

Remove the RH side by the same procedures as the LH side.

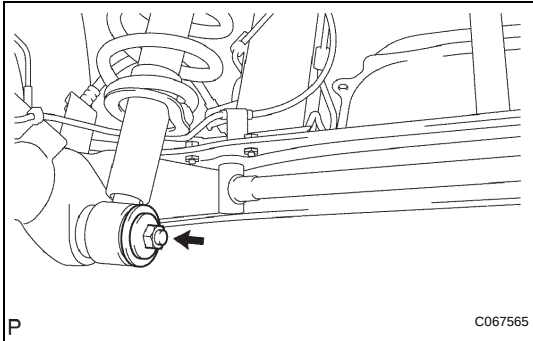

14. SEPARATE REAR SHOCK ABSORBER WITH COIL SPRING

- (a) Remove the nut and rear shock absorber LH cushion retainer, separate the rear shock absorber with coil spring from the rear axle beam assembly.
- (b) Use the same manner described above to the other side.

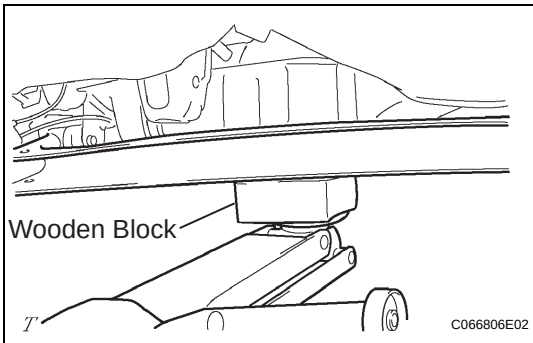

15. REMOVE REAR AXLE BEAM ASSEMBLY

- (a) Support the rear axle beam assembly with jack.

