


OK

REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY

2INSPECT SKID CONTROL BUZZER

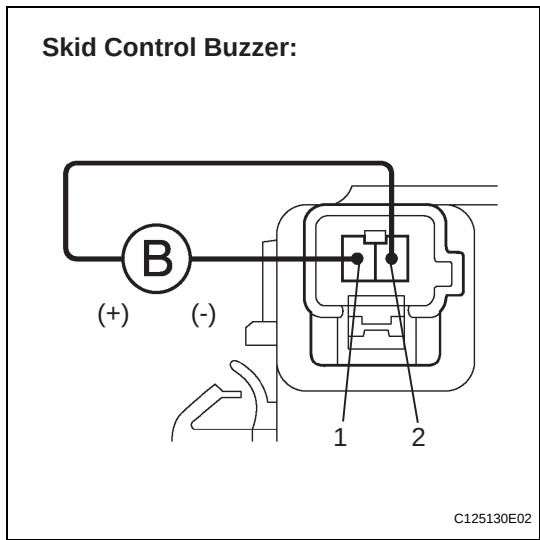


- (a) Disconnect the skid control buzzer connector.
(b) Apply a battery negative voltage to terminal 1 and positive voltage to terminal 2 of the skid control buzzer connector, and check that the buzzer sounds.
- OK:**
The skid control buzzer sound should be heard.

NG

REPLACE SKID CONTROL BUZZER

OK

3CHECK HARNESS AND CONNECTOR (SKID CONTROL BUZZER - SKID CONTROL ECU)

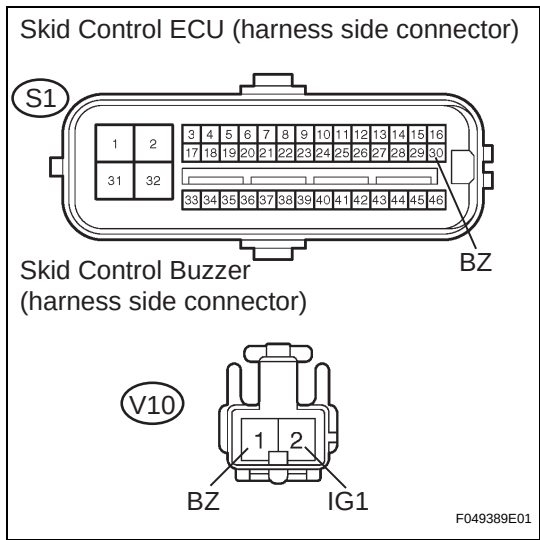

- (a) Disconnect the skid control buzzer connector and the skid control ECU connector.
(b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Specified Condition
S1-30 (BZ) - V10-1 (BZ)	Below 1 Ω

- (c) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Specified Condition
S1-30 (BZ) - Body ground	10 kΩ or higher

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY