
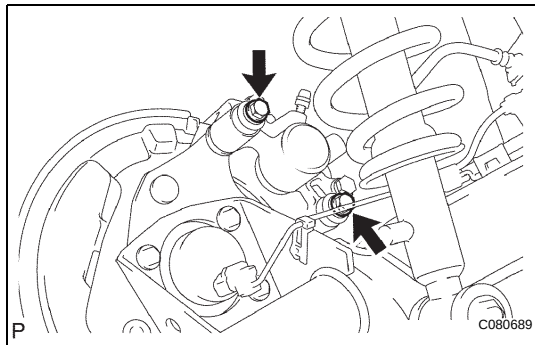


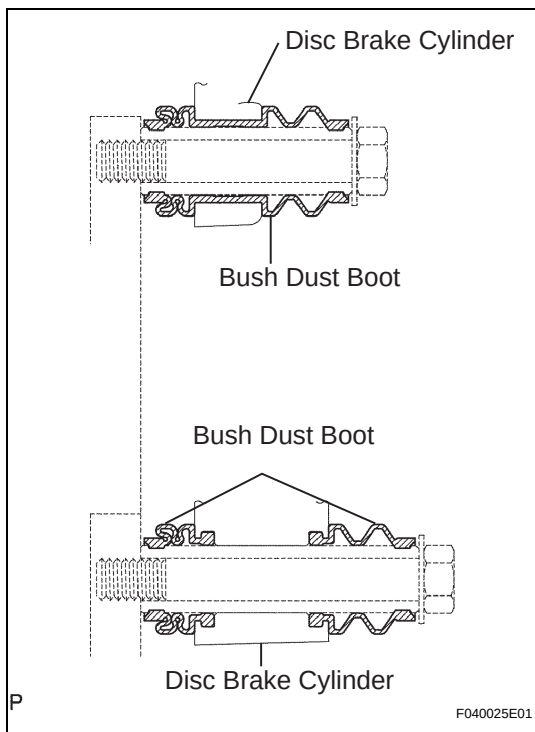

- (b) Install the 3 bush dust boots to the disc brake cylinder.

8. INSTALL REAR DISC BRAKE CYLINDER MOUNTING COLLAR

- (a) Install the 2 cylinder mounting collars.

INSTALLATION

1. INSTALL DISC BRAKE CYLINDER ASSEMBLY REAR LH

- (a) Install the disc brake cylinder with the 2 bolts.
Torque: 46.6 N*m (475 kgf*cm, 34 ft.*lbf)
- (b) Install a new gasket and flexible hose with the union bolt.

Torque: 29 N*m (296 kgf*cm, 21 ft.*lbf)

HINT:

- Gasket has 2 types: 2-piece type and 1-piece type.
- Install the flexible hose lock securely in the lock hole in the brake cylinder.

2. INSTALL DISC BRAKE PAD KIT REAR (PAD ONLY) NOTICE:


If necessary, replace the anti-squeal shim kit when replacing the brake pad.

- (a) Apply disc brake grease to inside of anti-squeal shims, and install the anti-squeal shims on each pad.
- (b) Install the inner pad with the pad wear indicator plate facing upward, and install the outer pad.

NOTICE:

There should be no oil or grease on the friction surface of the pads and the disc.

- (c) Install the 2 pad guide pins.

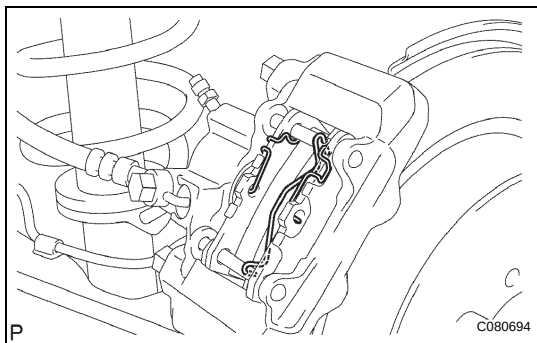

(d) Install the anti-rattle spring No. 1 anti-rattle spring No. 2 and clip.

3. FILL RESERVOIR WITH BRAKE FLUID

4. BLEED MASTER CYLINDER

(a) Bleed the master cylinder (See page [BR-3](#)).
SST 09023-00101

5. BLEED BRAKE LINE

(a) Bleed the brake line (See page [BR-3](#)).

6. CHECK FLUID LEVEL IN RESERVOIR

7. INSPECT FOR BRAKE FLUID LEAK

8. INSTALL REAR WHEEL

Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)