


BRAKE PEDAL

COMPONENTS

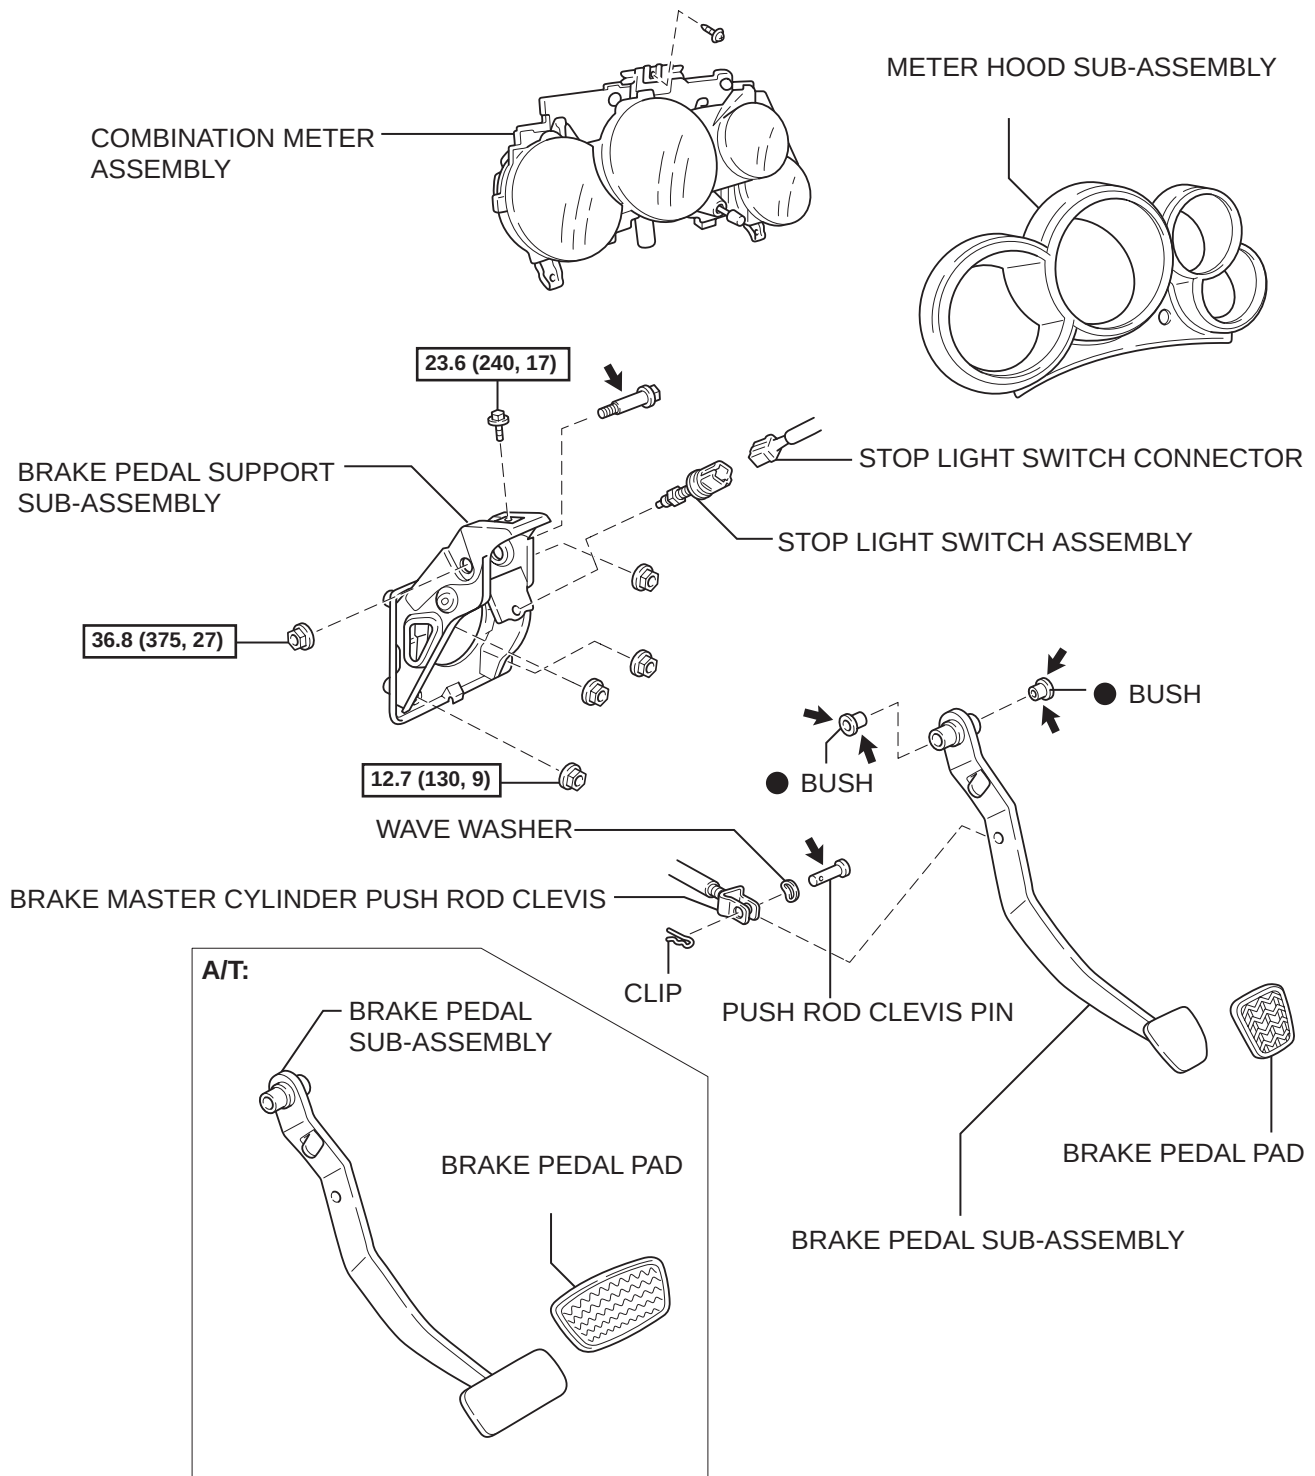

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

← Lithium soap base glycol grease


REMOVAL

1. REMOVE COMBINATION METER ASSEMBLY

- (a) Remove the combination meter assembly (See page [ME-51](#)).


2. DISCONNECT BRAKE MASTER CYLINDER PUSH ROD CLEVIS

- (a) Remove the clip, push rod clevis pin and wave washer, and disconnect the push rod clevis from the brake pedal.

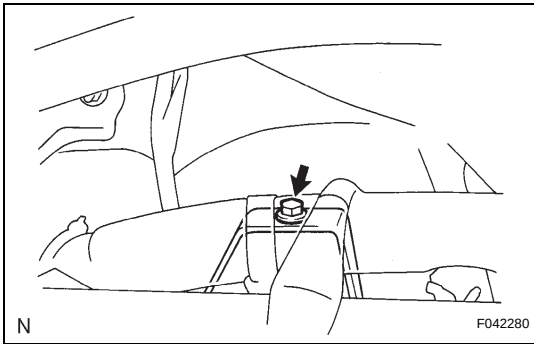

3. REMOVE BRAKE PEDAL SUPPORT SUB-ASSEMBLY

- (a) Remove the bolt from the brake pedal support.
- (b) Disconnect the stop light switch connector.

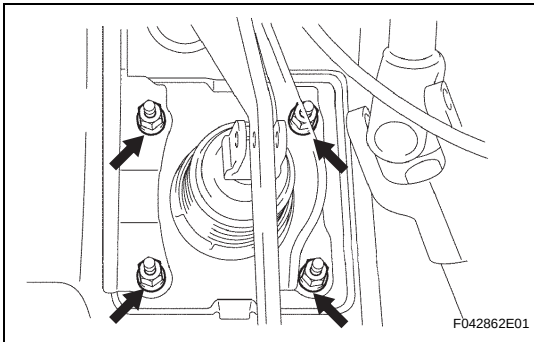

- (c) Remove the 4 nuts and brake pedal support assembly.

4. REMOVE BRAKE PEDAL SUB-ASSEMBLY

- (a) Remove the bolt and nut from the brake pedal support sub-assembly.
- (b) Remove the brake pedal sub-assembly and 2 bushes.

5. REMOVE STOP LIGHT SWITCH ASSEMBLY

- (a) Loosen the stop light switch lock nut.
- (b) Remove the stop light switch assembly from the brake pedal support sub-assembly.

6. REMOVE BRAKE PEDAL PAD

- (a) Remove the brake pedal pad from the brake pedal sub-assembly.