


FRONT BRAKE

COMPONENTS

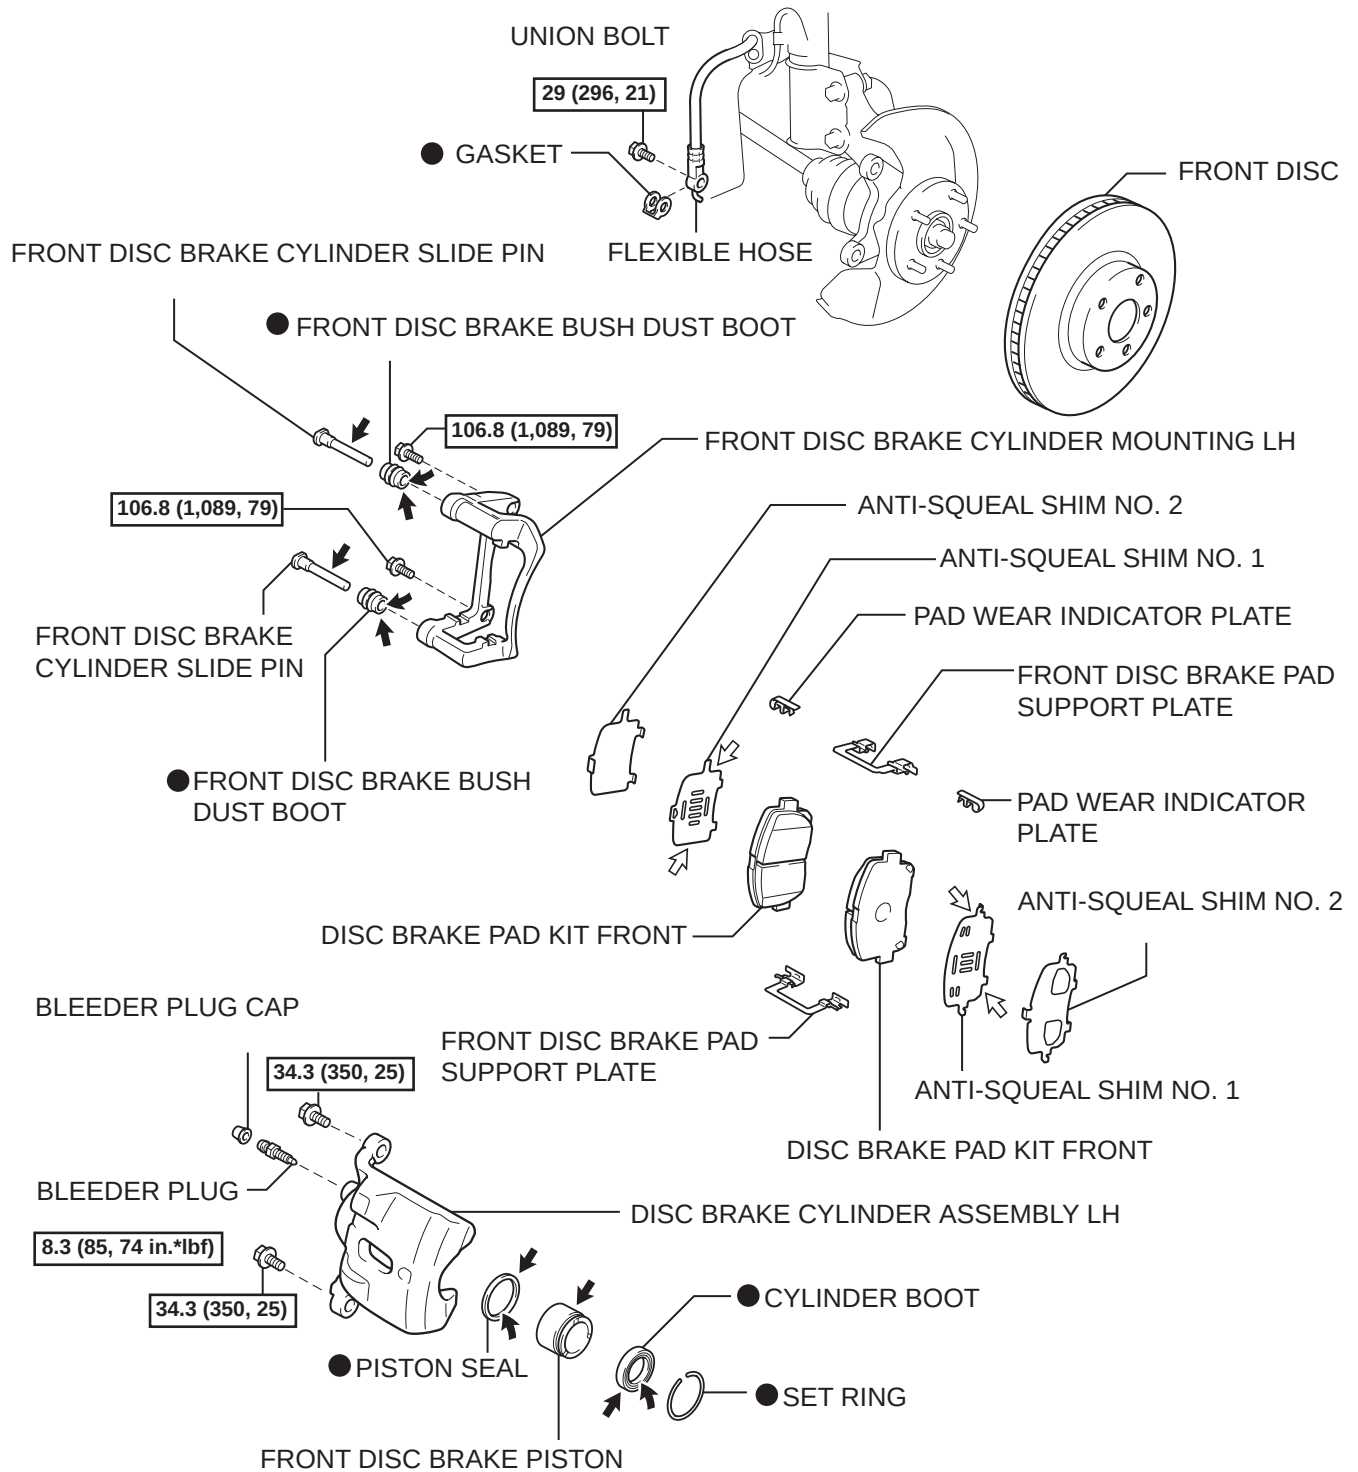

N*m (kgf*cm, ft.*lbf) : Specified torque

← Lithium soap base glycol grease

↔ Disc brake grease

● Non-reusable part

N

C119609E02

REMOVAL

HINT:

Overhaul the RH side by the same procedure as the LH side.

1. REMOVE FRONT WHEEL**2. DRAIN BRAKE FLUID****NOTICE:**



Wash the brake fluid off immediately if it comes into contact with any painted surface.

3. REMOVE FRONT DISC BRAKE CYLINDER SUB-ASSEMBLY

- (a) Remove the union bolt and gasket from the disc brake cylinder, then disconnect the flexible hose.

HINT:

Gasket has 2 types: 2-piece type and 1-piece type.

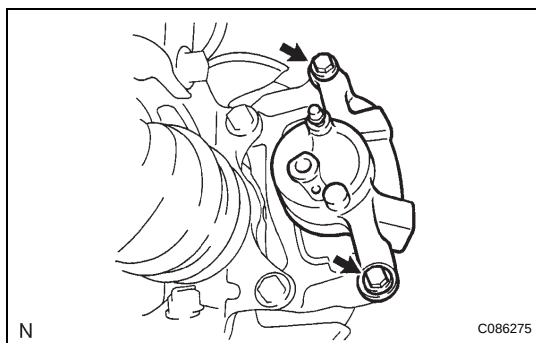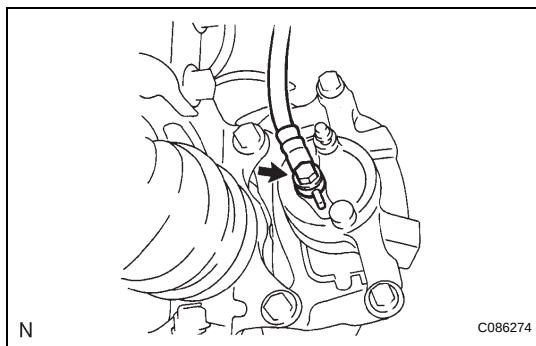

- (b) Hold the cylinder slide pin and remove the 2 bolts.