

## DISASSEMBLY


1. **REMOVE DISC BRAKE PAD KIT FRONT (PAD ONLY)**
  - (a) Remove the 2 brake pads with anti-squeal shims.
  - (b) Remove the anti-squeal shim No. 1 and anti-squeal shim No. 2 from each pad.
  - (c) Remove the pad wear indicator plates from each pad.

2. **REMOVE FRONT DISC BRAKE PAD SUPPORT PLATE**

- (a) Remove the 2 front disc brake pad support plates from the cylinder mounting.

3. **REMOVE FRONT DISC BRAKE CYLINDER SLIDE PIN**

- (a) Remove the 2 cylinder slide pins from the disc brake cylinder mounting.

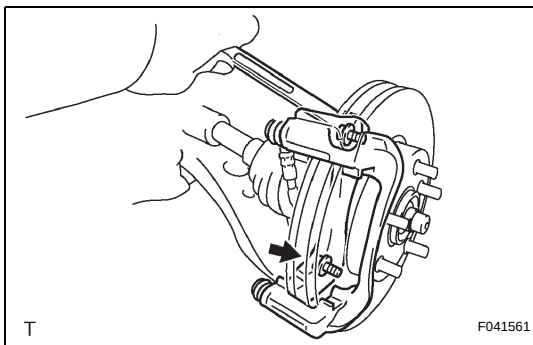


4. **REMOVE FRONT DISC BRAKE CYLINDER MOUNTING LH**

- (a) Remove the 2 bolts and disc brake cylinder mounting.

5. **REMOVE FRONT DISC BRAKE BUSH DUST BOOT**

- (a) Place front disc brake cylinder mounting in vise.

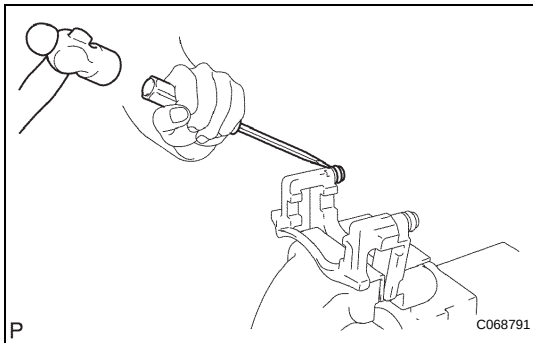


- (b) Using a screwdriver and hammer, remove the 2 bush dust boots from the disc brake cylinder mounting.


6. **REMOVE CYLINDER BOOT**

- (a) Using a screwdriver, remove the set ring and cylinder boot.

7. **REMOVE FRONT DISC BRAKE PISTON**

- (a) Place a piece of cloth or similar, between the piston and the disc brake cylinder.

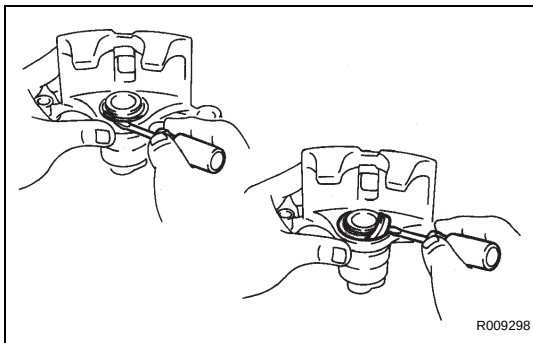

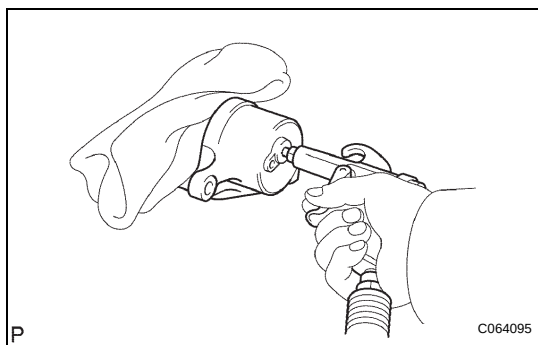

- (b) Use compressed air to remove the piston from the disc brake cylinder.

**CAUTION:**

**Do not place your fingers in front of the piston when using compressed air.**

**NOTICE:**

**Do not spatter the brake fluid.**

**8. REMOVE PISTON SEAL**

- (a) Using a screwdriver, remove the piston seal from the disc brake cylinder.

**9. REMOVE FRONT DISC BRAKE BLEEDER PLUG**

- (a) Remove the bleeder plug cap and bleeder plug from the disc brake cylinder.

**10. REMOVE FRONT DISC**

- (a) Make matchmarks on the front disc and the axle hub.  
(b) Remove the front disc.