


REAR DISC BRAKE

COMPONENTS

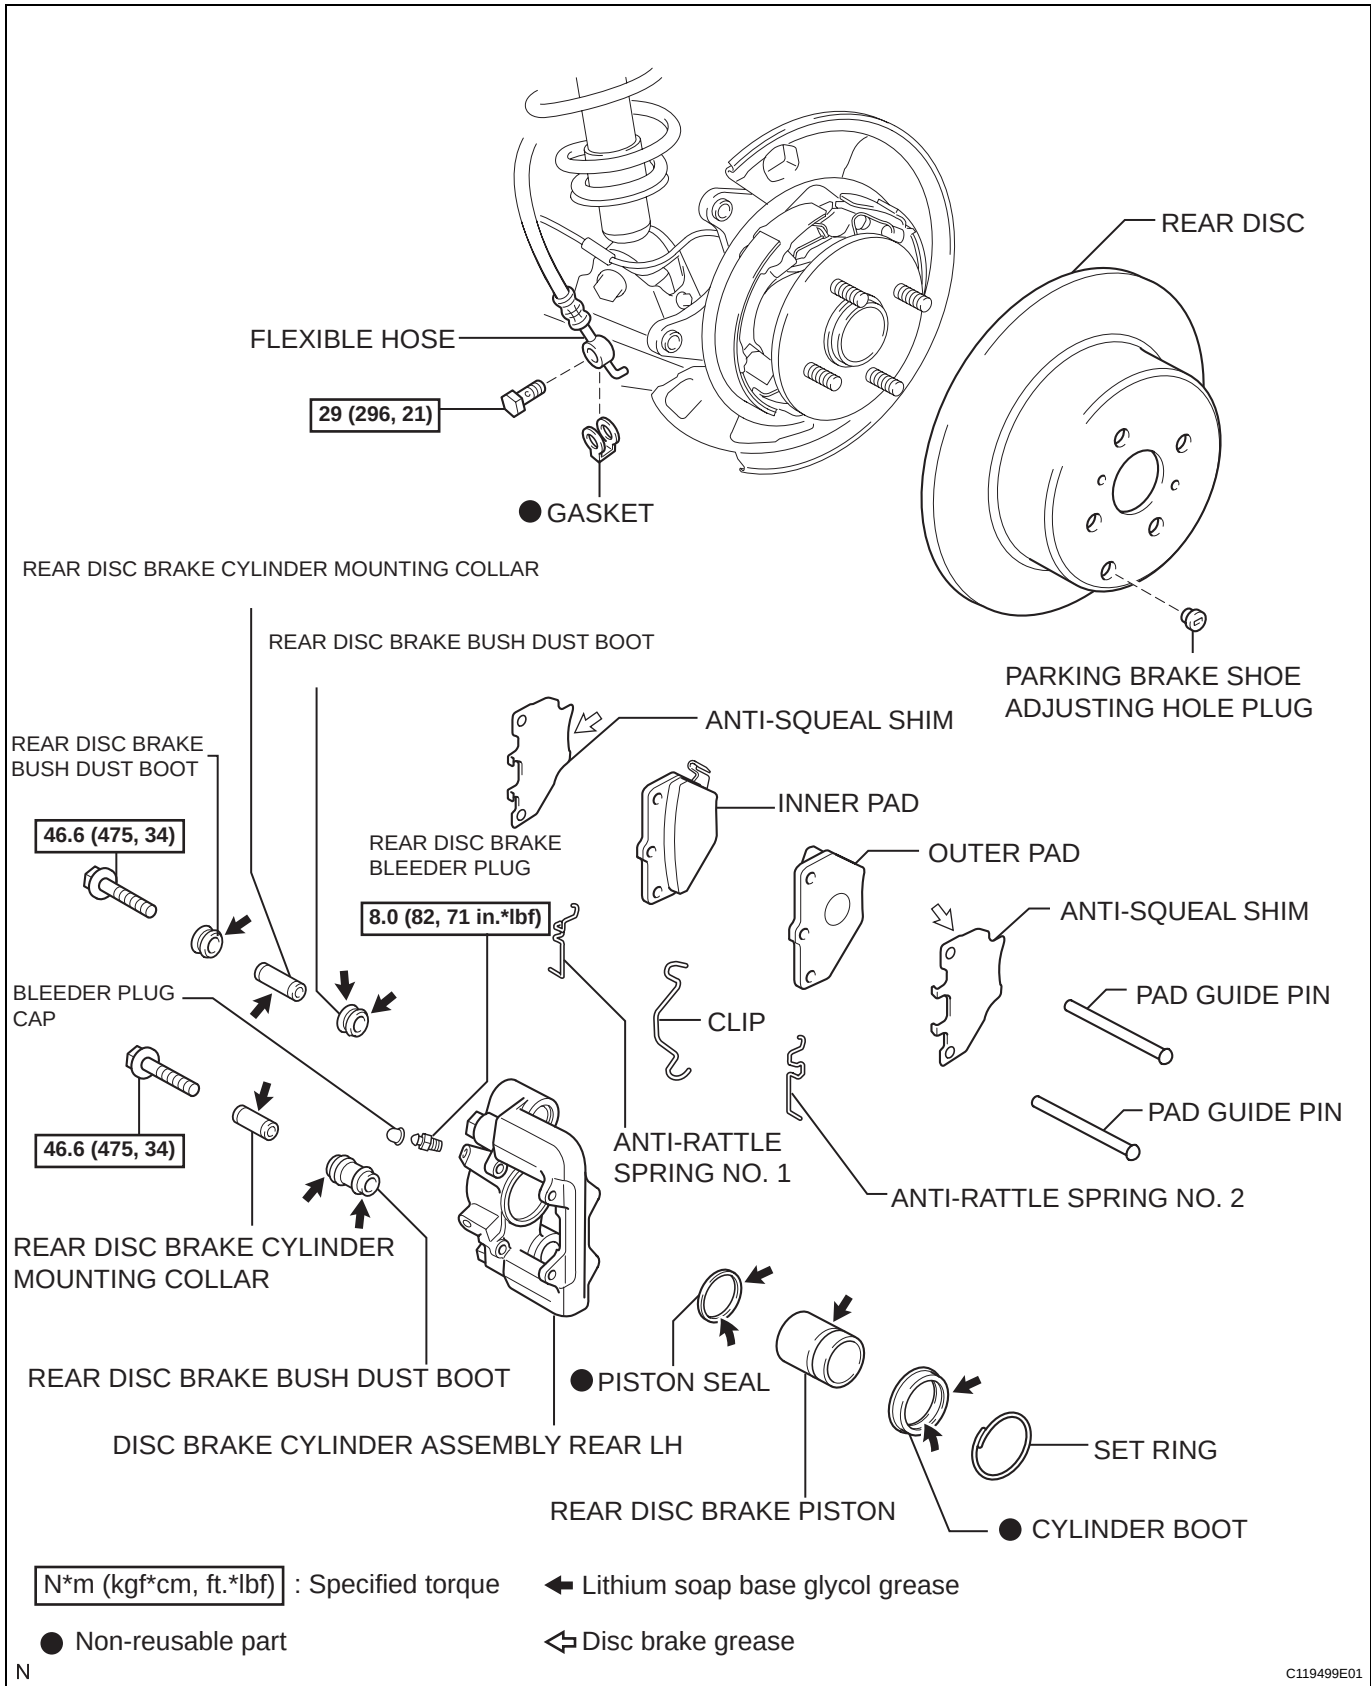

REMOVAL

HINT:

Overhaul the RH side by the same procedure as the LH side.

1. REMOVE REAR WHEEL

2. DRAIN BRAKE FLUID

NOTICE:

Wash the brake fluid off immediately if it comes into contact with any painted surface.

3. REMOVE DISC BRAKE PAD KIT REAR (PAD ONLY)

- (a) Remove the clip, anti-rattle spring No. 1 and anti-rattle spring No. 2.
- (b) Remove the 2 pad guide pins and disc brake pads with anti-squeal shims.
- (c) Remove the anti-squeal shims from each pad.

4. REMOVE DISC BRAKE CYLINDER ASSEMBLY REAR LH

- (a) Remove the union bolt and gasket from the disc brake cylinder, then disconnect the flexible hose from the disc brake cylinder.

HINT:

Gasket has 2 types: 2-piece type and 1-piece type.

- (b) Remove the 2 bolts and disc brake cylinder.

