


INSTALLATION

1. INSTALL PARKING BRAKE CABLE ASSEMBLY NO. 1


- (a) Connect the parking brake cable assembly No. 1 to the equalizer and install the parking brake cable assembly No. 1.

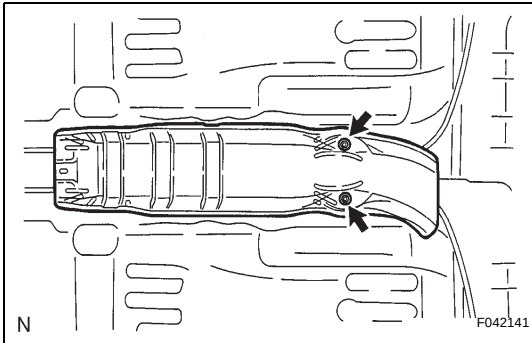

2. INSTALL FRONT FLOOR HEAT INSULATOR NO. 2

- (a) Install the front floor heat insulator No. 2 with the 2 nuts.

Torque: 5.5 N*m (55 kgf*cm, 48 in.*lbf)

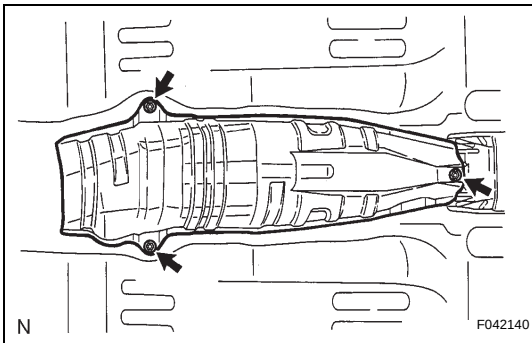


3. INSTALL FRONT FLOOR HEAT INSULATOR NO. 1

- (a) Install the front floor heat insulator No. 1 with the 3 nuts.


Torque: 5.5 N*m (55 kgf*cm, 48 in.*lbf)

4. INSTALL EXHAUST PIPE ASSEMBLY FRONT (See page EX-3)

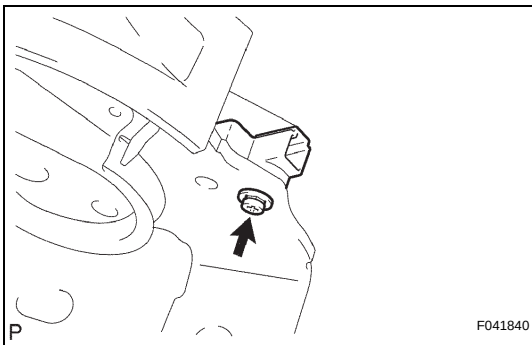


5. INSTALL PARKING BRAKE SWITCH ASSEMBLY

- (a) Install the parking brake switch to the parking brake lever sub-assembly with the screw.

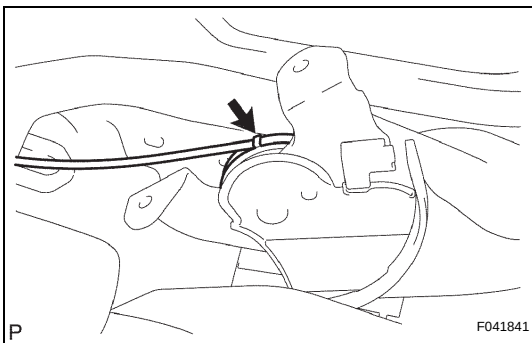


6. INSTALL PARKING BRAKE LEVER SUB-ASSEMBLY

- (a) Install the parking brake cable assembly No. 1 to the parking brake lever, temporarily tighten the adjusting nut and lock nut.
- (b) Using a screwdriver, fix the parking brake cable No. 1 to the pick.

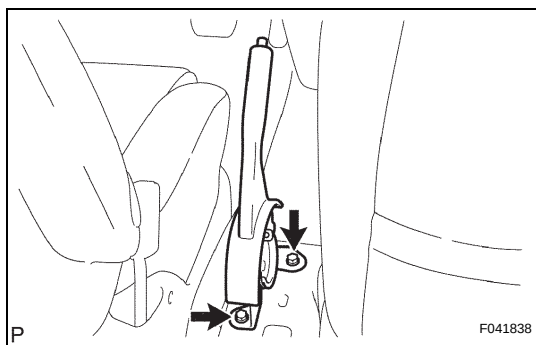

- (c) Install the parking brake lever with the 2 bolts.
Torque: 12.5 N*m (130 kgf*cm, 9 ft.*lbf)

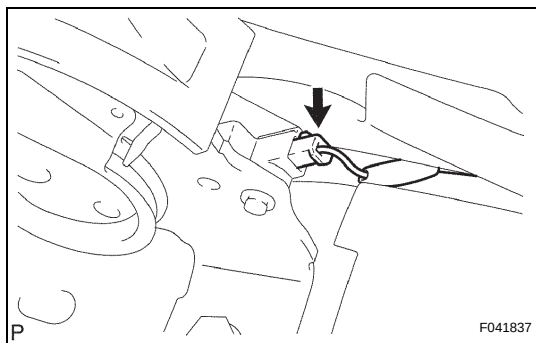

- (d) Connect the parking brake switch connector to the parking brake switch.

7. INSPECT PARKING BRAKE LEVER TRAVEL (See page [PB-1](#))

8. ADJUST PARKING BRAKE LEVER TRAVEL (See page [PB-1](#))

9. INSTALL CONSOLE BOX ASSEMBLY REAR

- (a) Connect the connector to the console box assembly rear.
- (b) Install the console box assembly with the 4 bolts.
- (c) Install the console box insert and console box damper RR.

