
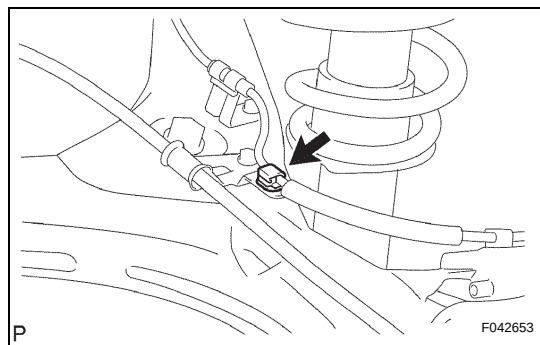


INSTALLATION

1. INSTALL PARKING BRAKE CABLE ASSEMBLY NO. 3

- Connect the parking brake cable assembly No. 3 to the equalizer.
- Install the parking brake cable assembly No. 3 with the 4 bolts and cable retainer.

Torque: 5.4 N*m (55 kgf*cm, 48 in.*lbf)

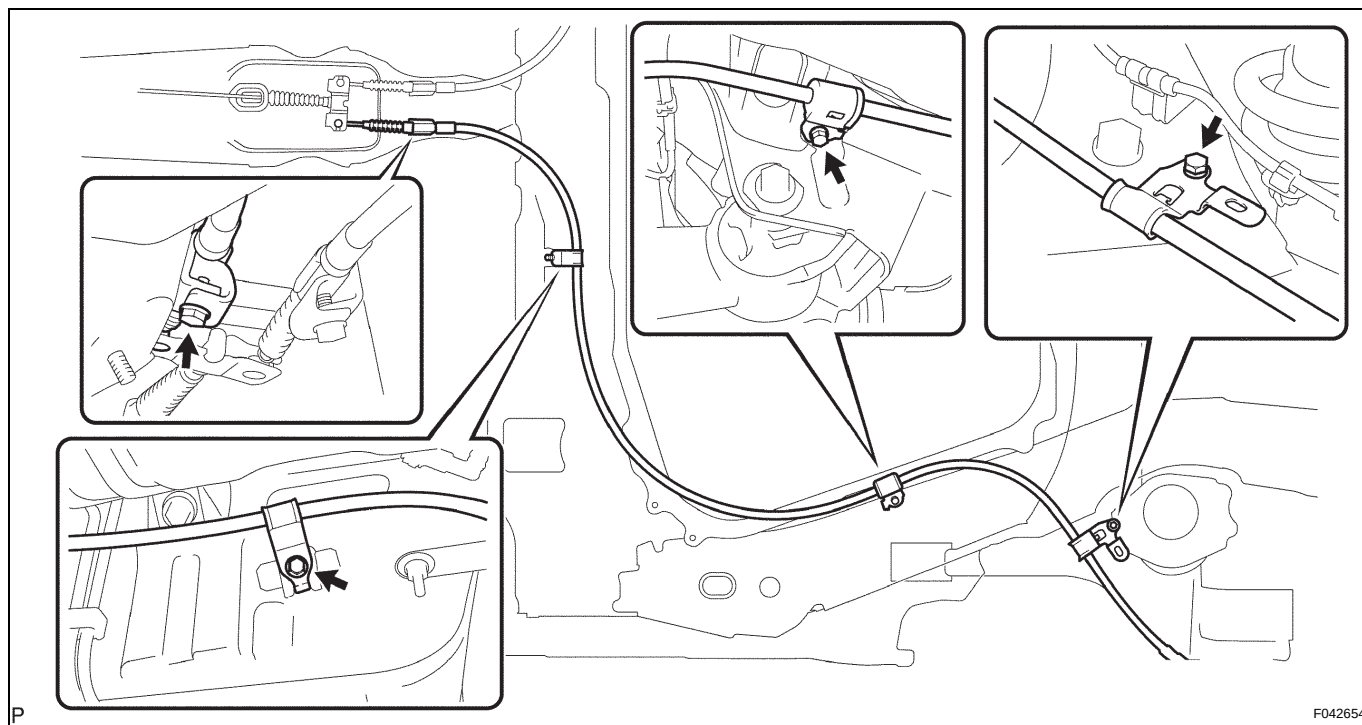

- Connect the skid control sensor wire harness clip to the clamp.

2. INSTALL FUEL TANK PROTECTOR NO. 1

- Install the fuel tank protector No. 1 with the 5 nuts.
- Torque: 5.5 N*m (55 kgf*cm, 48 in.*lbf)**

3. INSTALL FRONT FLOOR HEAT INSULATOR NO. 2 (See page [PB-6](#))

4. INSTALL FRONT FLOOR HEAT INSULATOR NO. 1 (See page [PB-7](#))


5. INSTALL EXHAUST PIPE ASSEMBLY FRONT (See page [EX-3](#))

6. CONNECT PARKING BRAKE CABLE ASSEMBLY NO. 3

- Connect the parking brake cable assembly No. 3 to the backing plate with the bolt.
- Torque: 7.8 N*m (80 kgf*cm, 69 in.*lbf)**

7. APPLICATION HIGH TEMPERATURE GREASE (for Drum Type) (See page [BR-44](#))

8. INSTALL REAR BRAKE SHOE (for Drum Type) (See page [BR-44](#))

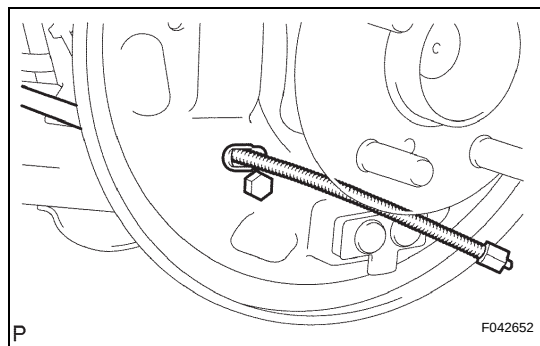

9. INSTALL REAR BRAKE AUTOMATIC ADJUST LEVER LH (for Drum Type)
10. INSTALL PARKING BRAKE SHOE STRUT SET LH (for Drum Type) (See page [BR-45](#))
11. INSTALL FRONT BRAKE SHOE (for Drum Type) (See page [BR-45](#))
12. CHECK REAR DRUM BRAKE INSTALLATION (See page [BR-46](#))
13. INSTALL REAR BRAKE DRUM SUB-ASSEMBLY (for Drum Type)
14. ADJUST REAR DRUM BRAKE SHOE CLEARANCE (for Drum Type) (See page [BR-46](#))
15. APPLICATION HIGH TEMPERATURE GREASE (for Disc Type) (See page [PB-16](#))
16. INSTALL PARKING BRAKE SHOE LEVER LH (for Disc Type) (See page [PB-17](#))
17. INSTALL PARKING BRAKE SHOE ASSEMBLY LH NO. 2 (for Disc Type) (See page [PB-17](#))
18. INSTALL PARKING BRAKE SHOE ASSEMBLY LH NO. 1 (for Disc Type) (See page [PB-17](#))
19. INSTALL PARKING BRAKE SHOE ADJUSTING SCREW SET (for Disc Type) (See page [PB-17](#))
20. INSTALL PARKING BRAKE SHOE STRUT LH (for Disc Type) (See page [PB-18](#))
21. CHECK PARKING BRAKE INSTALLATION (for Disc Type) (See page [PB-18](#))
22. INSTALL REAR DISC (for Disc Type)
23. ADJUST PARKING BRAKE SHOE CLEARANCE (for Disc Type) (See page [PB-19](#))
24. CONNECT REAR DISC BRAKE CALIPER ASSEMBLY LH (for Disc Type) (See page [BR-38](#))
25. INSTALL REAR WHEEL
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)
26. INSPECT PARKING BRAKE LEVER TRAVEL (See page [PB-1](#))
27. ADJUST PARKING BRAKE LEVER TRAVEL (See page [PB-1](#))
28. CHECK EXHAUST LEAKAGE