


# PARKING BRAKE CABLE

## COMPONENTS

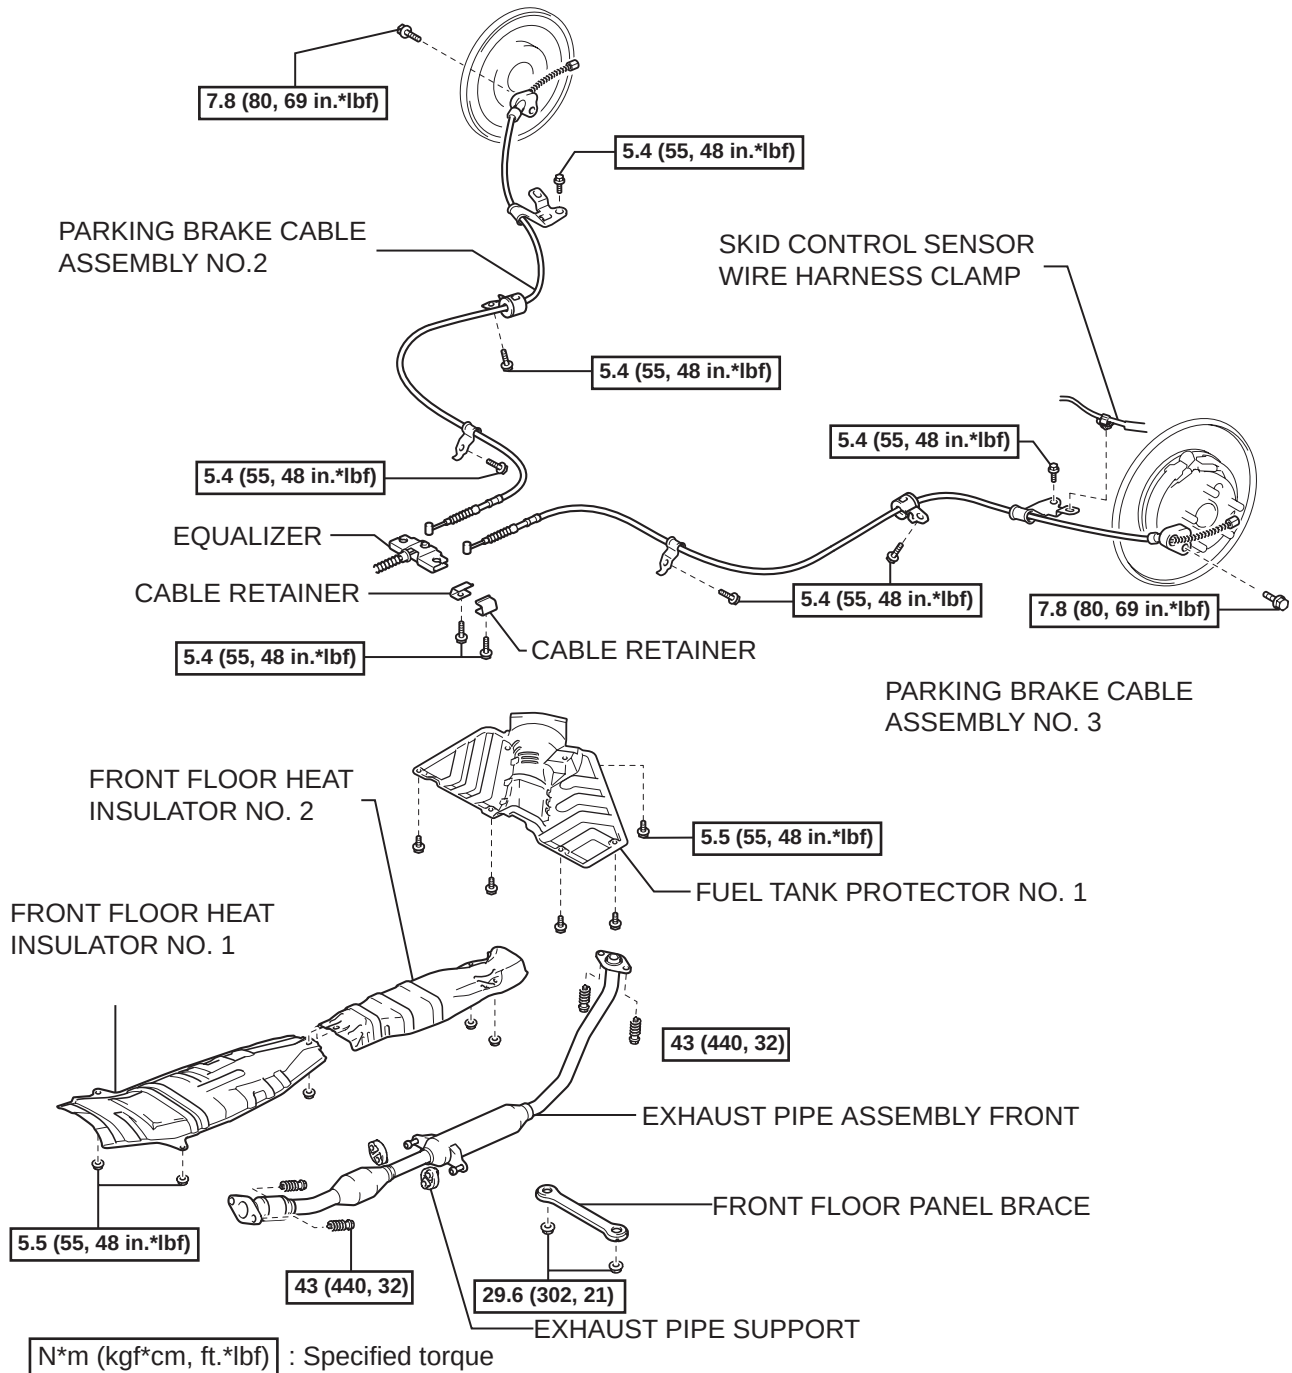



## REMOVAL

### HINT:

For parking brake cable assembly No. 2, perform the same procedure to the parking brake cable assembly No. 3.

1. REMOVE REAR WHEEL
2. REMOVE REAR BRAKE DRUM SUB-ASSEMBLY (for Drum Type) (See page [BR-41](#))
3. REMOVE FRONT BRAKE SHOE (for Drum Type) (See page [BR-41](#))
4. REMOVE PARKING BRAKE SHOE STRUT SET LH
5. REMOVE REAR BRAKE AUTOMATIC ADJUST LEVER LH (for Drum Type)
6. REMOVE REAR BRAKE SHOE (for Drum Type) (See page [BR-42](#))
7. SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH (for Disc Type) (See page [BR-35](#))
8. REMOVE REAR DISC (for Disc Type)
9. REMOVE PARKING BRAKE SHOE STRUT LH (for Disc Type) (See page [PB-15](#))
10. REMOVE PARKING BRAKE SHOE ADJUSTING SCREW SET (for Disc Type) (See page [PB-15](#))
11. REMOVE PARKING BRAKE SHOE ASSEMBLY LH NO. 1 (for Disc Type) (See page [PB-15](#))
12. REMOVE PARKING BRAKE SHOE ASSEMBLY LH NO. 2 (for Disc Type) (See page [PB-15](#))
13. REMOVE PARKING BRAKE SHOE LEVER LH (for Disc Type) (See page [PB-16](#))
14. SEPARATE PARKING BRAKE CABLE ASSEMBLY NO. 3
  - (a) Remove the bolt, and disconnect the parking brake cable assembly No. 3 from the backing plate.
15. REMOVE EXHAUST PIPE ASSEMBLY FRONT (See page [EX-2](#))
16. REMOVE FRONT FLOOR HEAT INSULATOR NO. 1 (See page [PB-6](#))
17. REMOVE FRONT FLOOR HEAT INSULATOR NO. 2 (See page [PB-6](#))
18. REMOVE FUEL TANK PROTECTOR NO. 1
  - (a) Remove the 5 nuts and fuel tank protector No. 1.

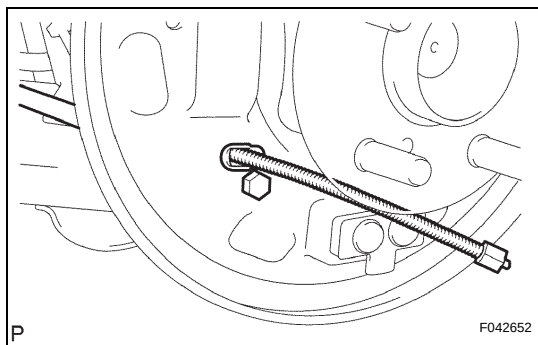

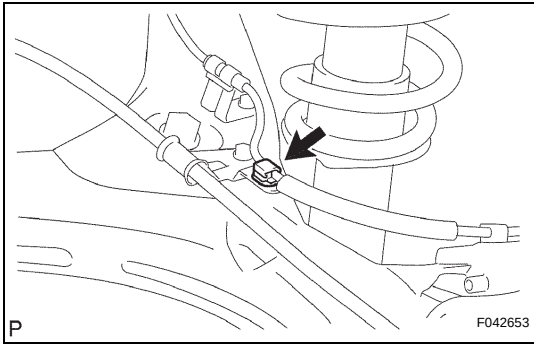**19. REMOVE PARKING BRAKE CABLE ASSEMBLY NO. 3**

- (a) Using a clip remover, disconnect the skid control sensor wire harness clip from the clamp.
- (b) Remove the 4 bolts and cable retainer from the body.
- (c) Disconnect the parking brake cable assembly No. 3 from the equalizer, and remove the parking brake cable assembly No. 3.