


PARKING BRAKE ASSEMBLY

COMPONENTS

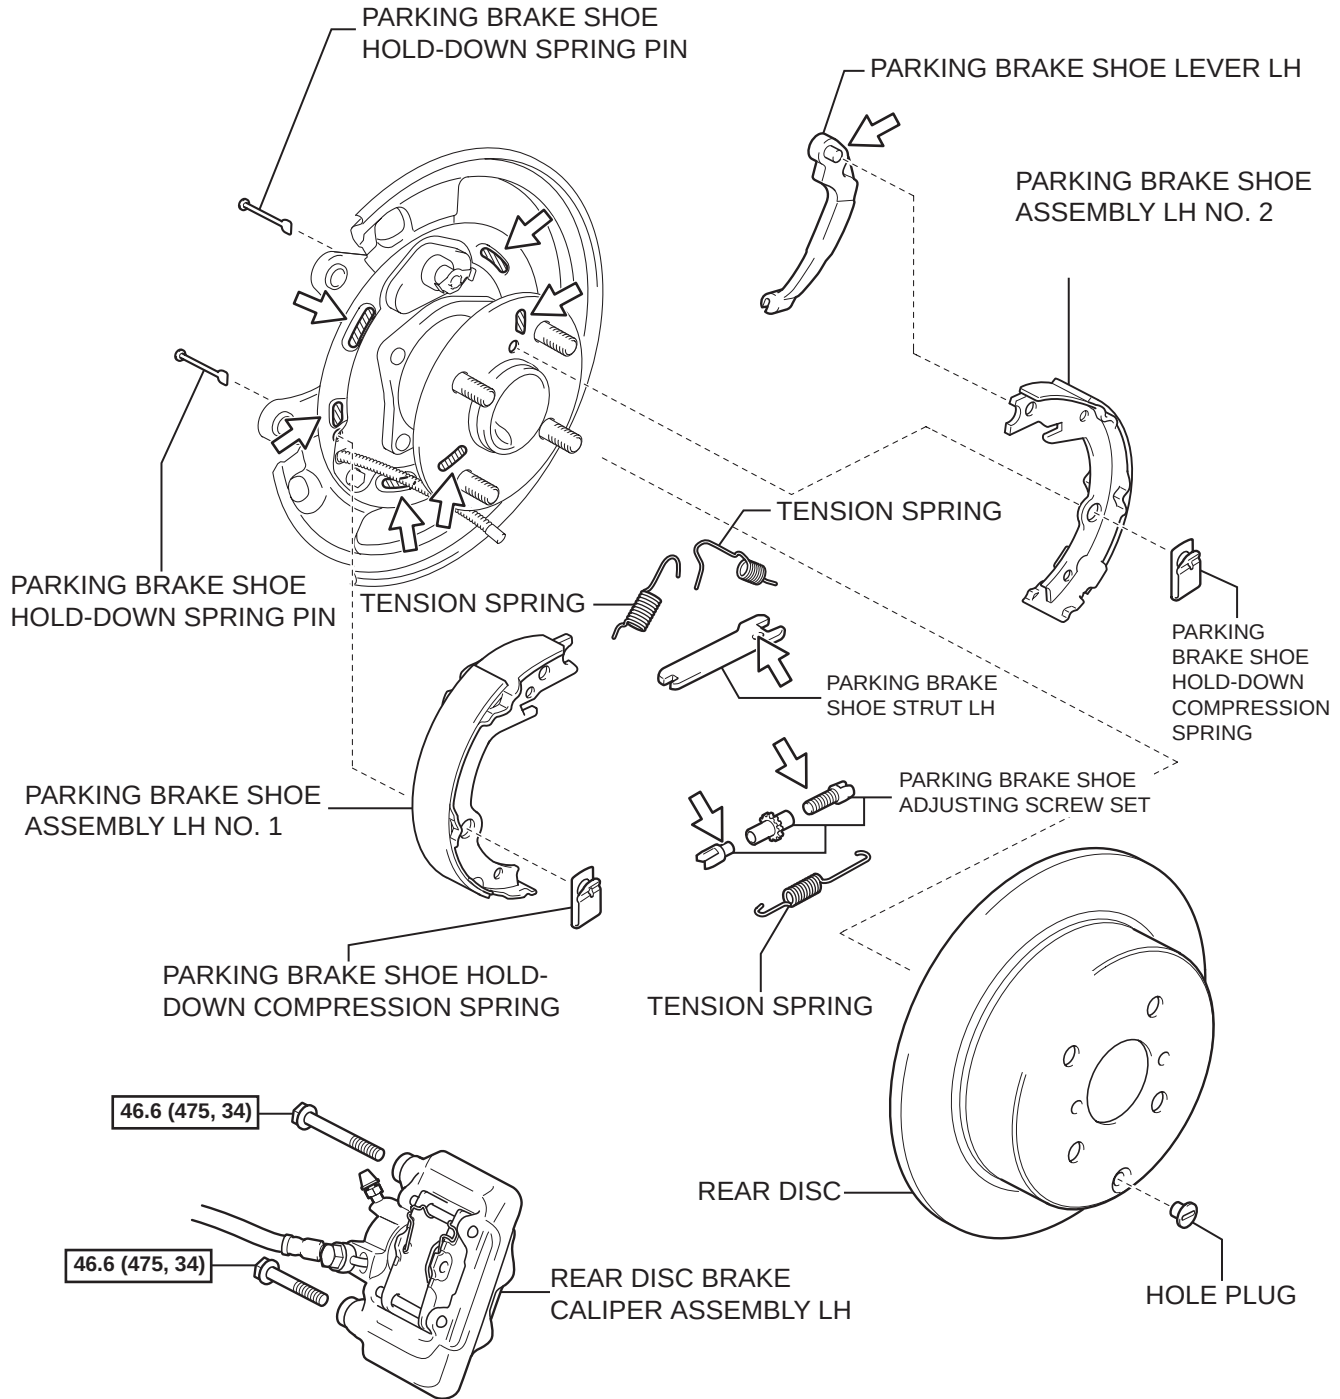

N*m (kgf*cm, ft.*lbf) : Specified torque

↩ High temperature grease


DISASSEMBLY

HINT:

Overhaul the RH side by the same procedures as LH side.


1. REMOVE REAR WHEEL
2. SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH
3. REMOVE REAR DISC
4. REMOVE PARKING BRAKE SHOE STRUT LH

- (a) Using needle-nose pliers, remove the 2 upper side tension springs.
- (b) Remove the parking brake shoe strut LH.

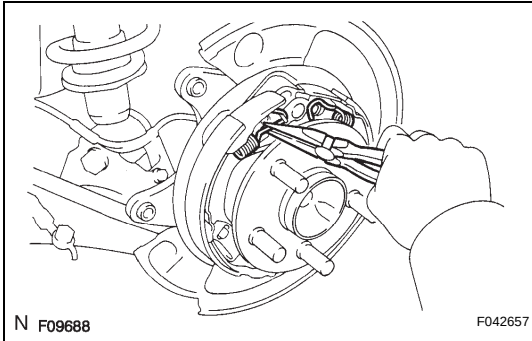

5. REMOVE PARKING BRAKE SHOE ADJUSTING SCREW SET


- (a) Using needle-nose pliers, remove the anchor side tension spring.
- (b) Remove the shoe adjusting screw set.

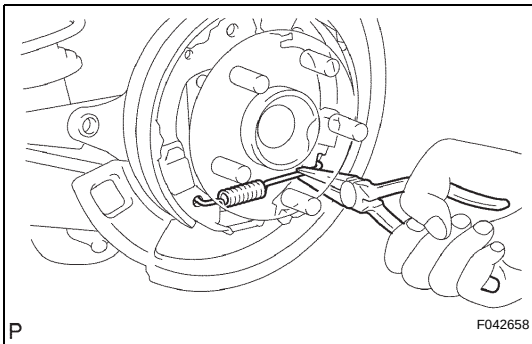

6. REMOVE PARKING BRAKE SHOE ASSEMBLY LH NO. 1

- (a) Using SST, remove the parking brake shoe hold-down compression spring, parking brake shoe hold-down spring pin and parking brake shoe assembly LH No. 1.

SST 09718-00010

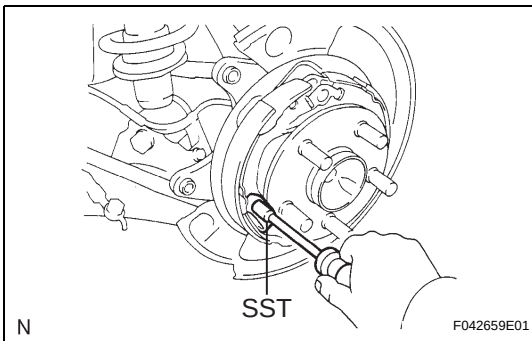

7. REMOVE PARKING BRAKE SHOE ASSEMBLY LH NO. 2

- (a) Using SST, remove the parking brake shoe hold-down compression spring and parking brake shoe hold-down spring pin.

SST 09718-00010

- (b) Disconnect the parking brake shoe assembly LH No. 2 from the parking brake shoe lever LH, and remove the parking brake shoe LH No. 2.

