

INSPECTION


1. INSPECT STEERING LOCK OPERATION

- (a) Check that the steering lock mechanism is activated when removing the key.
- (b) Check that the steering lock mechanism is deactivated when inserting the key and turning it to ACC position.

REASSEMBLY

1. INSTALL IGNITION OR STARTER SWITCH ASSEMBLY

- Install the ignition or starter switch assembly to the steering column bracket assembly with the 2 screws.

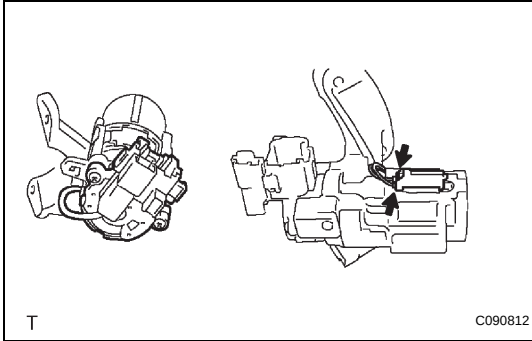

2. INSTALL UN-LOCK WARNING SWITCH ASSEMBLY


- Install the un-lock warning switch assembly.
- Connect the un-lock warning switch assembly connector to the ignition or starter switch assembly.

3. INSTALL IGNITION SWITCH LOCK CYLINDER ASSEMBLY

- Make sure that the ignition switch lock cylinder assembly is at the ACC position.
- Install the ignition switch lock cylinder assembly.

4. INSTALL STEERING COLUMN UPPER BRACKET ASSEMBLY


- Temporarily install the steering column upper with switch bracket assembly and steering column upper clamp with 2 new tapered-head bolts.
- Tighten the 2 tapered-head bolts until the bolt heads break off.

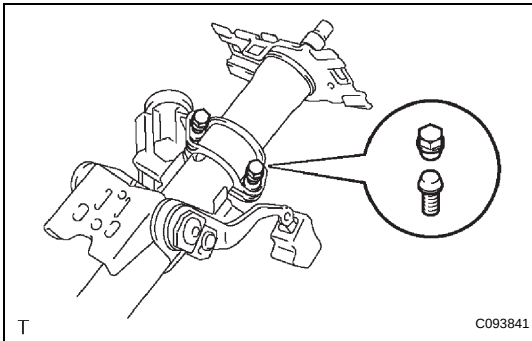


INSTALLATION

1. INSTALL STEERING COLUMN ASSEMBLY

- Install the steering column assembly with the 3 bolts.
Torque: 21 N*m (210 kgf*cm, 15 ft.*lbf)
- Connect the connectors and wire harness clamps.

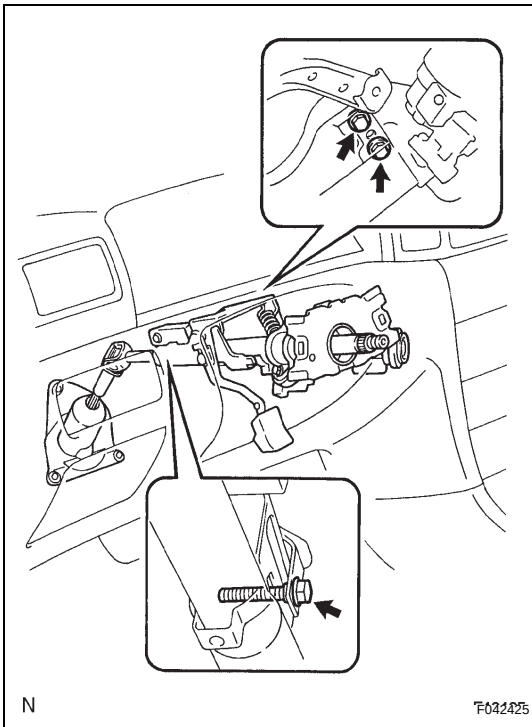

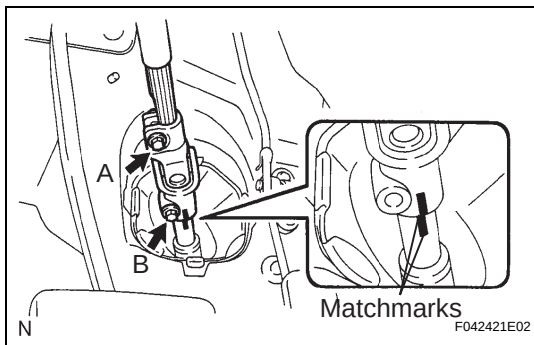

2. CONNECT STEERING INTERMEDIATE SHAFT

- Align the matchmarks on the sliding yoke and steering intermediate shaft.
- Install the bolt B and torque the bolt A.
Torque: 35 N*m (360 kgf*cm, 26 ft.*lbf)

3. INSTALL COLUMN HOLE COVER SILENCER SHEET

4. INSTALL WINDSHIELD WIPER SWITCH ASSEMBLY

- Install the windshield wiper switch assembly and connect the connector.

5. INSTALL HEADLIGHT DIMMER SWITCH ASSEMBLY

- Install the headlight dimmer switch assembly and connect the connector.

6. PLACE FRONT WHEELS FACING STRAIGHT AHEAD

7. INSTALL SPIRAL CABLE



8. CONNECT FLOOR SHIFT PARKING LOCK CABLE ASSEMBLY (for Automatic Transaxle)

- With the key in ACC, push into the floor shift parking lock cable and install it.

9. CHECK KEY INTERLOCK OPERATION

10. INSTALL STEERING COLUMN COVER

- Install the steering column cover with the 3 screws.

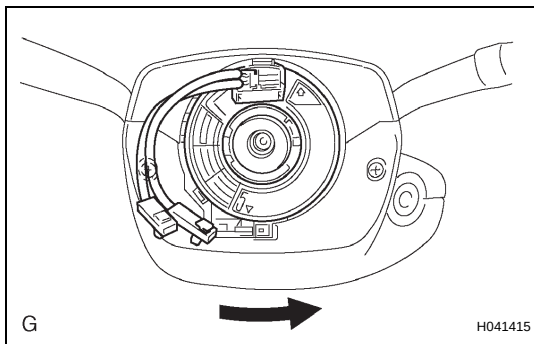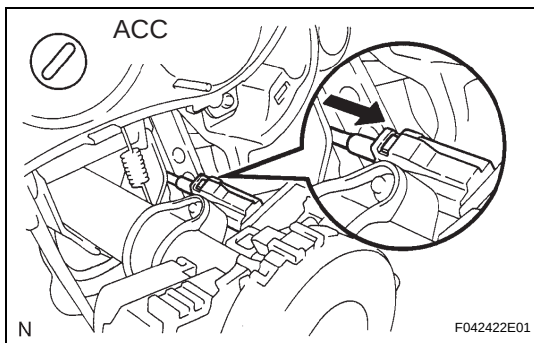

11. CENTER SPIRAL CABLE

- Check that the ignition switch is at OFF.
- Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- Turn the cable counterclockwise by hand until it becomes harder to turn.

- Then rotate the cable clockwise about 2.5 turns to align the marks.


HINT:

The cable will rotate about 2.5 turns to either right or left of the center.

12. INSTALL STEERING WHEEL ASSEMBLY

- Align the matchmark with the one on the steering wheel assembly and steering main shaft assembly.
- Install the steering wheel assembly with the set nut.
Torque: 50 N*m (510 kgf*cm, 37 ft.*lbf)
- Connect the connector.

13. INSPECT STEERING PAD (See page [RS-274](#))

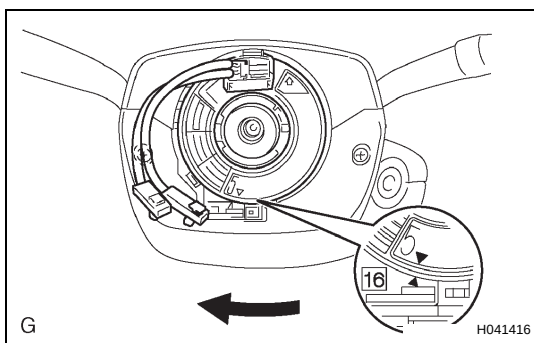

14. INSTALL STEERING PAD**NOTICE:**

- Never use the airbag parts removed from another vehicle. When replacing parts, replace with new ones.
 - Make sure that the steering pad is installed to the specified torque.
 - If the steering pad has been dropped, or there are cracks, dents or other defects in the case or connector, replace the steering pad with a new one.
 - When installing the steering pad, take care so that the wirings do not interfere with other parts and that they are not pinched between other parts.
- (a) Connect the 2 airbag connectors.
 - (b) Install the steering pad after confirming that the circumference groove of the torx screws is caught on the screw case.
 - (c) Using a torx socket wrench, torque the 2 torx screws.

Torque: 8.8 N*m (90 kgf*cm, 78 in.*lbf)

15. STEERING WHEEL CENTER POINT**16. INSPECT SRS WARNING LIGHT****HINT:**

See page [RS-26](#).

