


REASSEMBLY

1. INSTALL AIR CONDITIONING CONTROL BULB

- (a) Install the 2 air conditioning control bulbs to the air conditioning control assembly.

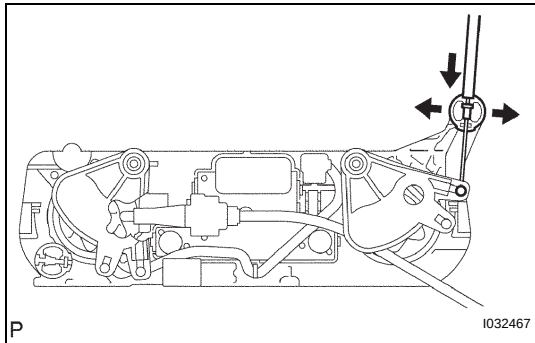

INSTALLATION

1. INSTALL AIR CONDITIONING CONTROL ASSEMBLY



- (a) Install the inner cable end of the airmix damper control cable to the heater control lever.
 (b) Install the outer cable of the airmix damper control cable to the cable clamp.

NOTICE:

- Be careful not to bend the cable wire.
- If the cable wire bends, the air conditioning control assembly operability becomes worse.

HINT:

- Operating the heater control knob and check that it properly stops at both ends of MAX. COOL and MAX. HOT and no recoil is identified.
 - Check that the outer cable should not be disengaged (moved) from the air conditioning control assembly when the cable is pulled.
- (c) Connect the connector, and fit the 2 fitting claws of air conditioning control assembly in the instrument panel sub-assembly lower hole.

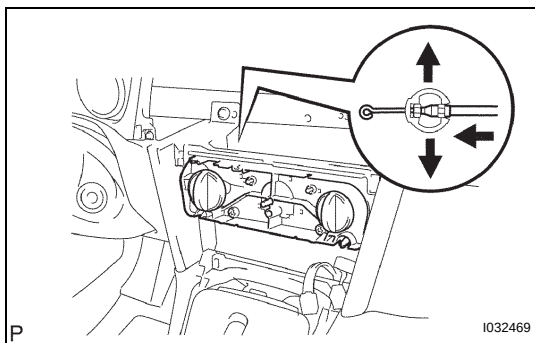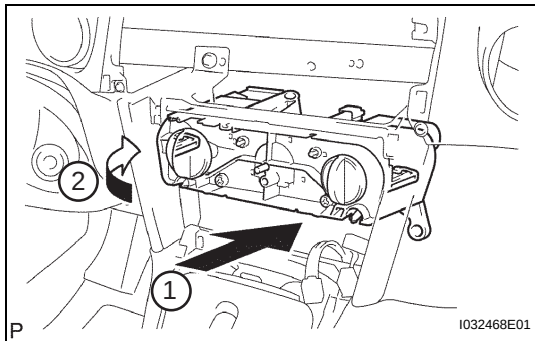

- (d) Install the inner cable end of the defroster damper control cable to the heater control lever.

- (e) Install the outer cable of the defroster damper control cable to the cable clamp.

NOTICE:

- Be careful not to bend the cable wire.
- If the cable wire bends, the air conditioning control operability becomes worse.

HINT:

- Operating the heater control knob and check that it properly stops at both ends of FACE and DEF and no recoil is identified.
- Check that the outer cable should not be disengaged (moved) from the air conditioning control assembly when the cable is pulled.

2. INSTALL COMBINATION SWITCH ASSEMBLY

3. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY CENTER (See page [IP-16](#))