


PARTS LOCATION

RS

COMBINATION METER ASSEMBLY:

CLOCK ASSEMBLY:

SRS WARNING LIGHT

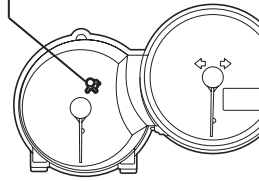

PASSENGER AIRBAG ON/OFF INDICATOR

FRONT AIRBAG SENSOR LH

FRONT PASSENGER AIRBAG ASSEMBLY

FRONT AIRBAG SENSOR RH

CENTER AIRBAG SENSOR ASSEMBLY

STEERING PAD

SPIRAL CABLE

DLC3

CURTAIN SHIELD AIRBAG ASSEMBLY LH

CURTAIN SHIELD AIRBAG ASSEMBLY RH

FRONT SEAT SIDE AIRBAG ASSEMBLY RH

FRONT PASSENGER SIDE SIDE AIRBAG SENSOR

FRONT SEAT SIDE AIRBAG ASSEMBLY LH

SEAT POSITION SENSOR

FRONT PASSENGER SIDE REAR AIRBAG SENSOR

FRONT SEAT OUTER BELT ASSEMBLY LH


DRIVER SIDE SIDE AIRBAG SENSOR

FRONT SEAT OUTER BELT ASSEMBLY RH

FRONT SEAT INNER BELT ASSEMBLY LH

DRIVER SIDE - REAR AIRBAG SENSOR

SYSTEM DIAGRAM

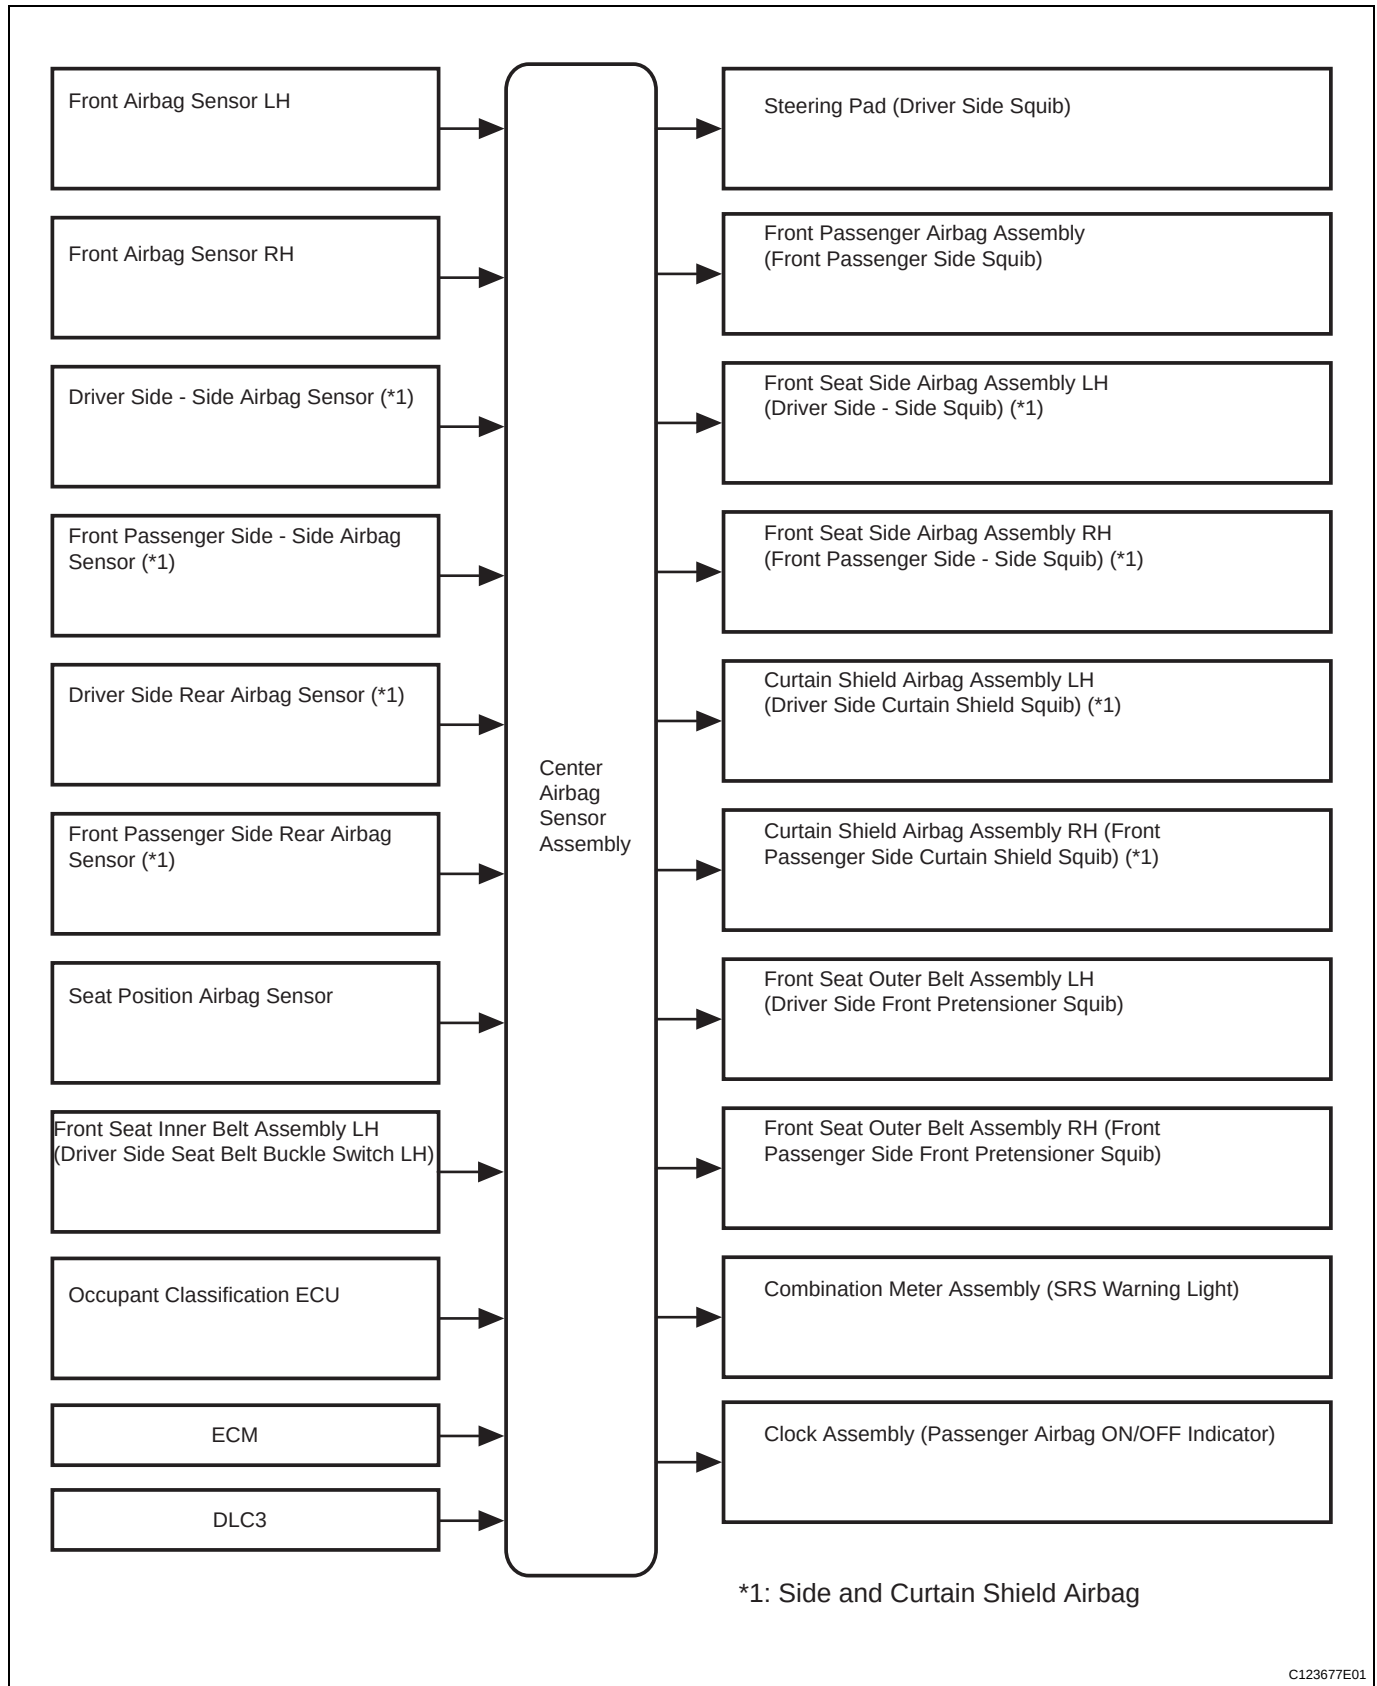

RS

cardiagn.com