

PROBLEM SYMPTOMS TABLE

HINT:
Proceed to the troubleshooting for each circuit in the table below.


AIRBAG SYSTEM:

RS

Symptom	Suspected area	See page
The SRS warning light goes off after the primary check, but comes on.	SRS Warning Light Remains ON	RS-172
With the ignition switch is turned to the ON position, the SRS warning light sometimes comes on after approximately 6 seconds.	SRS Warning Light Remains ON	RS-172
The SRS warning light always comes on even when DTC is not output.	SRS Warning Light Remains ON	RS-172
With the ignition switch is turned to the ON position, the SRS warning light does not come on.	SRS Warning Light does not Come On	RS-176
Although an SRS warning light operates normally, DTC or a normal system code is not displayed.	TC and CG Terminal Circuit	RS-178
Although terminals TC and CG of DLC3 are not connected, DTC or a normal system code is displayed.	TC and CG Terminal Circuit	RS-178

TERMINALS OF ECU

1. CENTER AIRBAG SENSOR ASSEMBLY

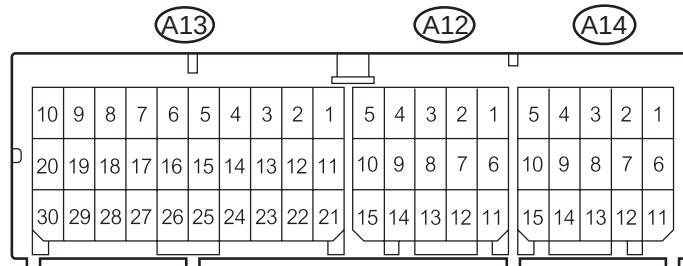

C123353E03

Terminal No.	Terminal Symbol	Destination
A13-1	P2+	Front passenger airbag assembly (Front passenger side squib 2nd step)
A13-2	P2-	Front passenger airbag assembly (Front passenger side squib 2nd step)
A13-3	P-	Front passenger airbag assembly (Front passenger side squib)
A13-4	P+	Front passenger airbag assembly (Front passenger side squib)
A13-5	D+	Steering pad (Driver side squib)
A13-6	D-	Steering pad (Driver side squib)
A13-7	D2-	Steering pad (Driver side squib 2nd step)
A13-8	D2+	Steering pad (Driver side squib 2nd step)
A13-13	PBEW	Passenger seat belt warning light assembly
A13-14	LA	Combination meter assembly (SRS warning light)
A13-15	TC	DLC3
A13-16	SIL	DLC3
A13-17	P-AB	Clock assembly (Passenger airbag ON/OFF indicator)
A13-21	IG2	IGN fuse
A13-22	GSW2	ECM
A13-23	PAON	Clock assembly (Passenger airbag ON/OFF indicator)
A13-25	E1	Ground
A13-26	E2	Ground
A13-27	-SR	Front airbag sensor RH
A13-28	-SL	Front airbag sensor LH
A13-29	+SR	Front airbag sensor RH
A13-30	+SL	Front airbag sensor LH
A14-4	PP+	Front seat outer belt assembly RH (Front passenger side front pretensioner squib)
A14-5	PP-	Front seat outer belt assembly RH (Front passenger side front pretensioner squib)
A14-6 (*1)	SFP-	Front seat side airbag assembly RH (Front passenger side - side squib)
A14-7 (*1)	SFP+	Front seat side airbag assembly RH (Front passenger side - side squib)

RS

cardiagn.com