

SRS Warning Light does not Come ON

DESCRIPTION

See page [RS-172](#).

RS

WIRING DIAGRAM

See page [RS-173](#).

INSPECTION PROCEDURE

1

CHECK BATTERY

- (a) Measure the voltage of the battery.
- Standard voltage:**
11 to 14 V

NG

CHECK AND REPLACE BATTERY OR CHARGING SYSTEM

OK

2

CHECK COMBINATION METER ASSEMBLY

- (a) Disconnect the connectors from the center airbag sensor assembly.
- (b) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (c) Turn the ignition switch to the ON position.
- (d) Check the SRS warning light operation.
- OK:**
The SRS warning light does not come on.


NG

REPLACE CENTER AIRBAG SENSOR ASSEMBLY

OK

3

CHECK WIRE HARNESS (COMBINATION METER ASSEMBLY - CENTER AIRBAG SENSOR ASSEMBLY)

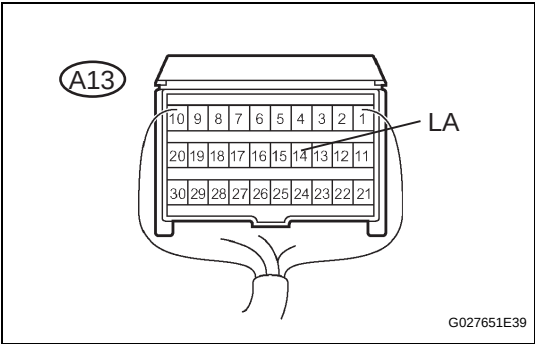

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the connector from the combination meter assembly.
- (d) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (e) Measure the voltage according to the value(s) in the table below.

Standard voltage

Tester Connection	Condition	Specified Condition
A13-14 (LA) - Body ground	Ignition switch ON	Below 1 V

NG

REPAIR OR REPLACE WIRE HARNESS

OK

GO TO METER / GAUGE SYSTEM

RS