

INSPECTION

1. INSPECT SPIRAL CABLE

- (a) If there are any defects as mentioned below, replace the spiral cable with a new one:
Scratches, cracks, dents or chips on the connector or the spiral cable.

INSTALLATION


1. INSTALL SPIRAL CABLE

- Check that the front wheels are facing straight ahead.
- Set the turn signal switch to the neutral position.

NOTICE:

If it is not in the neutral position, the pin of the turn signal switch may snap.

RS

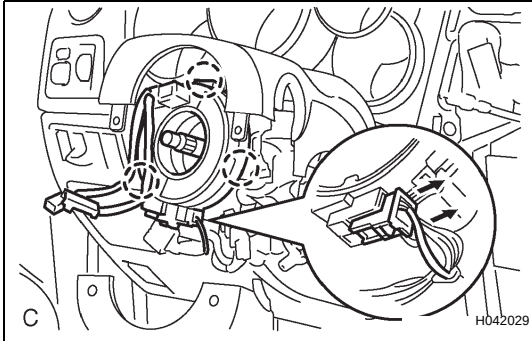

- Engage the 3 claws and install the spiral cable.

NOTICE:

When replacing the spiral cable with a new one, remove the lock pin before installing the steering wheel assembly.

- Connect the connectors to the spiral cable.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.


- Install the steering column upper cover.

CAUTION:

Scratches or cracks on the connector cracks, dents or chipping of the spiral cable.

2. INSTALL STEERING COLUMN COVER

- Install the steering column lower cover with the 3 screws.

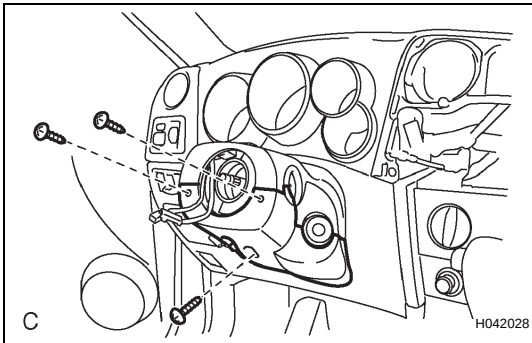

3. ADJUST SPIRAL CABLE

- Check that the ignition switch is off.
- Check that the battery negative (-) terminal is disconnected.


CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- Rotate the spiral cable counterclockwise slowly by hand until it feels firm.

NOTICE:

Do not turn the spiral cable by the airbag wire harness.

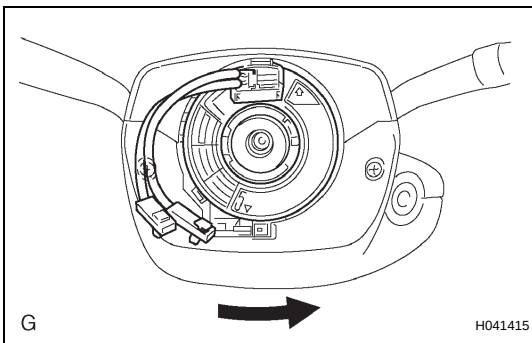


- Rotate the spiral cable clockwise approximately 2.5 turns to align the marks.

NOTICE:

Do not turn the spiral cable by the airbag wire harness.

HINT:

The spiral cable will rotate approximately 2.5 turns to both the left and right from the center.

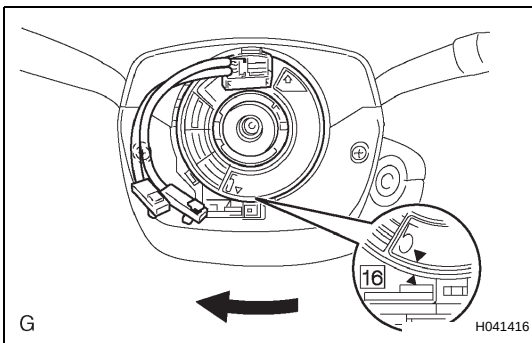

4. INSTALL STEERING WHEEL ASSEMBLY (See page IP-16)

RS

5. **INSTALL STEERING PAD** (See page [RS-275](#))
6. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
7. **INSPECT STEERING PAD** (See page [RS-275](#))
8. **PERFORM INITIALIZATION**
 - (a) Perform initialization.
HINT:
Some systems need initialization when disconnecting the cable from the negative battery terminal.
9. **INSPECT SRS WARNING LIGHT**
 - (a) Inspect the SRS warning light (See page [RS-26](#)).