


CENTER AIRBAG SENSOR ASSEMBLY

COMPONENTS

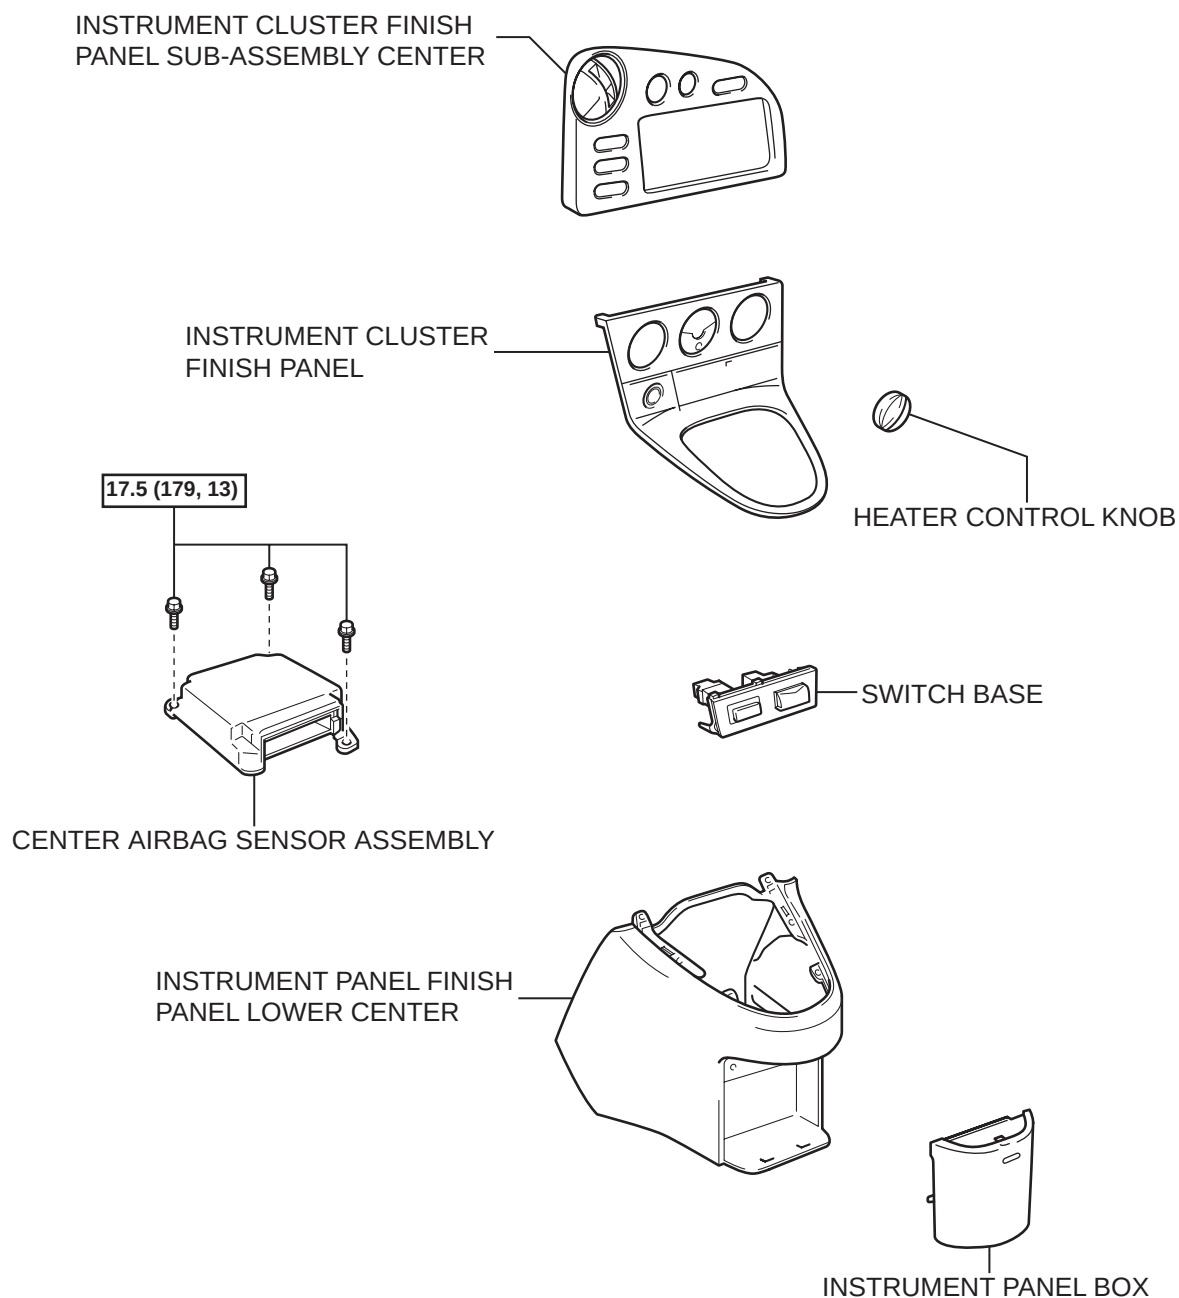

RS

cardiagn.com

ON-VEHICLE INSPECTION

1. **INSPECT CENTER AIRBAG SENSOR ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)**
 - (a) Perform a diagnostic system check (See page [RS-26](#)).
2. **INSPECT CENTER AIRBAG SENSOR ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)**
 - (a) Perform a diagnostic system check (See page [RS-26](#)).
3. **INSPECT CENTER AIRBAG SENSOR ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS DEPLOYED)**
 - (a) Replace the center airbag sensor assembly.
CAUTION:
Be sure to follow the correct removal and installation procedures.
HINT:
The center airbag sensor assembly should be replaced after any of the airbags has deployed, as it has been subjected to the impact.