



SEAT BELT WARNING SYSTEM

PARTS LOCATION

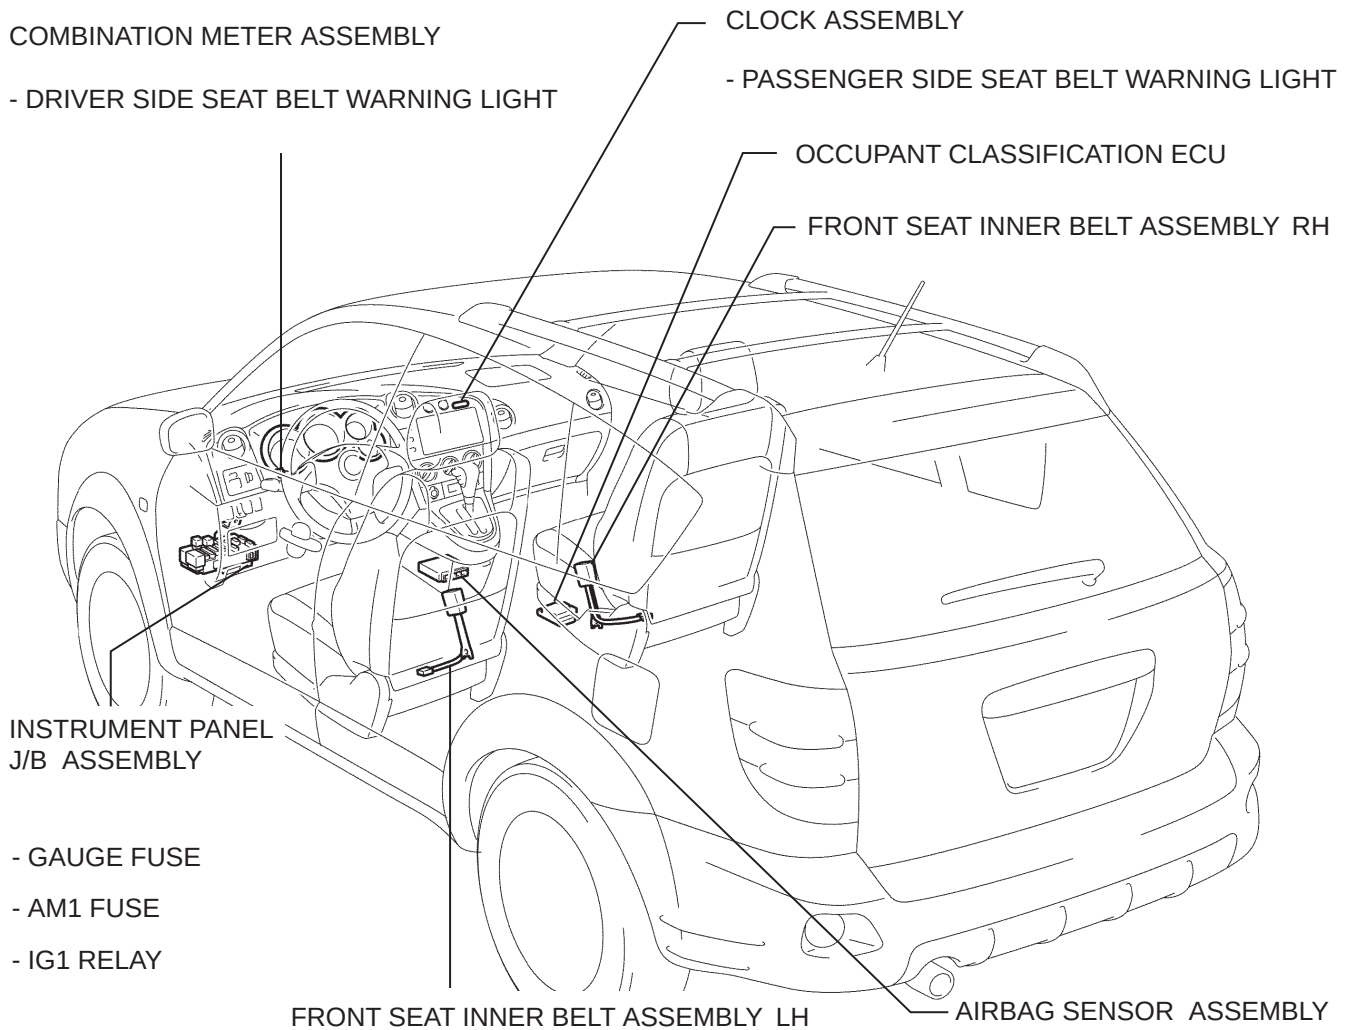


Passenger Seat

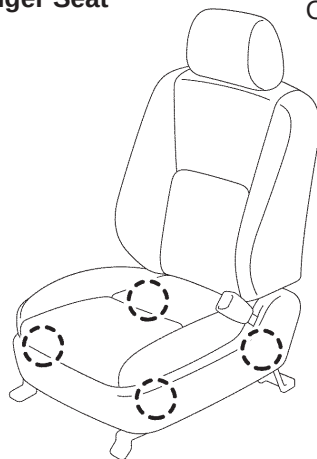

OCCUPANT CLASSIFICATION SENSOR REAR

OCCUPANT CLASSIFICATION SENSOR FRONT

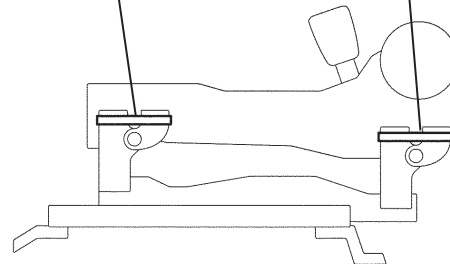

PROBLEM SYMPTOMS TABLE

Seat belt warning system

Symptom	Suspected area	See page
Driver side seat belt warning light does not operate	1. AM1 fuse	-
	2. GAUGE fuse	-
	3. IG1 relay	-
	4. Combination meter assembly	ME-3
	5. Front seat inner belt assembly LH	SB-4
	6. Wire harness	-
Front passenger side seat belt warning light does not operate	1. AM1 fuse	-
	2. GAUGE fuse	-
	3. IG1 relay	-
	4. Front seat inner belt assembly RH	SB-4
	5. Occupant classification ECU	RS-185
	6. Occupant classification sensor	RS-185
	7. Airbag sensor assembly	RS-23
	8. Wire harness	-
	9. Clock assembly	-

NOTICE:

The front seat inner belt RH cannot be inspected. When the front seat inner belt seems to be malfunctioning, use the intelligent tester to check for DTCs.