


FRONT SEAT INNER BELT ASSEMBLY

COMPONENTS

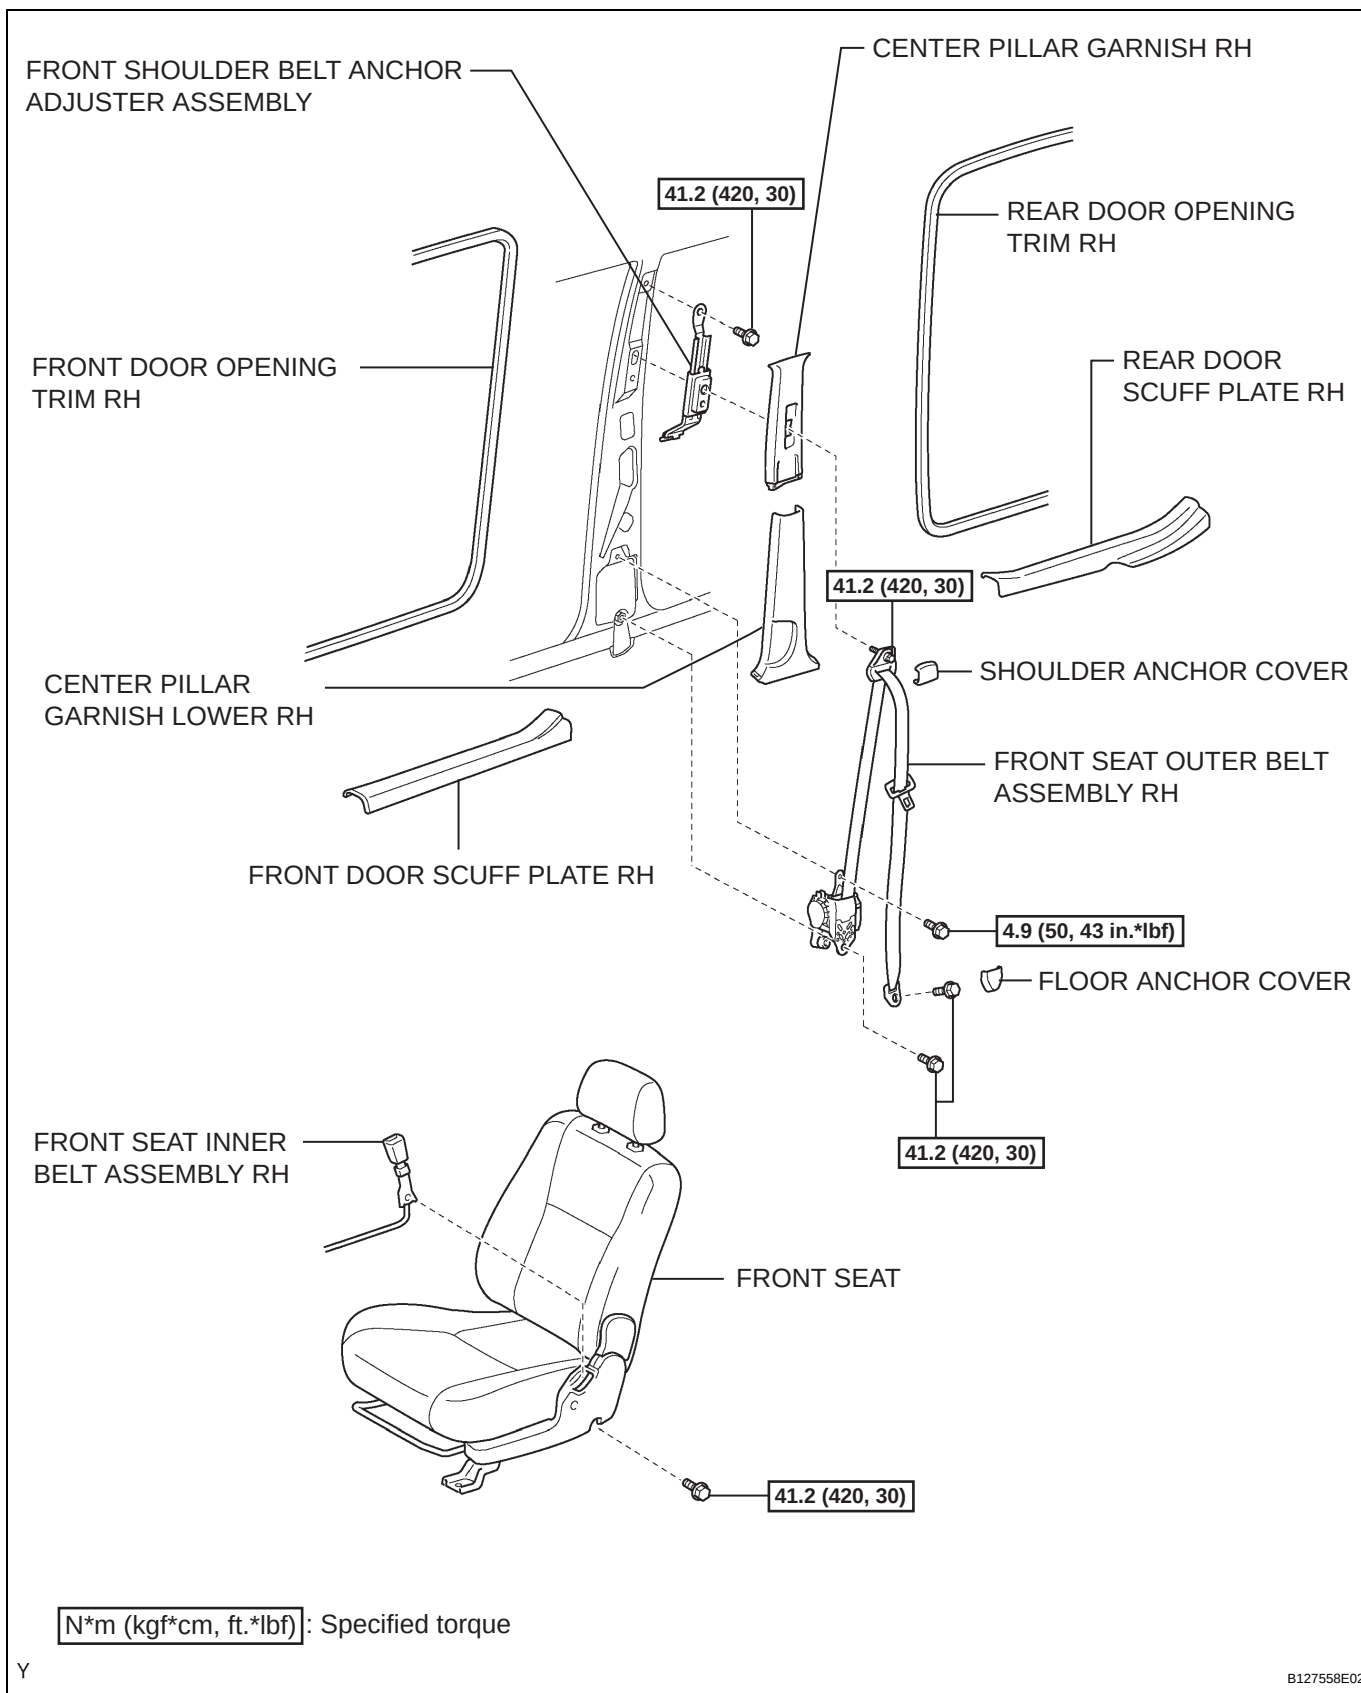

SB

cardiagn.com

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the RH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

Wait for 90 seconds after disconnecting the cable to prevent the airbag from deploying.

2. REMOVE SEAT TRACK BRACKET COVER OUTER RH
3. REMOVE SEAT TRACK BRACKET COVER INNER RH
4. REMOVE FRONT SEAT TRACK COVER RH REAR OUTER (See page SE-10)
5. REMOVE FRONT SEAT TRACK COVER RH REAR INNER (See page SE-10)
6. REMOVE FRONT SEAT HEADREST ASSEMBLY
7. REMOVE FRONT SEAT ASSEMBLY RH
8. REMOVE FRONT SEAT INNER BELT ASSEMBLY RH (See page SE-11)

INSPECTION

1. INSPECT FRONT SEAT INNER BELT ASSEMBLY LH
- (a) Measure the resistance of the buckle switch.
- Standard resistance

Tester Connection	Condition	Specified Condition
5 - 6	Fasten seat belt	1 MΩ or higher
5 - 6	Release seat belt	Below 1 Ω

If the result is not as specified, replace the inner belt assembly.

