


SB

REMOVAL

1. REMOVE REAR DOOR SCUFF PLATE RH (See page [IR-5](#))
2. REMOVE REAR DOOR SCUFF PLATE LH (See page [IR-5](#))
3. REMOVE REAR DOOR OPENING TRIM RH
4. REMOVE REAR DOOR OPENING TRIM LH
5. REMOVE TONNEAU COVER ASSEMBLY
6. REMOVE DECK BOARD NO. 2
7. REMOVE DECK BOARD SUB-ASSEMBLY (See page [IR-6](#))
8. REMOVE DECK FLOOR BOX REAR (See page [IR-6](#))
9. REMOVE LUGGAGE COMPARTMENT TRAY (See page [IR-6](#))
10. REMOVE BACK DOOR WEATHERSTRIP
11. REMOVE DECK TRIM COVER REAR (See page [IR-7](#))
12. REMOVE REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY
13. REMOVE REAR SEAT INNER W/CENTER BELT ASSEMBLY LH
 - (a) Remove the bolt and the rear seat inner w/center belt assembly LH.

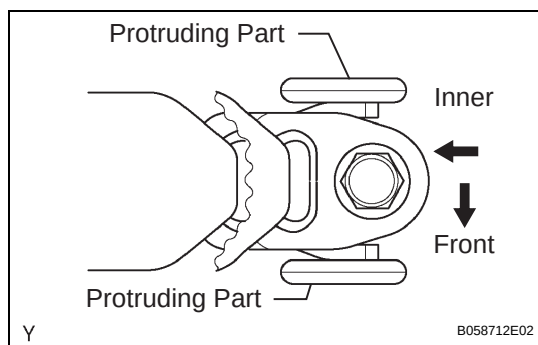

INSTALLATION

1. INSTALL REAR SEAT INNER W/CENTER BELT ASSEMBLY LH
 - (a) Install the rear seat inner w/center belt assembly LH with the bolt, as shown in the illustration.
Torque: 41.2 N*m (420 kgf*cm, 30 ft.*lbf)
NOTICE:
 - Do not make the anchor part run onto the protruding part of the floor panel.
 - Do not disassemble the retractor.
2. INSTALL REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY
3. INSTALL DECK TRIM COVER REAR
4. INSTALL BACK DOOR WEATHERSTRIP
5. INSTALL LUGGAGE COMPARTMENT TRAY
6. INSTALL DECK FLOOR BOX REAR
7. INSTALL DECK BOARD SUB-ASSEMBLY
8. INSTALL DECK BOARD NO. 2
9. INSTALL TONNEAU COVER ASSEMBLY
10. INSTALL REAR DOOR OPENING TRIM LH
11. INSTALL REAR DOOR OPENING TRIM RH

12. INSTALL REAR DOOR SCUFF PLATE LH

13. INSTALL REAR DOOR SCUFF PLATE RH

SB