


FRONT SEAT OUTER BELT ASSEMBLY

COMPONENTS

SB

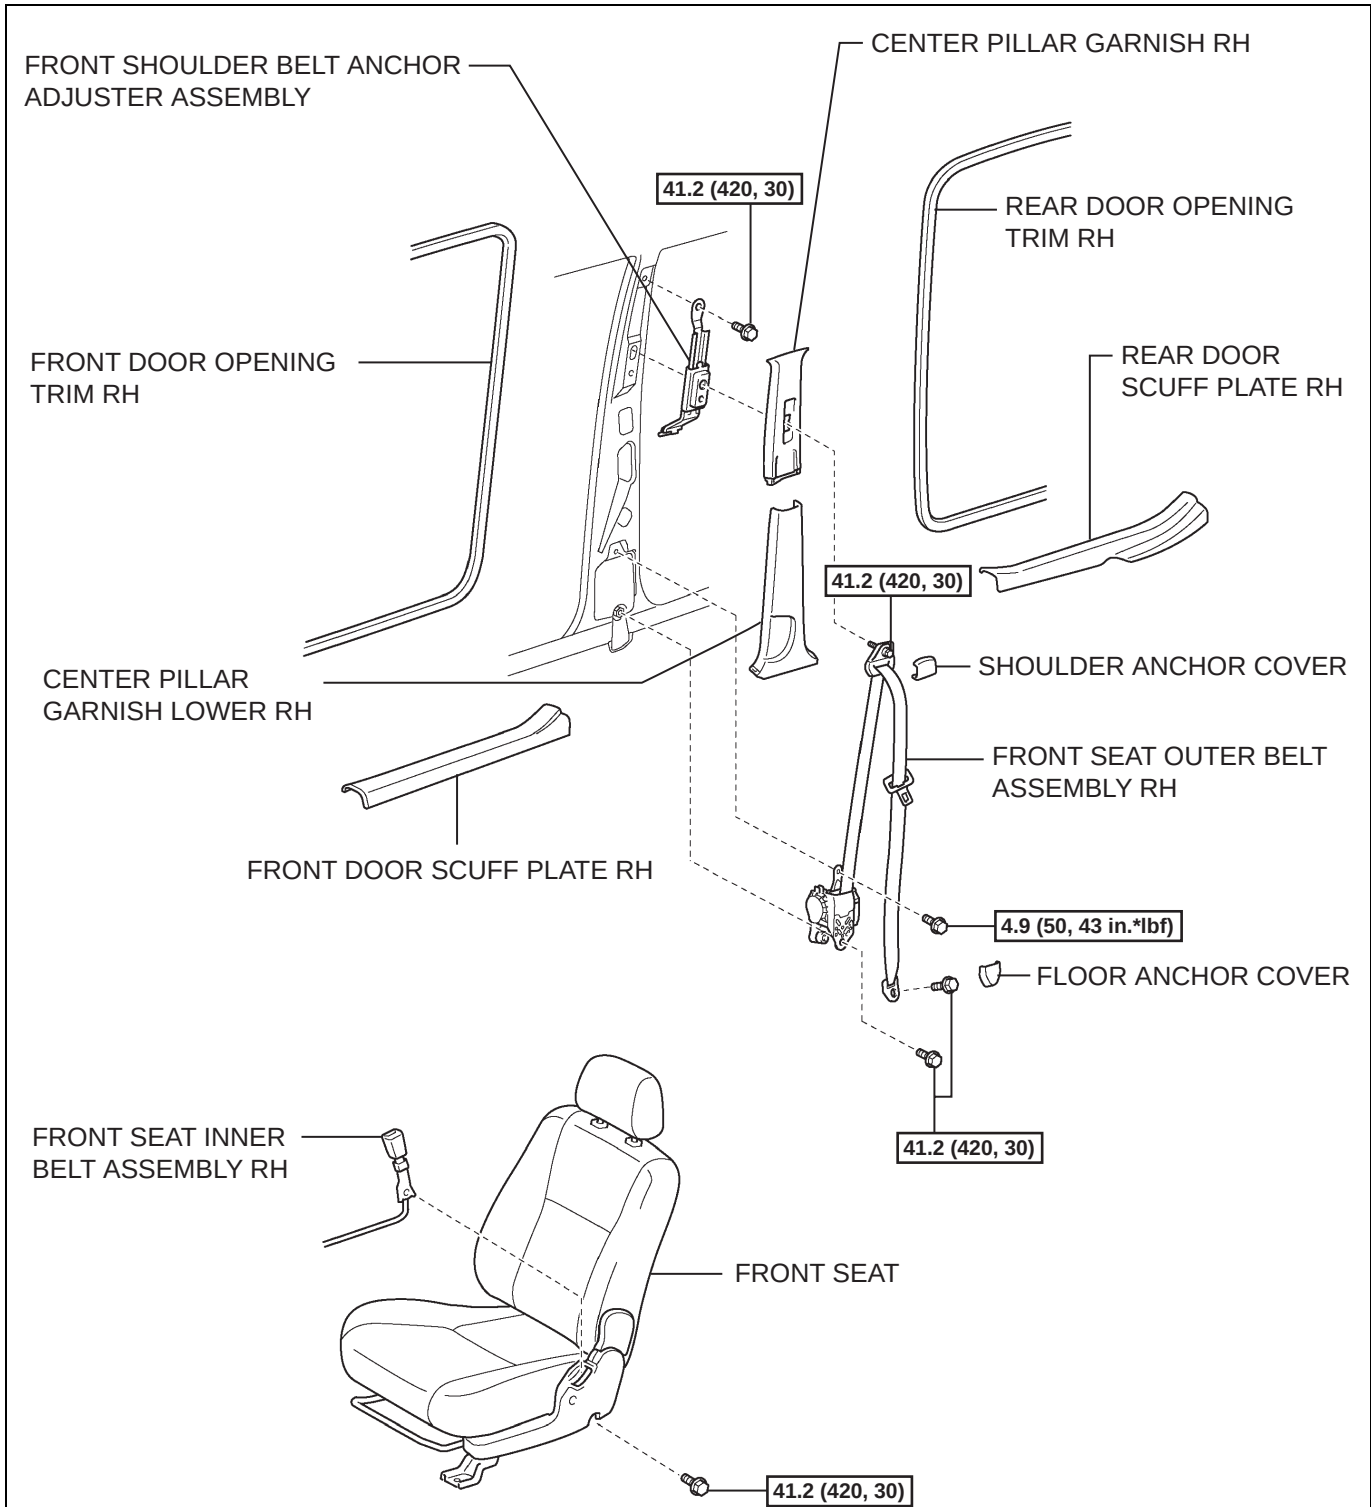

N*m (kgf*cm, ft.*lbf): Specified torque

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the RH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait for 90 seconds after disconnecting the cable to prevent the airbag from deploying.

2. REMOVE FRONT DOOR SCUFF PLATE RH (See page IR-5)

3. REMOVE FRONT DOOR WEATHERSTRIP RH

4. REMOVE REAR DOOR SCUFF PLATE RH (See page IR-5)

5. REMOVE REAR DOOR WEATHERSTRIP RH

6. REMOVE CENTER PILLAR GARNISH LOWER RH (See page IR-5)

7. REMOVE FRONT SEAT OUTER BELT ASSEMBLY RH

CAUTION:

- Removal of the seat belt pretensioner must be started at least 90 seconds after the ignition switch is turned OFF and the negative (-) terminal cable is disconnected from the battery.
- Carefully read the notices for the "pretensioner" in the SRS airbag system and front seat outer belt assembly.

- (a) Using a screwdriver, remove the shoulder anchor cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt and disconnect the front seat outer belt (shoulder anchor side).

- (c) Using screwdriver, remove the floor anchor cover.

- (d) Remove the bolt and disconnect the front seat outer belt assembly RH (floor anchor side).

HINT:

Tape the screwdriver tip before use.

- (e) To disconnect the pretensioner connector: 1) horizontally pull out the lock part of the connector as indicated by the black arrow in the illustration, and 2) remove the connector.

- (f) Remove the 2 bolts and front seat outer belt assembly RH.

8. REMOVE CENTER PILLAR GARNISH RH (See page IR-6)

9. REMOVE FRONT SHOULDER ANCHOR ADJUSTER ASSEMBLY

- (a) Remove the bolt and front shoulder belt anchor adjuster assembly.

