


REMOVAL

1. REMOVE REAR DOOR SCUFF PLATE RH (See page [IR-5](#))
2. REMOVE REAR DOOR SCUFF PLATE LH (See page [IR-5](#))
3. REMOVE REAR DOOR OPENING TRIM RH
4. REMOVE REAR DOOR OPENING TRIM LH
5. REMOVE TONNEAU COVER ASSEMBLY
6. REMOVE DECK BOARD NO. 2
7. REMOVE DECK BOARD SUB-ASSEMBLY (See page [IR-6](#))
8. REMOVE DECK FLOOR BOX REAR (See page [IR-6](#))
9. REMOVE LUGGAGE COMPARTMENT TRAY (See page [IR-6](#))
10. REMOVE BACK DOOR WEATHERSTRIP
11. REMOVE DECK TRIM COVER REAR (See page [IR-7](#))
12. REMOVE REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY
13. REMOVE REAR SEAT BELT ASSEMBLY OUTER CENTER
 - (a) Remove the rear seat back board RH.
 - (b) Remove the rear seat shoulder belt cover.
 - (c) Remove the 2 bolts and rear seat belt assembly outer center.

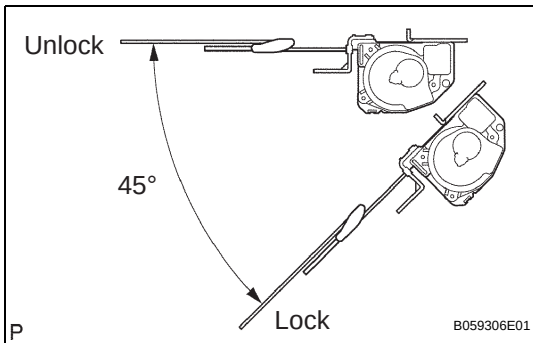

INSTALLATION

1. INSTALL REAR SEAT BELT ASSEMBLY OUTER CENTER
 - (a) Before installing the ELR, check the ELR.
 - (1) Gently tilt the ELR and pull the belt. Check that the belt will not lock within 15° of tilt in all directions. Then check that the belt will lock when over 45° of tilt is applied.
If the operation is not as specified, replace the rear seat belt assembly outer center.
 - (b) Install the rear seat belt assembly outer center with the bolt.
Torque: 41.2 N*m (420 kgf*cm, 30 ft.*lbf)
 - (c) After installing the ELR, check the ELR.
NOTICE:
The check should be performed with the assembly installed.
 - (1) With the belt installed, check that the belt locks when it is pulled out quickly.
If the operation is not as specified, replace the rear seat belt assembly outer center.

- (d) Check the fastening function of the child restraint system.

NOTICE:

The check should be performed with the assembly installed.

- (1) When the belt is pulled out fully, the belt should automatically try to retract.
- (2) After the belt has fully retracted, the belt should be able to be pulled out and retracted again. If the operation is not as specified, replace the rear seat belt assembly outer center.

2. **INSTALL REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY**
3. **INSTALL DECK TRIM COVER REAR**
4. **INSTALL BACK DOOR WEATHERSTRIP**
5. **INSTALL LUGGAGE COMPARTMENT TRAY**
6. **INSTALL DECK FLOOR BOX REAR**
7. **INSTALL DECK BOARD SUB-ASSEMBLY**
8. **INSTALL DECK BOARD NO. 2**
9. **INSTALL TONNEAU COVER ASSEMBLY**
10. **INSTALL REAR DOOR OPENING TRIM LH**
11. **INSTALL REAR DOOR OPENING TRIM RH**
12. **INSTALL REAR DOOR SCUFF PLATE LH**
13. **INSTALL REAR DOOR SCUFF PLATE RH**