

REMOVAL

1. REMOVE REAR DOOR SCUFF PLATE RH (See page [IR-5](#))
2. REMOVE REAR DOOR SCUFF PLATE LH (See page [IR-5](#))
3. REMOVE REAR DOOR OPENING TRIM RH
4. REMOVE REAR DOOR OPENING TRIM LH
5. REMOVE TONNEAU COVER ASSEMBLY
6. REMOVE DECK BOARD NO. 2
7. REMOVE DECK BOARD SUB-ASSEMBLY (See page [IR-6](#))
8. REMOVE DECK FLOOR BOX REAR (See page [IR-6](#))
9. REMOVE LUGGAGE COMPARTMENT TRAY (See page [IR-6](#))
10. REMOVE BACK DOOR WEATHERSTRIP
11. REMOVE DECK TRIM COVER REAR (See page [IR-7](#))
12. REMOVE REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY
13. REMOVE CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY RH
 - (a) Remove the 2 bolts and child restraint seat anchor bracket sub-assembly RH.
14. REMOVE CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY LH
 - (a) Remove the 2 bolts and child restraint seat anchor bracket sub-assembly LH.

SB

INSTALLATION

1. INSTALL CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY RH

- (a) Install the child restraint seat anchor bracket sub-assembly RH with the 2 bolts.

Torque: 18.1 N*m (185 kgf*cm, 13.3 ft.*lbf)

2. INSTALL CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY LH

- (a) Install the child restraint seat anchor bracket sub-assembly LH with the 2 bolts.

Torque: 18.1 N*m (185 kgf*cm, 13.3 ft.*lbf)

3. INSTALL REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY

4. INSTALL DECK TRIM COVER REAR

5. INSTALL BACK DOOR WEATHERSTRIP

6. INSTALL LUGGAGE COMPARTMENT TRAY

7. INSTALL DECK FLOOR BOX REAR

8. INSTALL DECK BOARD SUB-ASSEMBLY

9. INSTALL DECK BOARD NO. 2

10. INSTALL TONNEAU COVER ASSEMBLY

11. INSTALL REAR DOOR OPENING TRIM LH

12. INSTALL REAR DOOR OPENING TRIM RH

13. INSTALL REAR DOOR SCUFF PLATE LH

14. INSTALL REAR DOOR SCUFF PLATE RH