


COMPONENTS




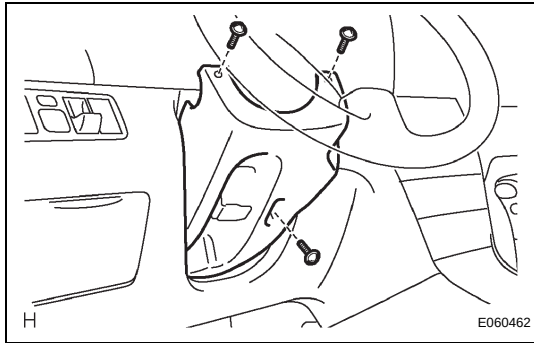

REMOVAL

1. REMOVE STEERING COLUMN COVER LOWER

- (a) Remove 3 screws and steering column cover LOWER.

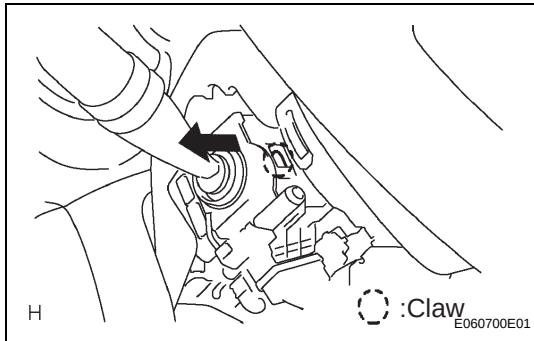


2. REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY

- (a) Disconnect the connector.
(b) Release the claw and pull out the head light dimmer switch assembly.

NOTICE:

Pressing the claw hard breaks the claw.

Connector Front View:

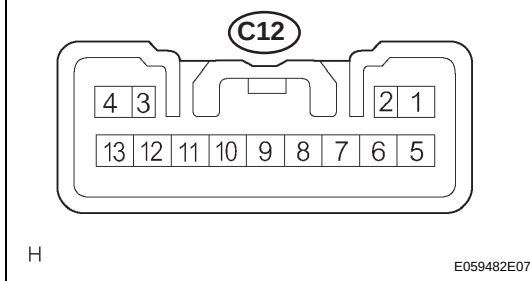

INSPECTION

1. INSPECT HEADLIGHT DIMMER SWITCH ASSEMBLY

- (a) Inspect light control switch continuity.
(1) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester connection	Switch operation	Specified resistance
10 - 11 11 - 12 10 - 13	OFF	10 k Ω or higher
10 - 13	TAIL	Below 1 Ω
10 - 13 11 - 12	HEAD	Below 1 Ω

- (b) Inspect headlight dimmer switch continuity.
(1) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester connection	Switch operation	Specified resistance
8 - 11 9 - 11	FLASH	Below 1 Ω
8 - 11	LOW BEAM	Below 1 Ω
9 - 11	HI BEAM	Below 1 Ω

HINT:

Turn light control switch to the HEAD position when checking "LOW BEAM" and "HI BEAM".

- (c) Inspect turn signal switch continuity.
(1) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester connection	Switch operation	Specified resistance
6 - 7	Right turn	Below 1 Ω

Tester connection	Switch operation	Specified resistance
5 - 6 6 - 7	Neutral	10 k Ω or higher
5 - 6	Left turn	Below 1 Ω

(d) w/ Fog light:

Inspect front fog light switch continuity.

- (1) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester connection	Switch operation	Switch operation
2 - 4	OFF	10 k Ω or higher
2 - 4	ON	Below 1 Ω