

PROBLEM SYMPTOMS TABLE

WIPER AND WASHER SYSTEM

Symptom	Suspected area	See page
Front wipers do not operate.	1. IG1 relay	-
	2. WIPER fuse	-
	3. Front wiper switch	WW-25
	4. Wire harness	-
Front wipers do not operate in LO or HI.	1. Front wiper switch	WW-25
	2. Front wiper motor	WW-10
	3. Wire harness	-
Front wipers do not operate in INT.	1. Front wiper switch	WW-25
	2. Front wiper motor	WW-10
	3. Wire harness	-
Front washer motor does not operate.	1. WIPER fuse	-
	2. Front washer switch	WW-25
	3. Front washer motor	WW-28
	4. Wire harness	-
Front wipers do not operate when washer switch is in the ON position.	1. Front wiper switch	WW-25
	2. Front wiper motor	WW-10
	3. Wire harness	-
Rear wiper and washers do not operate.	1. IG relay	-
	2. WIP fuse (I/P J/B)	-
	3. Rear wiper and washer switch	WW-25
	4. Wire harness	-
Rear wipers do not operate in INT.	1. Rear wiper and washer switch	WW-25
	2. Rear wiper relay	WW-23
	3. Rear wiper motor	WW-18
	4. Wire harness	-
Rear washer motor does not operate.	1. WASH fuse (I/P J/B)	-
	2. Rear wiper and washer switch	WW-25
	3. Rear washer motor	WW-29
	4. Wire harness	-
Rear wipers do not operate when washer switch in ON.	1. Rear wiper and washer switch	WW-25
	2. Rear wiper relay	WW-23
	3. Rear wiper motor	WW-18
	4. Wire harness	-
Washer fluid is not injected.	1. Washer hose and nozzle	WW-30
When the wiper switch is OFF, the wiper blade does not retract or the retract position is wrong.	1. Wiper motor (Wiper arm and blade set position)	WW-10
The wiper blade is in contact with the body.	1. Wiper motor (Wiper arm and blade set position)	WW-10

WW