
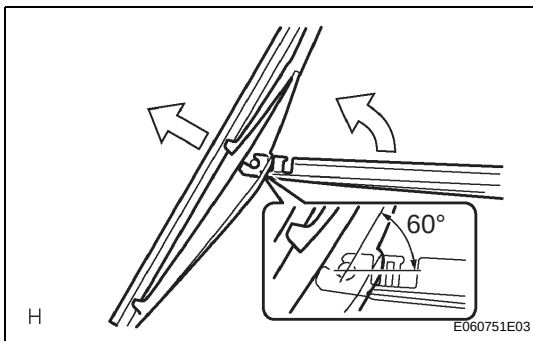


REAR WIPER RUBBER

COMPONENTS

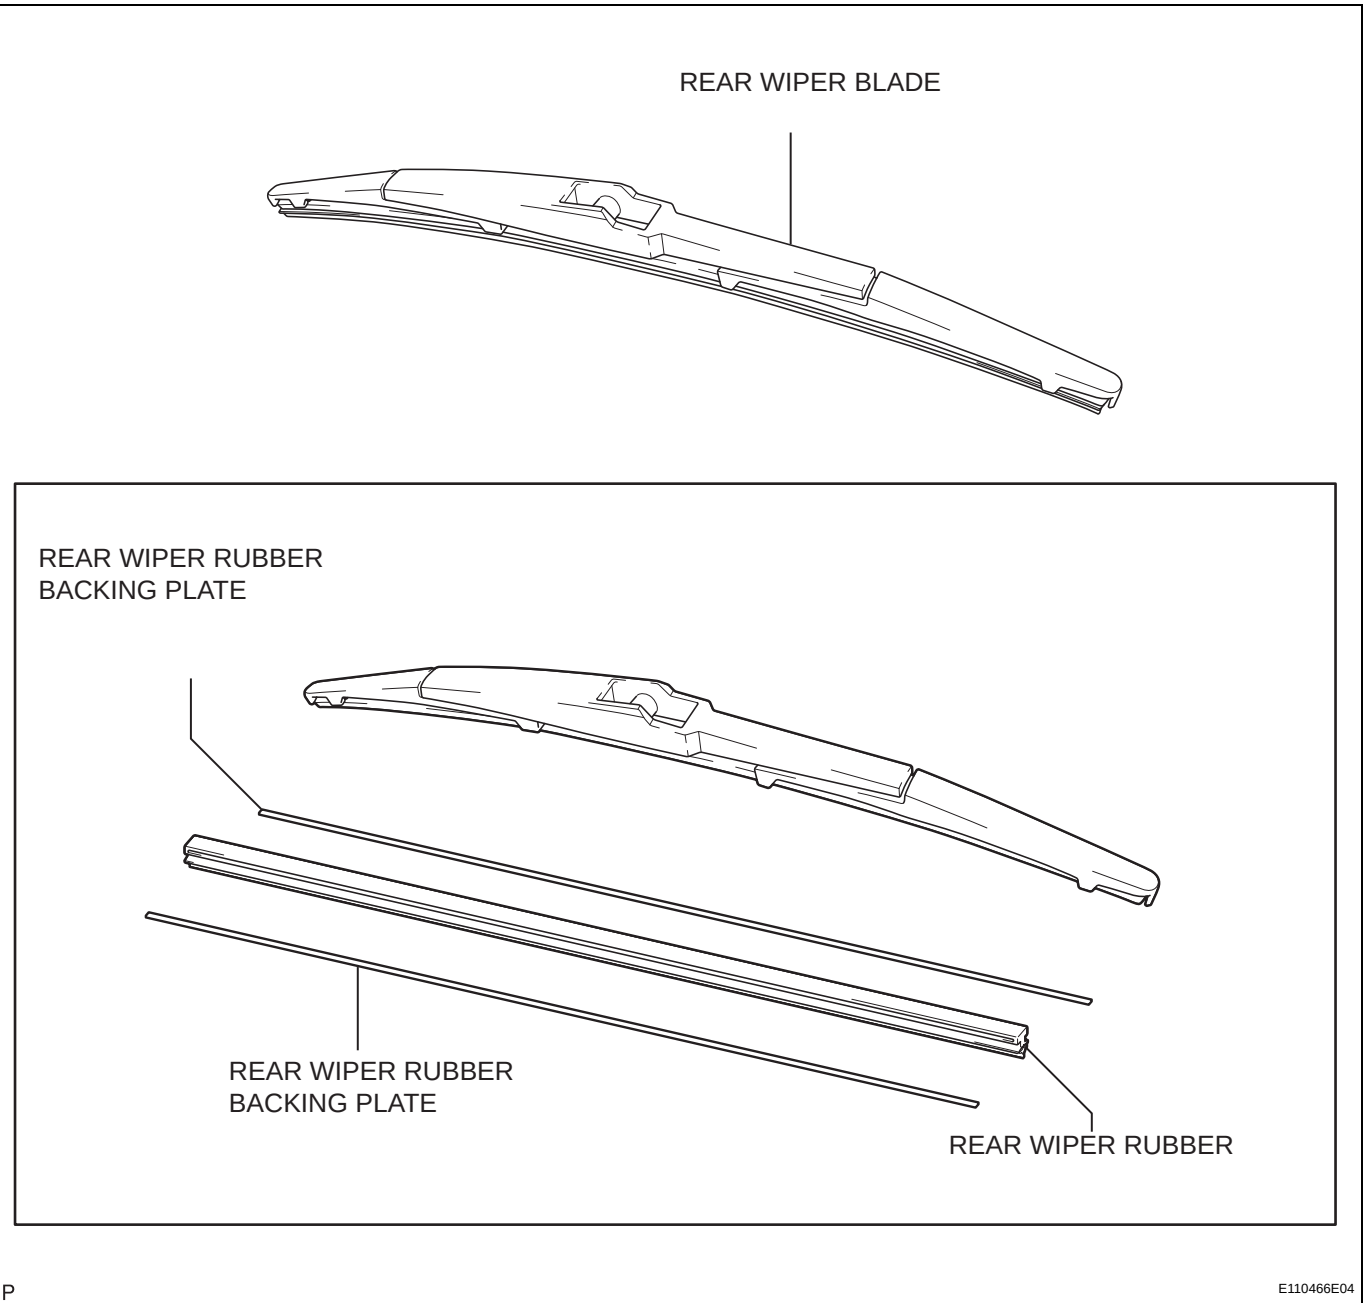

REMOVAL

1. REMOVE REAR WIPER BLADE

- Raise the rear wiper blade to the position as shown in the illustration where the meshing of the claw disengages with a clicking sound.


NOTICE:

Be careful not to break the claw.

- Pull straight the rear wiper blade to vehicle's left from the wiper arm.

NOTICE:

Do not fold the rear wiper arm with the rear wiper blade removed from it.

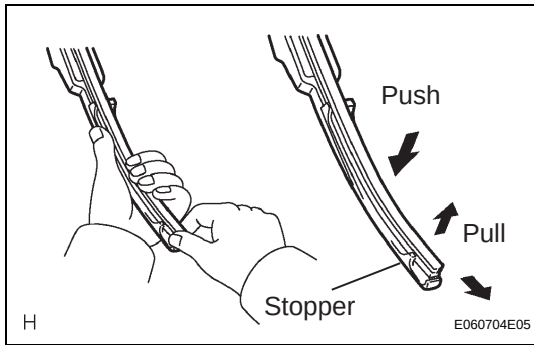

2. REMOVE REAR WIPER RUBBER

- (a) Place the rear wiper with the rear end of the rubber protruded from the blade stopper as shown in the illustration.

NOTICE:

Do not pull out the wiper rubber forcibly, as the backing plates will become deformed or the blade claws will become damaged.

HINT:

The rubber can be easily pulled out by pushing the middle area of the blade.



INSTALLATION

1. INSTALL REAR WIPER RUBBER


- (a) Install the 2 wiper rubber backing plates to the rear wiper rubber.

NOTICE:

Be careful to observe and keep direction of curvature for correct replacement.

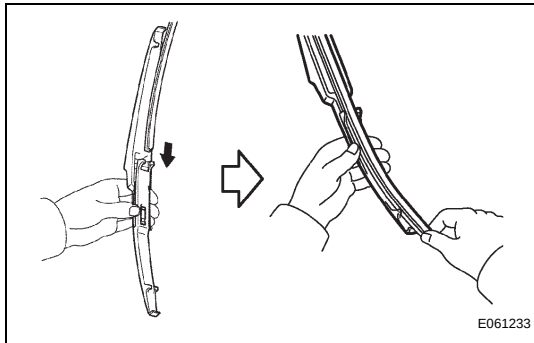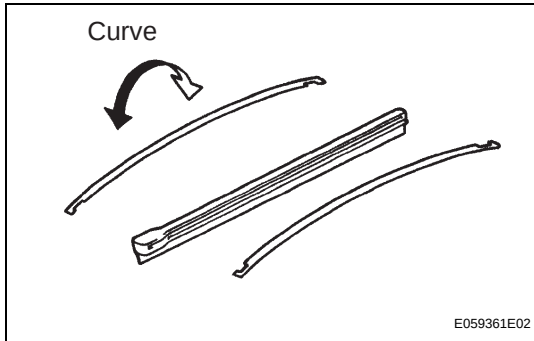

- (b) Insert the rear wiper rubber from the claw of the middle of the rear wiper blade into the rear end position.

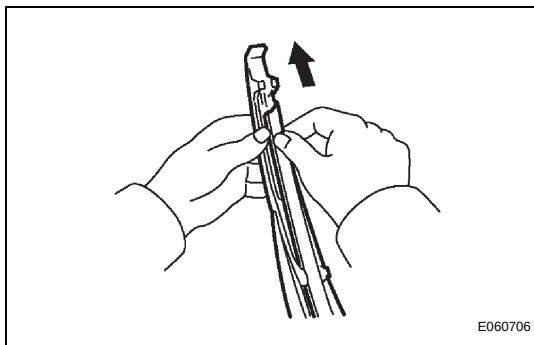

- (c) After passing the rear wiper rubber through the rear end side claw, protrude it from the rear end stopper and pass it through the front tip side claw.

2. INSTALL REAR WIPER BLADE