


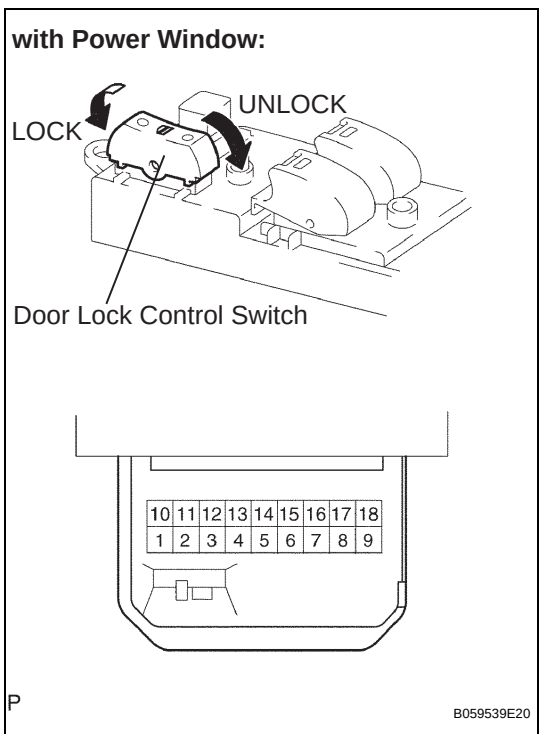

DOOR CONTROL SWITCH

INSPECTION


1. INSPECT POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY

- (a) with Power Window:
Measure the resistance according to the value(s) in the table below.

Standard resistance

Terminal No.	Switch Position	Specified Condition
1 - 3 - 5	Lock	Below 1 Ω
-	OFF	10 k Ω or higher
1 - 3 - 8	Unlock	Below 1 Ω

If the result is not as specified, replace the switch.

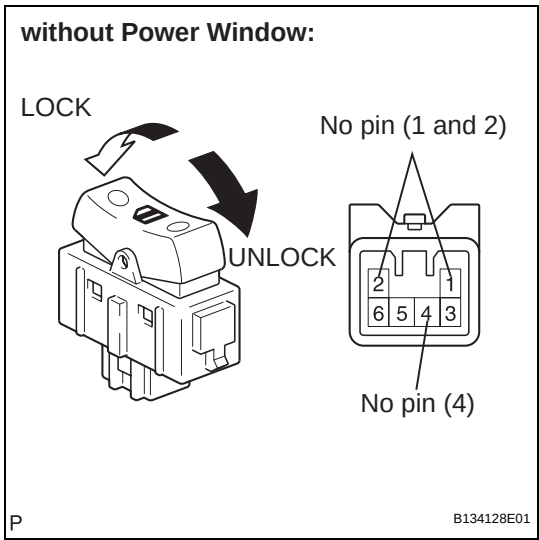


- (b) without Power Window:
Measure the resistance according to the value(s) in the table below.

Standard resistance

Terminal No.	Switch Position	Specified Condition
3 - 6	Lock	Below 1 Ω
-	OFF	10 k Ω or higher
3 - 5	Unlock	Below 1 Ω

If the result is not as specified, replace the switch.

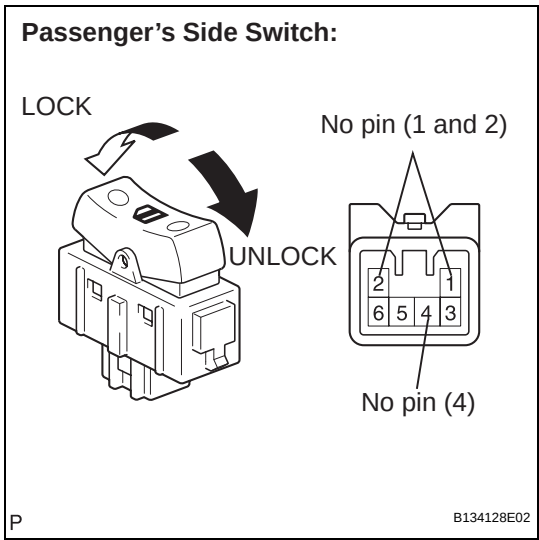

2. INSPECT DOOR CONTROL SWITCH ASSEMBLY

- (a) Passenger's side switch:
Measure the resistance according to the value(s) in the table below.

Standard resistance

Terminal No.	Switch Position	Specified Condition
3 - 6	Lock	Below 1 Ω
-	OFF	10 k Ω or higher
3 - 5	Unlock	Below 1 Ω

If the result is not as specified, replace the switch.