

HOW TO PROCEED WITH TROUBLESHOOTING

1	Vehicle Brought to Workshop
----------	-----------------------------

NEXT

2	Customer Problem Analysis
----------	---------------------------

NEXT

3	Problem Symptom Confirmation
----------	------------------------------

NEXT

4	Circuit Inspection
----------	--------------------

NEXT

5	Repair or Replace
----------	-------------------

NEXT

6	Confirmation Test
----------	-------------------

NEXT

END

CUSTOMIZE PARAMETERS

1. SEAT BELT BUZZER ON/OFF SETTING

- (a) Check that the ODO display is on, and turn the ignition switch off and then on. If other display is on, change it to the ODO display.
- (b) Within 2 to 6 seconds after turning the ignition switch ON, push the ODO/TRIP switch and hold it for 10 seconds or more.
- (c) Following the table below, set the seat belt buzzer ON/OFF setting.

Buzzer	Operation
Driver side seat belt buzzer	Front seat inner belt assembly (Driver side) OFF → ON (Seat belt unfastened → fastened)
Front passenger seat belt buzzer	Sit on the front passenger seat and front seat inner belt assembly (front passenger side) OFF → ON (Seat belt unfastened → fastened)

- HINT:
The ODO/TRIP display changes from "b-on" to "b-off", entering the cancel mode.
- (d) During the cancel mode, each time the ODO/TRIP switch is pushed, the setting is switched between ^{*1} b-on and ^{*2} b-off.

- HINT:
^{*1} b-on: Cancel is invalid
^{*2} b-off: Cancel is valid

- (e) After the setting, the mode will be canceled by either not operating the switch for 10 seconds or more, or turning the ignition switch from ON to OFF.
- HINT:
The setting can be reset when reconnecting the battery connector or removing/installing the meter connector (Buzzer on).