



2

CHECK HARNESS AND CONNECTOR (COMBINATION METER - FRONT SEAT INNER BELT ASSEMBLY)

Front Seat Inner Belt Assembly (for Driver Side) Connector Front View:

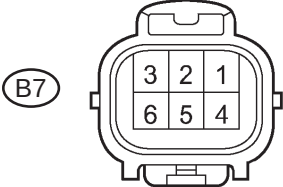

Combination Meter Assembly Wire Harness View:

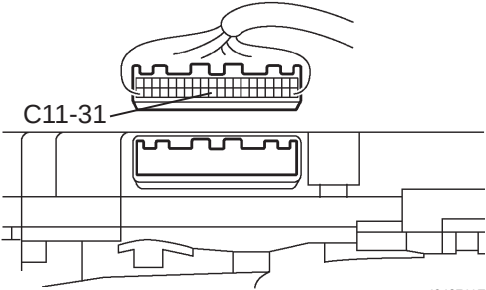

IO42711E01

- (a) Disconnect the C11 and B7 connectors.
- (b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester connection	Condition	Specified condition
C11-31 - B7-5	Always	Below 1 Ω
C11-31 - Body ground	Always	10 kΩ or higher
B7-6 - Body ground	Always	Below 1 Ω

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE COMBINATION METER ASSEMBLY