

DTC	62-45	Eject Error
DTC	62-51	Elevator Error
DTC	62-52	Clamp Error
DTC	63-45	Eject Error
DTC	63-51	Elevator Error
DTC	63-52	Clamp Error

DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
62-45	Disc cannot be ejected.	Radio receiver
62-51	Mechanical error occurs during elevator operation.	
62-52	Error occurs in CD player clamp.	
63-45	Magazine cannot be ejected.	
63-51	Mechanical error occurs during elevator operation.	
63-52	Error occurs in CD changer clamp.	

INSPECTION PROCEDURE

HINT:

After the inspection is completed, clear the DTCs.

1	CHECK RADIO RECEIVER
----------	-----------------------------

- (a) Check if a disc can be changed, inserted or ejected normally.

OK:**Malfunction disappears.****NG****REPLACE RADIO RECEIVER****OK****END**

DTC	62-46	Scratched / Reversed Disc
DTC	63-46	Scratched / Reversed Disc

DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
62-46	Scratches or dirt is found on CD surface or CD is set upside down.	• CD • Radio receiver
63-46	Scratches or dirt is found on CD surface or CD is set upside down.	

INSPECTION PROCEDURE**HINT:**

After the inspection is completed, clear the DTCs.

1	CHECK THAT CD IS INSERTED PROPERLY
----------	---

- (a) Check whether or not the CD is inserted upside down.

OK:


CD is properly inserted.

NG

REPLACE DISC

OK

2	CHECK DISC
----------	-------------------

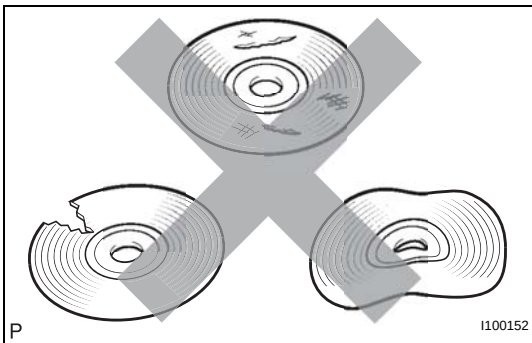

- (a) Check that the disc is not deformed or cracked.


OK:

No deformation or cracks on the disc.

NG

CHANGE DISC

OK

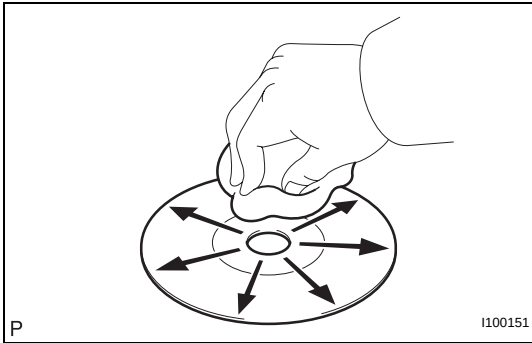3 CLEAN DISC

(a) Disc cleaning

- (1) If dirt is on the disc surface, wipe it clean with a soft cloth from the inside to the outside in a radial direction.

NOTICE:

Do not use a conventional record cleaner or anti-static preservative.

NEXT**4 CLEAR DTC**(a) Clear the DTCs (See page [AV-14](#)).**NEXT****5 RECHECK DTC**

(a) Recheck for DTCs and check if the same trouble occurs again.

OK:

Malfunction disappears.

OK**END****NG****6 REPLACE DISC**

(a) Replace the disc with another and recheck.

- (1) Replace the disc with another normal one.
- (2) Clear the DTCs (See page [AV-14](#)).
- (3) Recheck for DTCs and check if the same trouble occurs again.

OK:

Malfunction disappears.

NG**REPLACE RADIO RECEIVER****OK****END**