
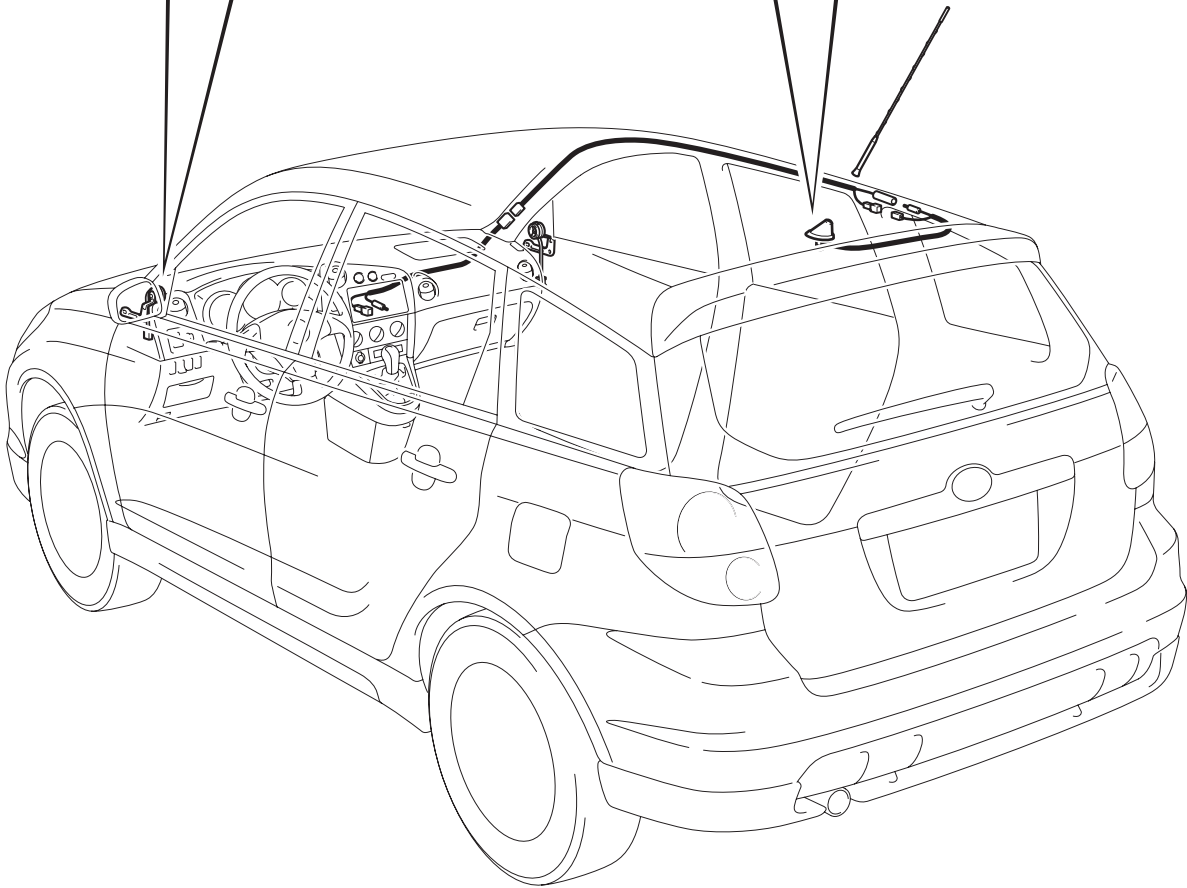
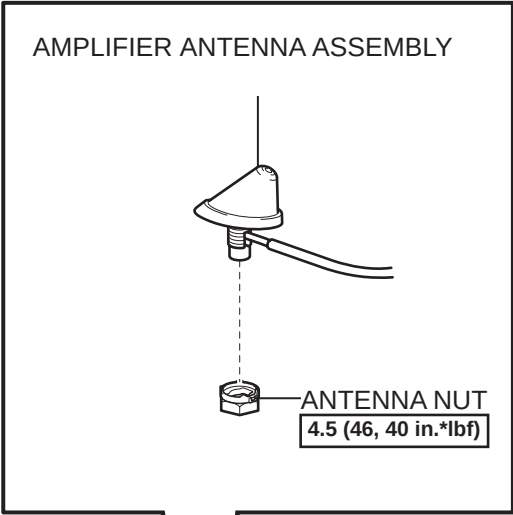


AMPLIFIER ANTENNA

COMPONENTS

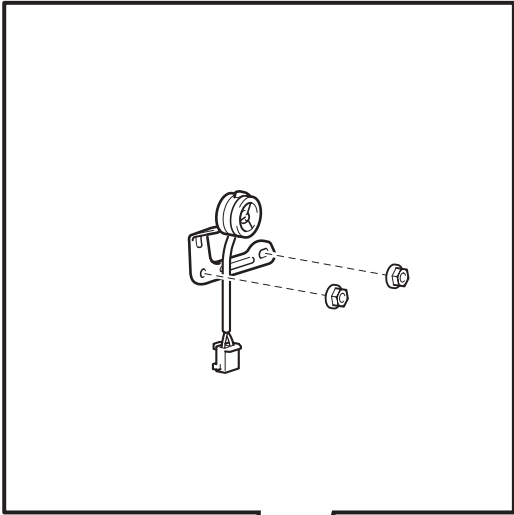

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

1. REMOVE ROOF ANTENNA POLE SUB-ASSEMBLY
(See page [AV-107](#))


2. REMOVE ROOF HEADLINING ASSEMBLY

HINT:



Refer to the instructions for removal of the roof headlining assembly (See page [IR-5](#)).

3. REMOVE AMPLIFIER ANTENNA ASSEMBLY

- (a) Remove the 4 clamps and antenna nut.

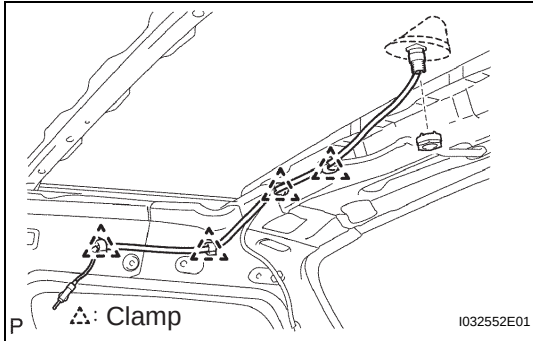

- (b) Release the 2 fitting claws, remove the amplifier antenna assembly.

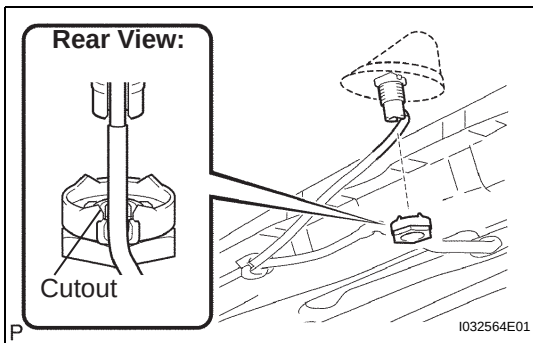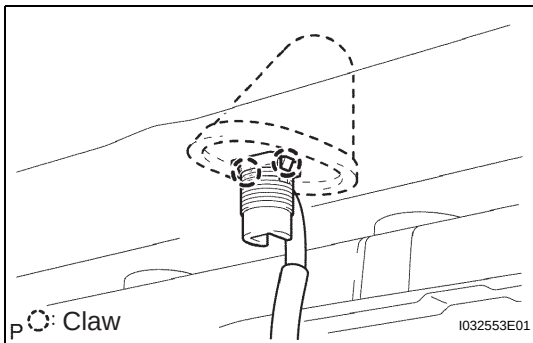

INSTALLATION

1. INSTALL AMPLIFIER ANTENNA ASSEMBLY

- (a) Set the amplifier antenna assembly to the hole on the roof, and place the antenna cord on the cutout on the antenna nut.

- (b) Install the amplifier antenna assembly with the antenna nut.

Torque: 4.5 N*m (46 kgf*cm, 40 in.*lbf)

- (c) Install the 4 clamps.

2. INSTALL ROOF HEADLINING ASSEMBLY

HINT:

Refer to the installation procedures of the roof headlining assembly (See page [IR-10](#)).

3. INSTALL ROOF ANTENNA POLE SUB-ASSEMBLY

4. INSTALL REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY

