



REMOVAL

1. **REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY** (for Manual Transaxle) (See page [MX-9](#))
2. **REMOVE CENTER INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY** (See page [IP-6](#))
3. **REMOVE CIGARETTE LIGHTER COVER**
 - (a) Release the 2 fitting claws, remove the cigarette lighter cover.

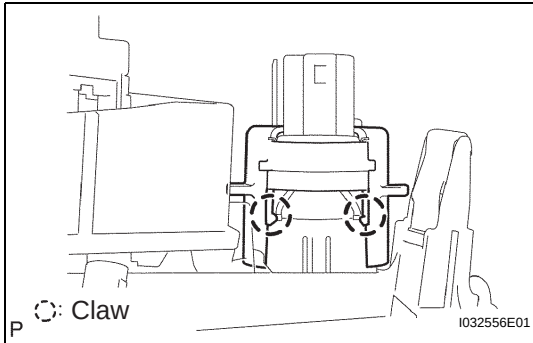


4. **REMOVE CIGARETTE LIGHTER ASSEMBLY**
 - (a) Remove the cigarette lighter knob and element assembly.
 - (b) Turn the socket in the circumference direction as shown in the illustration, disengage the claw between the socket and the cigarette lighter bezel stay, and push out the socket to the room side.
 - (c) Align the socket with the notch on the cigarette lighter bezel stay, remove the cigarette lighter assembly to the room side.

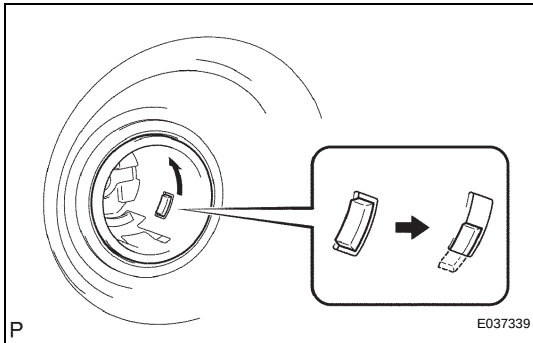

INSTALLATION

1. INSTALL CIGARETTE LIGHTER ASSEMBLY

- (a) Align the socket with the notch on the cigarette lighter bezel stay, push the cigarette lighter assembly into as hard as possible and install it.
- (b) Install the cigarette lighter knob and element assembly.

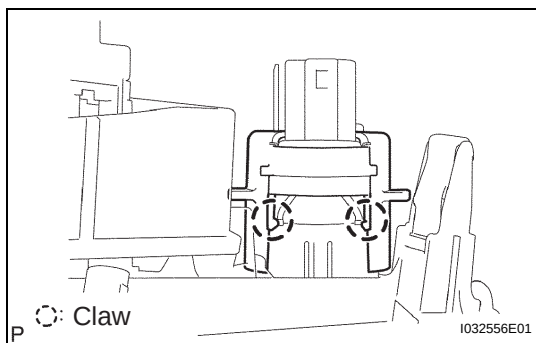

2. INSTALL CIGARETTE LIGHTER COVER

- (a) Install the cigarette lighter cover with the 2 fitting claws.

3. INSTALL CENTER INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY

4. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transaxle)