

REMOVAL

HINT:

Use the same procedures for the RH side and LH side.

1. REMOVE FRONT DOOR PULL HANDLE LH (See page ED-6)
2. REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (See page ED-6)
3. REMOVE FRONT ARMREST BASE PANEL UPPER LH (See page ED-6)
4. REMOVE FRONT DOOR WINDOW REGULATOR HANDLE ASSEMBLY (See page ED-6)
5. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page ED-7)
6. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page ED-7)
7. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH


INSPECTION


1. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY LH
 - (a) Disconnect the outer rear view mirror assembly LH connector.
 - (b) Apply battery voltage and inspect the mirror motor fce operation.

Standard(LH)

Measurement Condition	Mirror Operation
Battery positive (+) → MV (3) Battery positive (-) → Com (2)	Turns upward (A)
Battery positive (+) → Com (2) Battery positive (-) → MV (3)	Turns downward (B)
Battery positive (+) → Com (2) Battery positive (-) → MH (1)	Turns left (C)
Battery positive (+) → MH (1) Battery positive (-) → Com (2)	Turns right (D)

If the result is not as specified, replace the mirror assembly.

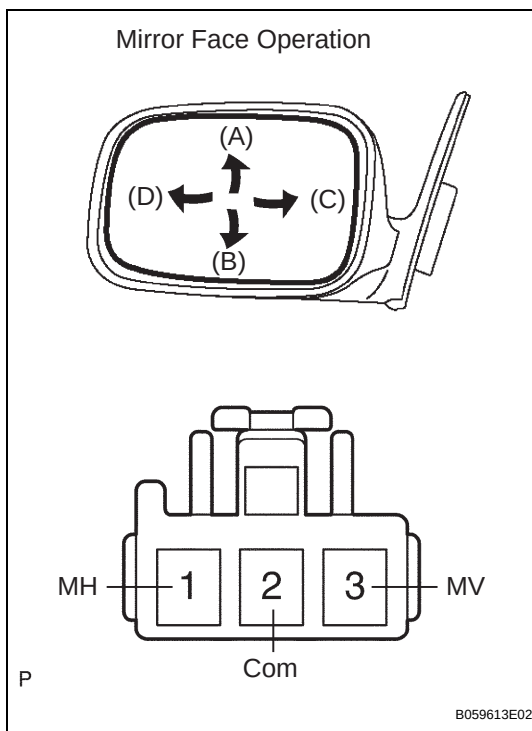

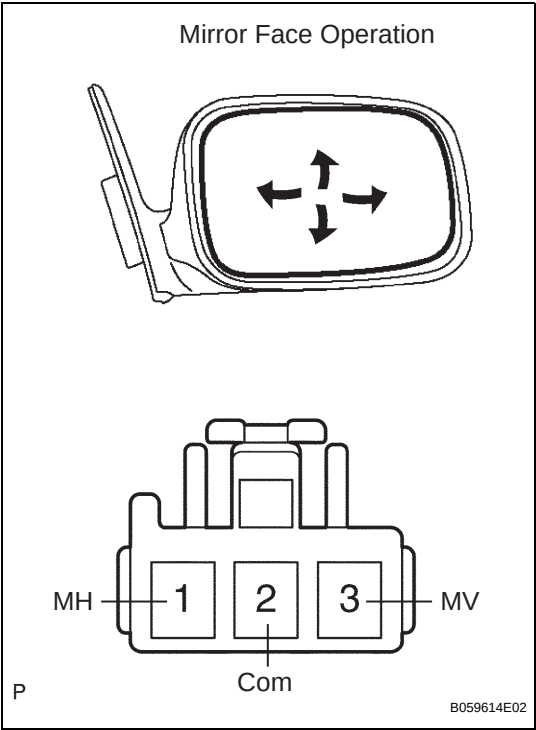

2. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY RH

- (a) Disconnect the outer rear view mirror assembly RH connector.
- (b) Apply battery voltage and inspect the mirror motor fce operation.

Standard(LH)

Measurement Condition	Mirror Operation
Battery positive (+) → MV (3) Battery positive (-) → Com (2)	Turns upward (A)
Battery positive (+) → Com (2) Battery positive (-) → MV (3)	Turns downward (B)
Battery positive (+) → Com (2) Battery positive (-) → MH (1)	Turns left (C)
Battery positive (+) → MH (1) Battery positive (-) → Com (2)	Turns right (D)

If the result is not as specified, replace the mirror assembly.