

DISASSEMBLY

1. REMOVE OCCUPANT DETECTION ECU
2. REMOVE FRONT SEAT INNER BELT ASSEMBLY RH

- (a) Remove the bolt and belt.
- (b) Remove the screw.
- (c) Using a screwdriver, disengage the 2 claws and clip. Then remove the cushion shield inner RH together with the wire harness of the inner belt.

HINT:

Tape the screwdriver tip before use.

- (d) Using a screwdriver, disengage the 3 claws and remove the cushion shield inner RH from the wire harness of the inner belt.

HINT:

Tape the screwdriver tip before use.

- (e) Disengage the clamps and disconnect the connector. Then remove the belt.

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE RH

- (a) Raise the reclining adjuster release handle to reveal the claw. Using a screwdriver, disengage the claw and remove the release handle.

HINT:

Tape the screwdriver tip before use.

4. REMOVE FRONT SEAT CUSHION SHIELD RH

- (a) Remove the screw.
- (b) Using a screwdriver, disengage the 2 claws and clip. Then remove the cushion shield.

HINT:

Tape the screwdriver tip before use.

5. REMOVE FRONT SEATBACK SHIELD LH

- (a) Using a screwdriver, disengage the claw and remove the reclining adjuster release handle.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the screw.
- (c) Using a screwdriver, disengage the 3 claws and remove the seatback shield.


HINT:

Tape the screwdriver tip before use.


6. REMOVE FRONT SEATBACK SHIELD RH

HINT:


Use the same procedures described for the LH side.

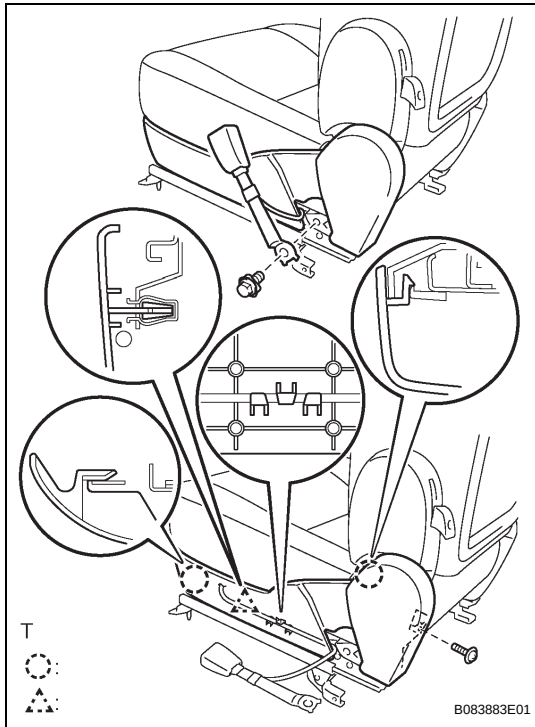


B083883E01

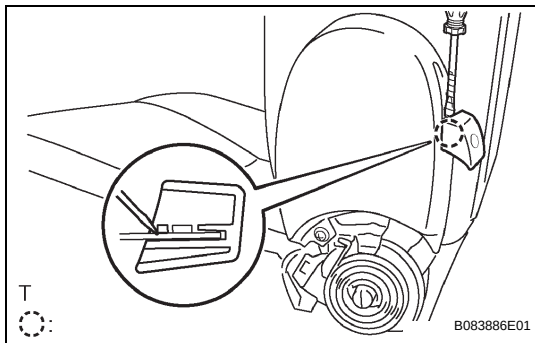

B083886E01

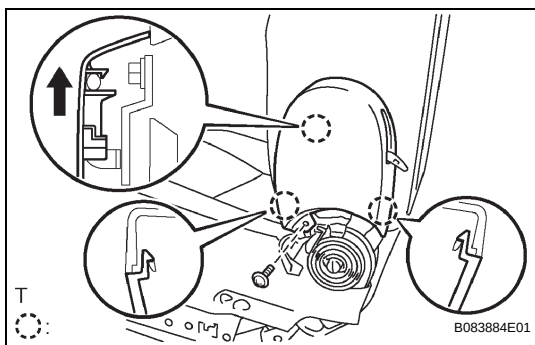


B083884E01

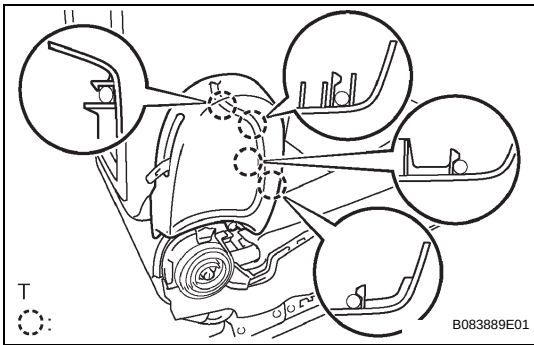

- (a) w/ Side airbag only:
Disengage the 4 claws and remove the wire harness of the side airbag from the seatback shield.


7. REMOVE SEPARATE TYPE FRONT SEATBACK ASSEMBLY RH

- (a) Remove the 4 bolts and seatback.

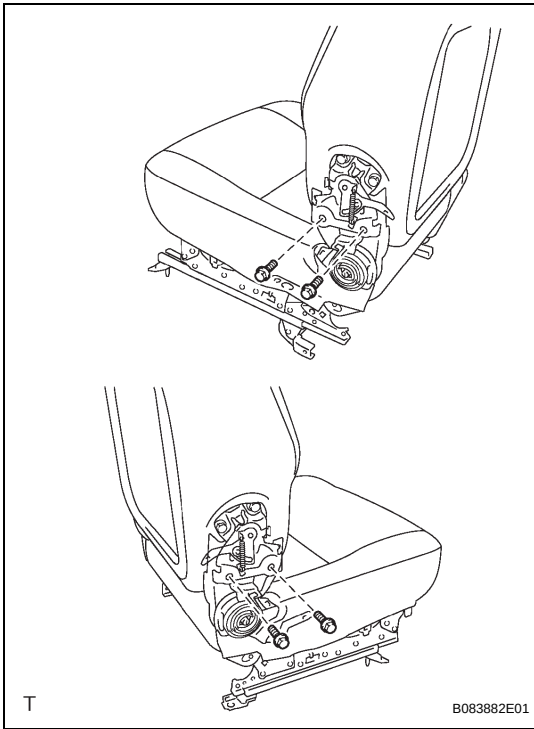

8. REMOVE FRONT SEATBACK BOARD RH

- (a) Using a clip remover, remove the 2 clips.
(b) Pull the seatback board in the direction indicated by the arrow in the illustration and disengage the 2 hooks. Then, remove the seatback board.

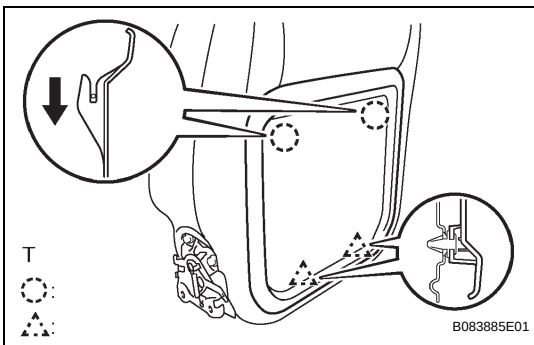

9. REMOVE FRONT SEATBACK LOCK LH


- (a) Remove the 2 bolts and seatback lock (together with front seat hinge cover).
(b) Disengage the 2 claws and remove the front seat hinge cover from the seatback lock.

10. REMOVE FRONT SEATBACK LOCK RH

HINT:


Use the same procedures described for the LH side.

11. REMOVE FRONT SEATBACK LOCK HANDLE ROD

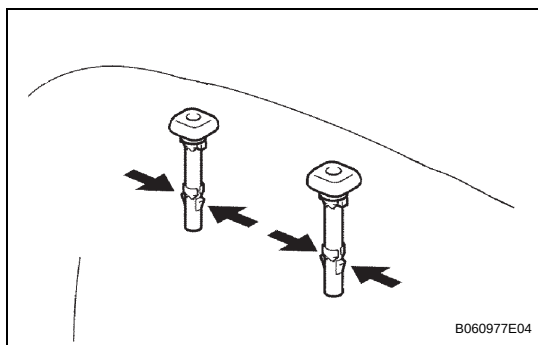


12. REMOVE SEPARATE TYPE FRONT SEATBACK COVER

- (a) Remove the hog rings. Then open the upper part of the seatback cover.
- (b) Disengage the 4 claws and remove the 2 headrest supports.

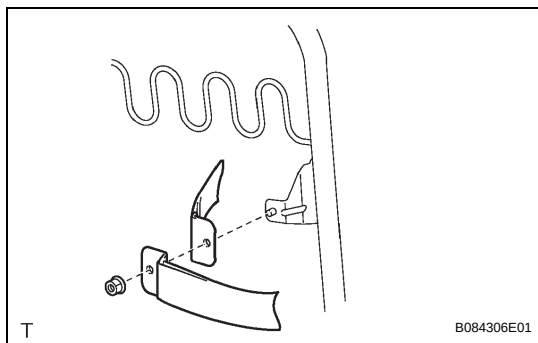

- (c) w/ Side airbag:
Remove the nut and 2 seatback cover brackets.
- (d) Remove the hog rings and seatback cover (together with the pad from the seatback frame).
- (e) Remove the hog rings and seatback cover from the seatback pad.

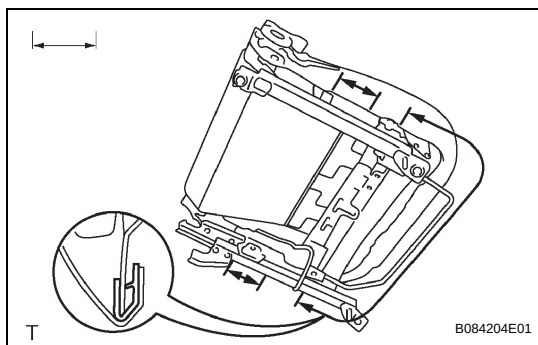

13. REMOVE SEPARATE TYPE FRONT SEAT CUSHION COVER

- (a) Disengage the hook and remove the hog rings and seat cushion cover (together with the pad) from the seat adjuster.
- (b) Remove the hog rings and cushion cover.

14. REMOVE RECLINING ADJUSTER INSIDE COVER LH (UPPER)

- (a) Remove the screw and inside cover.

15. REMOVE RECLINING ADJUSTER INSIDE COVER RH (UPPER)

- (a) Remove the screw and inside cover.

16. REMOVE RECLINING ADJUSTER INSIDE COVER LH (LOWER)

- (a) Remove the screw and inside cover.

17. REMOVE RECLINING ADJUSTER INSIDE COVER RH (LOWER)

- (a) Remove the screw and inside cover.

18. REMOVE FRONT SEAT WIRE RH

- (a) Disconnect the connectors and disengage the clamps. Then remove the seat wire.