

REMOVAL

HINT:

- A bolt without a torque specification is shown in the standard bolt chart.
- Tape the screwdriver tip before prying parts with it.

NOTICE:

Wear the gloves, because the cutting surface of the seatback frame and seat cushion frame may injure your hand.

1. REMOVE REAR SEAT ASSEMBLY LH

- Remove the headrest.
- Using a screwdriver, remove the 2 seatback hinge covers.
- Remove the 4 bolts and rear seat assembly LH.

2. REMOVE REAR SEAT ASSEMBLY RH

- Remove the headrest.
- Remove the bolt and rear seat lap type belt center floor anchor.
- Using a screwdriver, remove the 2 seatback hinge covers.
- Remove the 4 bolts and rear seat assembly RH.

DISASSEMBLY

1. REMOVE REAR SEATBACK BOARD LH

- Remove the 4 screws and rear seatback board LH.
- Remove the 2 bolts and rear seatback LH.

2. REMOVE REAR SEATBACK BOARD RH

HINT:

Use the same procedures described for the LH side.

3. REMOVE SEPARATE TYPE REAR SEATBACK COVER LH


- Remove the 2 headrest supports.
- Remove the rear seatback lock release button.
- Remove the rear seatback stop button grommet.
- Remove the hog rings and rear seatback cover.

4. REMOVE SEPARATE TYPE REAR SEATBACK COVER RH

- Remove the 2 headrest supports.
- Remove the rear seatback lock release button.
- Remove the rear seatback stop button grommet.
- Using a screwdriver, remove the rear seat shoulder belt cover.
- Remove the bolt and rear seat lap type belt center.
- Remove the hog rings and rear seatback cover.

5. REMOVE SEPARATE TYPE REAR SEAT CUSHION COVER LH

- Remove the hog rings and rear seat cushion cover LH.

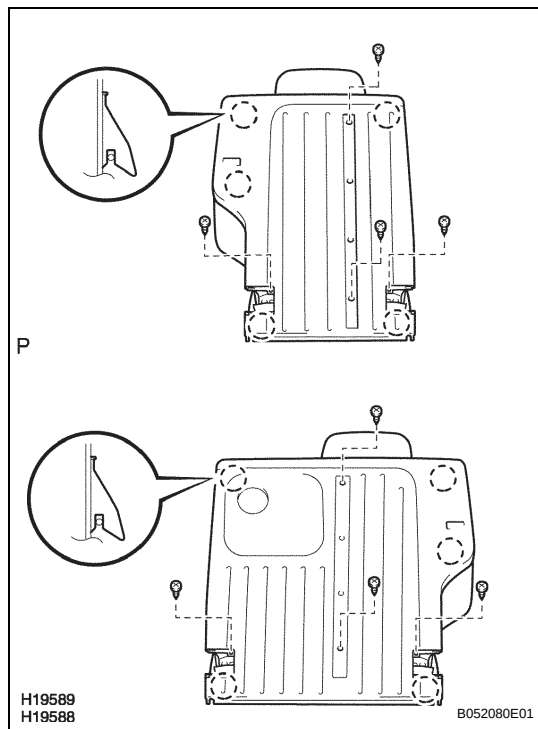

6. **REMOVE SEPARATE TYPE REAR SEAT CUSHION COVER RH**
 - (a) Remove the hog rings and rear seat cushion cover RH.
7. **REMOVE REAR SEATBACK LOCK ASSEMBLY LH**
 - (a) Remove the 2 bolts and rear seatback lock LH.
8. **REMOVE REAR SEATBACK LOCK ASSEMBLY RH**
 - (a) Remove the 2 bolts and rear seatback lock RH.