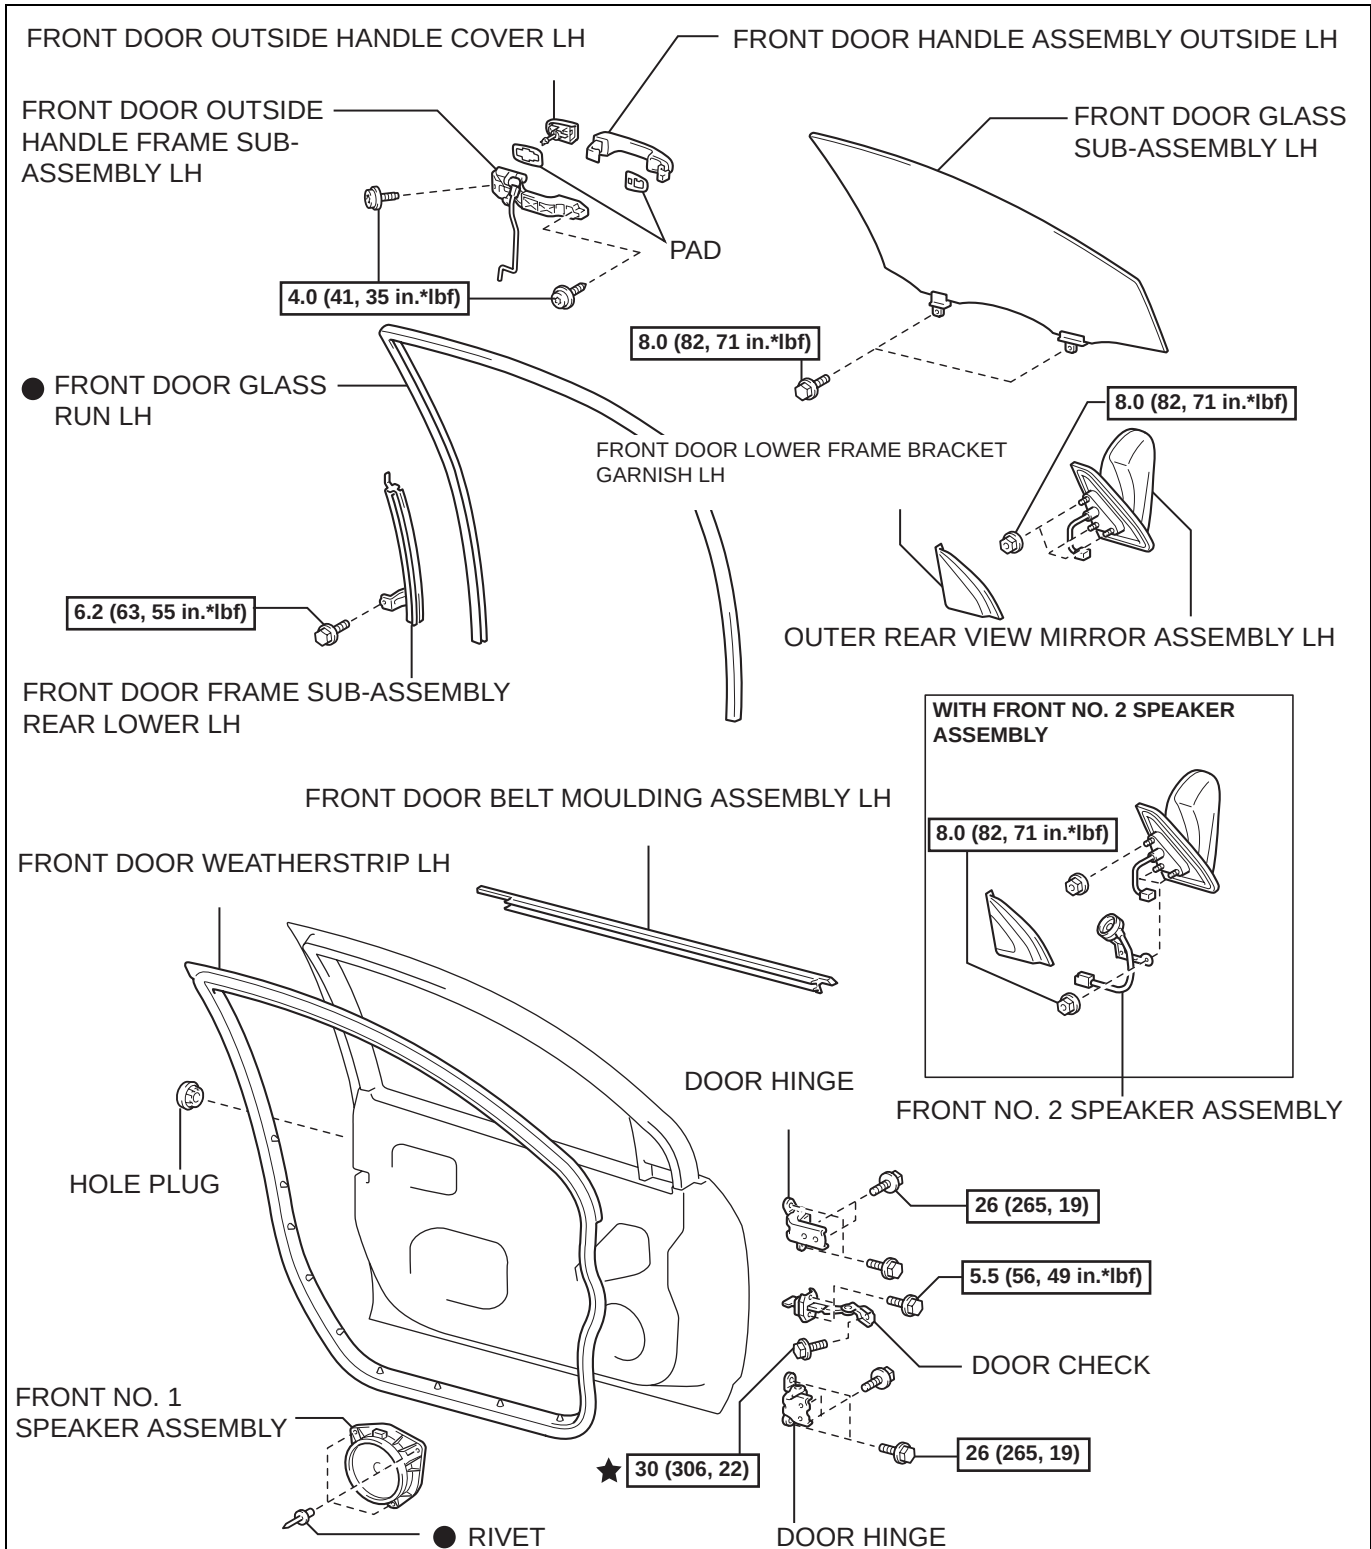


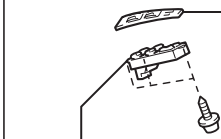
FRONT DOOR

COMPONENTS



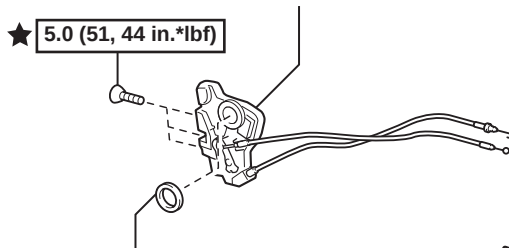
N*m (kgf*cm, ft.*lbf) : Specified torque ● Non-reusable part ★ : Precoated Part

WITH POWER WINDOW

FRONT DOOR ARMREST
BASE PANEL

POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY

FRONT DOOR INSIDE PANEL PLATE LH

POWER DOOR LOCK:
FRONT DOOR LOCK ASSEMBLY LH

★ 5.0 (51, 44 in.*lbf)

● DOOR LOCK WIRE HARNESS
PACKING● FRONT DOOR SERVICE HOLE
COVER LH

FRONT DOOR TRIM BRACKET

FRONT DOOR PULL HANDLE LH

FRONT ARMREST BASE PANEL UPPER LH

N*m (kgf*cm, ft.*lbf) : Specified torque

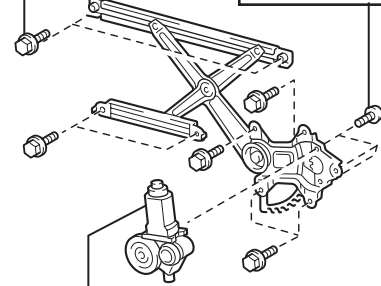
● Non-reusable part ★ : Precoated Part

FRONT DOOR WINDOW REGULATOR HANDLE ASSEMBLY

WITH POWER WINDOW

8.0 (82, 71 in.*lbf)

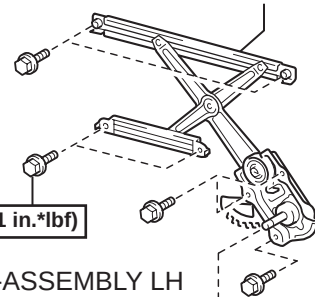
5.4 (55, 48 in.*lbf)

POWER WINDOW REGULATOR
MOTOR ASSEMBLY LHFRONT DOOR
REINFORCEMENT

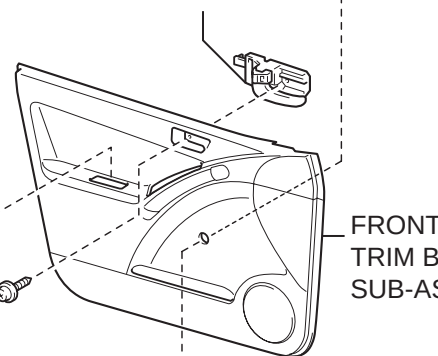
POWER WINDOW:

FRONT DOOR WINDOW REGULATOR
SUB-ASSEMBLY LH

8.0 (82, 71 in.*lbf)



FRONT DOOR INSIDE HANDLE SUB-ASSEMBLY LH

FRONT DOOR
TRIM BOARD
SUB-ASSEMBLY

SNAP RING

PLATE