




REASSEMBLY

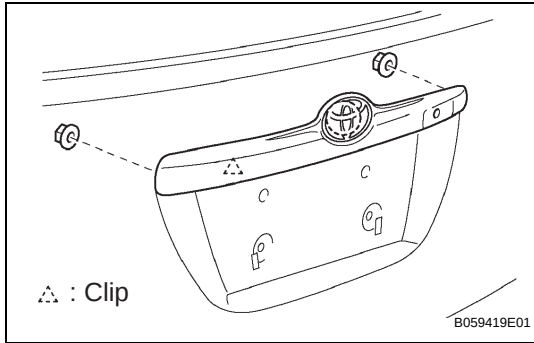


1. **INSTALL CENTER STOP LIGHT ASSEMBLY** (See page [LI-32](#))
2. **INSTALL BACK DOOR GARNISH SUB-ASSEMBLY OUTSIDE**
 - (a) Install the back door garnish sub-assembly with the 2 nuts.
Torque: 4.0 N*m (41 kgf*cm, 35 in.*lbf)
3. **INSTALL BACK DOOR OUTSIDE HANDLE**
 - (a) Install the back door outside handle with the 2 nuts, and then reconnect the connector.
Torque: 4.0 N*m (41 kgf*cm, 35 in.*lbf)

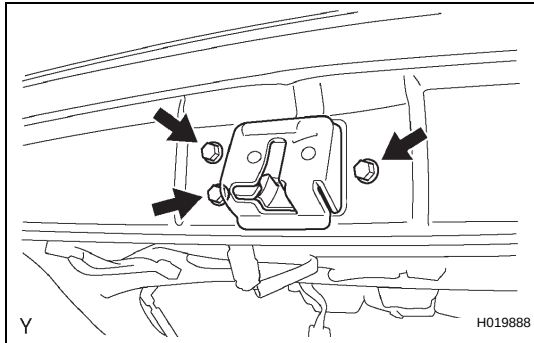


4. **INSTALL LICENSE PLATE LIGHT ASSEMBLY**
5. **INSTALL BACK DOOR LOCK ASSEMBLY**
 - (a) Install the door lock actuator to the door lock with the 3 screws.
 - (b) Install the back door lock assembly with the 3 bolts, and the reconnect the connector and link.
Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

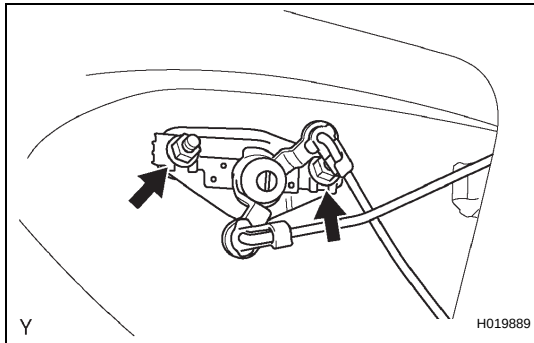


6. **INSTALL BACK DOOR LOCK CYLINDER & KEY SET**
 - (a) Install the door lock cylinder with the 2 nuts.
 - (b) Reconnect the 2 links to the door lock cylinder.
7. **INSTALL REAR WIPER MOTOR ASSEMBLY** (See page [WW-19](#))
8. **INSTALL REAR WIPER ARM ASSEMBLY** (See page [WW-20](#))

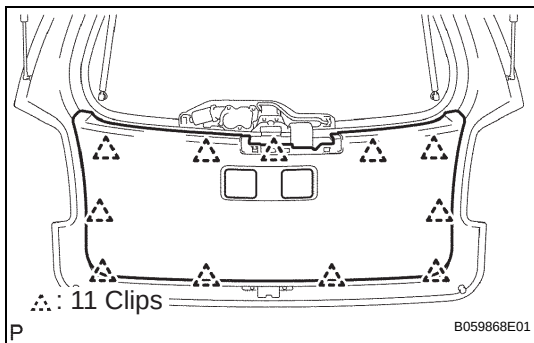

9. **INSTALL BACK DOOR TRIM BOARD ASSEMBLY**
 - (a) Engage the 11 clips and install the back door trim board assembly to the back door trim.
10. **INSTALL DOOR PULL HANDLE**

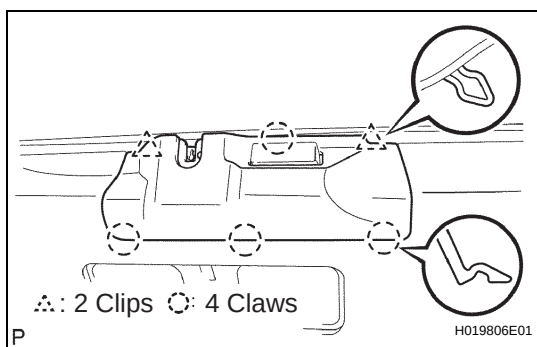**11. INSTALL BACK DOOR LOCK COVER**

- (a) Engage the 2 clips and 4 claws. Install the back door lock cover.

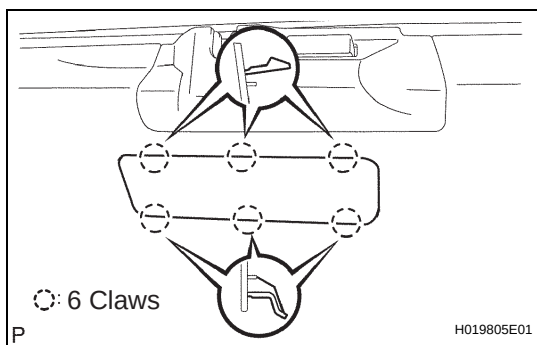**12. INSTALL LICENSE PLATE LIGHT SERVICE COVER**

- (a) Attach 6 claws to the install license plate light service cover.