

REMOVAL

HINT:

A bolt without a torque specification is shown in the standard bolt chart (See page [SS-2](#)).

1. REMOVE FRONT FENDER LINER LH

- Using a clip remover, remove the 2 clips.
- Aero type:
Using a clip remover, remove the 4 clips.
- Partially remove the fender liner.

HINT:

It is not necessary to fully remove the fender liner. Partially remove it so that the bumper cover can be removed.

2. REMOVE FRONT FENDER LINER RH

HINT:

Use the same procedures described for the LH side.

3. REMOVE FRONT BUMPER EXTENSION LH

4. REMOVE FRONT BUMPER EXTENSION RH

5. REMOVE FRONT BUMPER COVER

- Using a clip remover, remove the 3 clips.
- Remove the 2 screws and 2 bolts.
- Using a screwdriver, disengage the 2 hooks and remove the bumper cover.

HINT:

- Only the left hook is indicated in the illustration but the right hook exists on the opposite side of the vehicle.
- Tape the screwdriver tip before use.

6. REMOVE FRONT BUMPER COVER LOWER

- Using a screwdriver, disengage the 8 claws and 2 bolts, and remove the cover lower from the bumper cover.

HINT:

Tape the screwdriver tip before use.

7. REMOVE FRONT BUMPER EXTENTION MOUNTING BRACKET

8. REMOVE FRONT BUMPER ENERGY ABSORBER

9. REMOVE FRONT BUMPER REINFORCEMENT



- Using a clip remover, disengage the 2 connector clamps.
- Remove the 4 nuts and reinforcement.

10. REMOVE FRONT BUMPER SIDE MOUNTING BRACKET LH

11. REMOVE FRONT BUMPER SIDE MOUNTING BRACKET RH

12. REMOVE FOG LIGHT ASSEMBLY LH (w/ Fog Light)

13. REMOVE FOG LIGHT ASSEMBLY RH (w/ Fog Light)

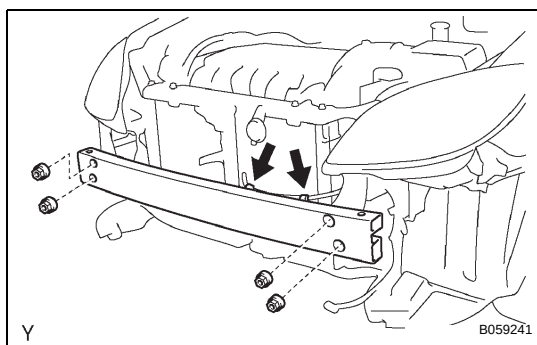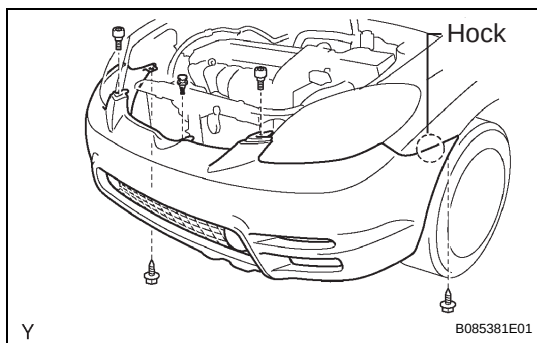

- 14. REMOVE FRONT BUMPER HOLE COVER LH (w/o Fog Light)**
- 15. REMOVE FRONT BUMPER HOLE COVER RH (w/o Fog Light)**
- 16. REMOVE FRONT BUMPER SIDE SUPPORT LH**
 - (a) Remove the screw and side support.
- 17. REMOVE FRONT BUMPER SIDE SUPPORT RH**
 - (a) Remove the screw and side support.
- 18. REMOVE FRONT LICENCE PLATE MOUNTING BRACKET**
 - (a) Remove the 2 screws and bracket.