

REMOVAL


HINT:

A bolt without a torque specification is shown in the standard bolt chart (See page [SS-2](#)).

1. REMOVE DECK BOARD SUB-ASSEMBLY


2. REMOVE DECK TRIM COVER REAR

- (a) Remove the 2 clips.
- (b) Using a moulding remover, remove the deck trim cover rear.

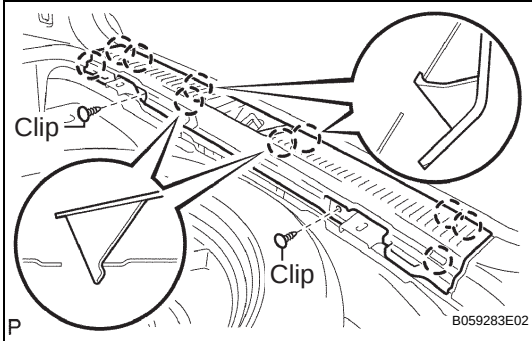

3. REMOVE REAR BUMPER COVER

- (a) Remove the 6 nuts.

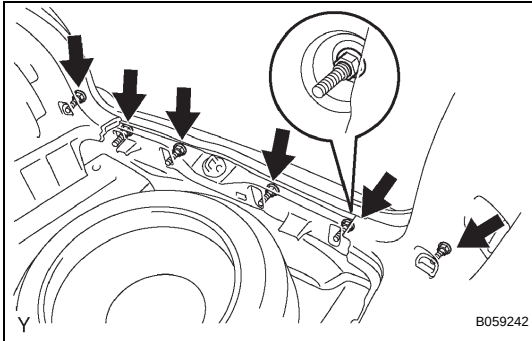


- (b) Remove the 8 screws.
- (c) Disengage the 2 hooks and 2 clips, and remove the rear bumper cover.

4. REMOVE REAR BUMPER ENERGY ABSORBER

5. REMOVE REAR BUMPER BAR REINFORCEMENT CENTER

- (a) Remove the rear bumper bar reinforcement from the rear bumper energy absorber.

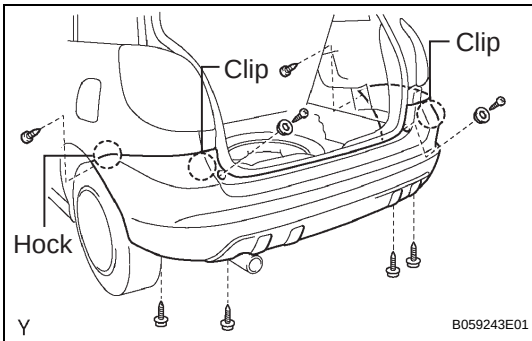

6. REMOVE REAR BUMPER SPOILER LH (w/ Rear Spoiler)

- (a) Remove the 4 retainers and rear bumper spoiler LH.

7. REMOVE REAR BUMPER SPOILER RH (w/ Rear Spoiler)

- (a) Remove the 3 retainers.
- (b) Disengage the hook and remove the rear bumper spoiler RH.

8. REMOVE REAR SPOILER (w/ Rear Spoiler)

- (a) Remove the 3 retainers, 2 screws, rear spoiler retainer and rear spoiler.

9. REMOVE BUMPER MOULDING SET BOLT NO. 1

10. REMOVE REAR BUMPER REINFORCEMENT NO. 1

- (a) Remove the 4 nuts and rear bumper reinforcement No. 1.

11. REMOVE REAR BUMPER REINFORCEMENT NO. 5

- (a) Remove the 4 clips and 2 rear bumper reinforcements No. 5 from the rear bumper reinforcement No. 1.

12. REMOVE REAR BUMPER ARM LH

- (a) Remove the 3 bolts and rear bumper arm LH.
- (b) Use the same procedures described for the LH side.