


REMOVAL

HINT:

A bolt without a torque specification is shown in the standard bolt chart (See page [SS-2](#)).

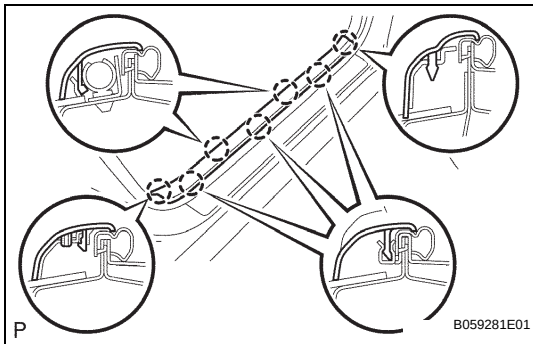

1. **REMOVE FRONT DOOR SCUFF PLATE LH**
 - (a) Using a screwdriver, remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

2. **REMOVE FRONT DOOR SCUFF PLATE RH**

HINT:

Use the same procedures described for the LH side.

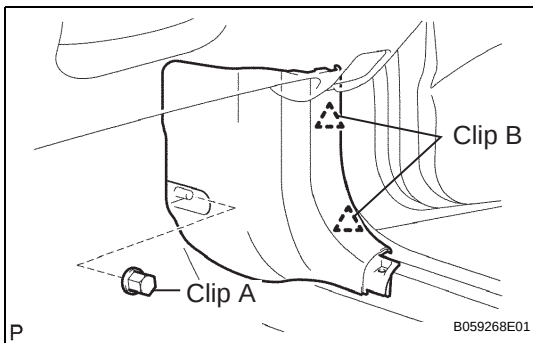

3. **REMOVE COWL SIDE TRIM BOARD LH**

- (a) Remove the clip labeled A.

- (b) Using a screwdriver, disengage the 2 clips labeled B and remove the trim board.


HINT:

Tape the screwdriver tip before use.

4. **REMOVE COWL SIDE TRIM BOARD RH**

HINT:

Use the same procedures described for the LH side.

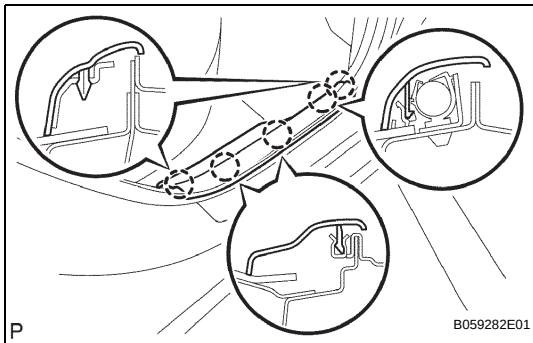

5. **REMOVE REAR DOOR SCUFF PLATE LH**

- (a) Using a screwdriver, remove the scuff plate.

HINT:

Tape the screwdriver tip before use.

6. **REMOVE REAR DOOR SCUFF PLATE RH**

HINT:

Use the same procedures described for the LH side.

7. **REMOVE FRONT DOOR OPENING TRIM LH**

8. **REMOVE FRONT DOOR OPENING TRIM RH**

9. **REMOVE REAR DOOR OPENING TRIM LH**

10. **REMOVE REAR DOOR OPENING TRIM RH**

11. **REMOVE CENTER PILLAR LOWER GARNISH LH**

- (a) Using a screwdriver, pull the garnish lower upward to remove it.


HINT:


Tape the screwdriver tip before use.

12. **REMOVE CENTER PILLAR LOWER GARNISH RH**

HINT:


Use the same procedures described for the LH side.

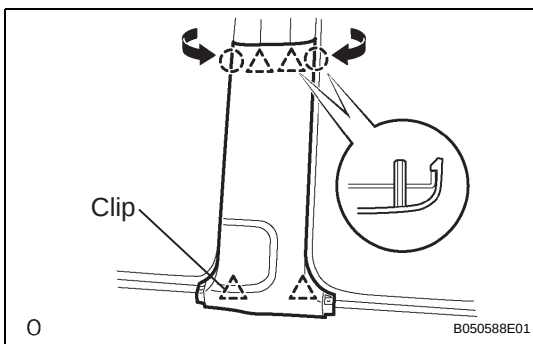

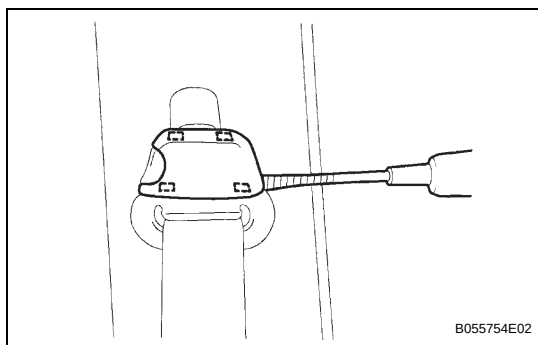

13. REMOVE CENTER PILLAR GARNISH LH

- (a) Using a screwdriver, remove the shoulder anchor cover cap.
HINT:
Tape the screwdriver tip before use.
- (b) Remove the bolt and disconnect the front seat outer belt (shoulder anchor side).
- (c) Remove the bolt and disconnect the front seat outer belt (floor anchor side).

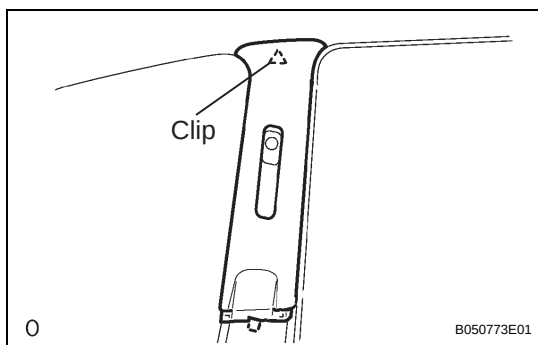


- (d) Using a screwdriver, remove the pillar garnish.
HINT:
Tape the screwdriver tip before use.

14. REMOVE CENTER PILLAR GARNISH RH


- HINT:
Use the same procedures described for the LH side.

15. REMOVE NO. 2 DECK BOARD

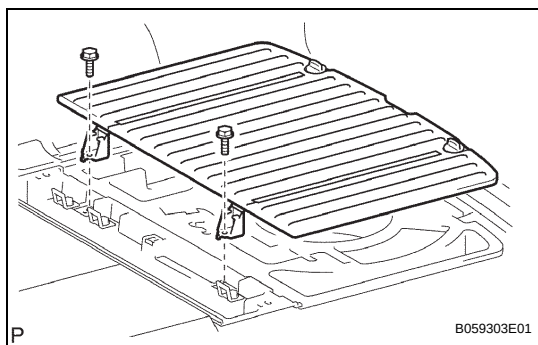


16. REMOVE DECK BOARD SUB-ASSEMBLY

- (a) Remove the 2 bolts and deck board.

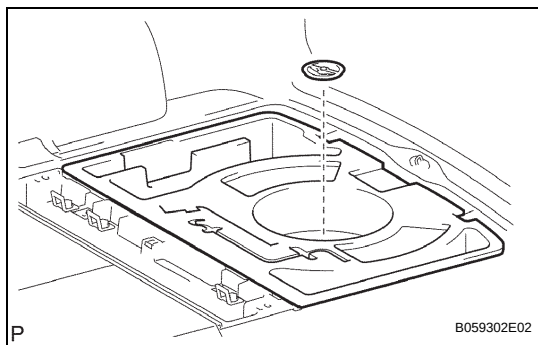

17. REMOVE REAR DECK FLOOR BOX


- (a) Loosening the spare wheel carrier and remove the deck floor box rear.

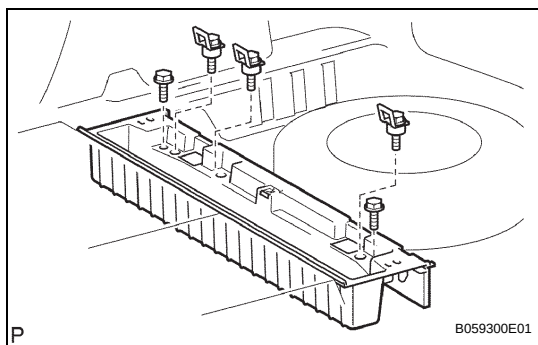

18. REMOVE LUGGAGE COMPARTMENT TRAY

- (a) Remove the 5 bolts and luggage compartment tray.

19. REMOVE BACK DOOR WEATHERSTRIP

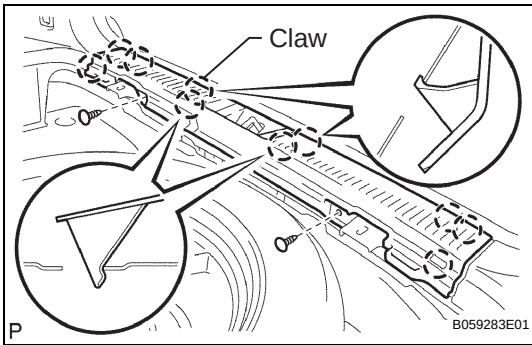

20. REMOVE REAR DECK TRIM COVER

- Remove the 2 clips.
- Using a moulding remover, remove the deck trim cover rear.

21. REMOVE TONNEAU COVER ASSEMBLY

22. REMOVE REAR SEAT CUSHION ASSEMBLY


HINT:

See page [SE-18](#)

23. REMOVE REAR SEATBACK ASSEMBLY

HINT:

See page [SE-18](#)

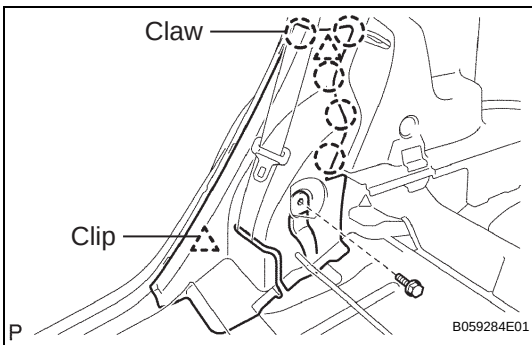

24. REMOVE REAR SEAT SIDE GARNISH LH

- Remove the bolt and seat back hinges.
- Using a screwdriver, remove the side garnish.


HINT:

Tape the screwdriver tip before use.

25. REMOVE REAR SEAT SIDE GARNISH RH

HINT:

Use the same procedures described for the LH side.

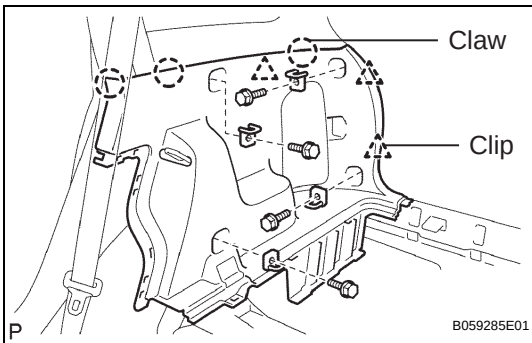

26. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH

- Remove the 4 bolt and 4 rope hooks.
- Using a screwdriver, disengage the 3 claws and 3 clips, and remove the side panel.


HINT:

Tape the screwdriver tip before use.

27. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

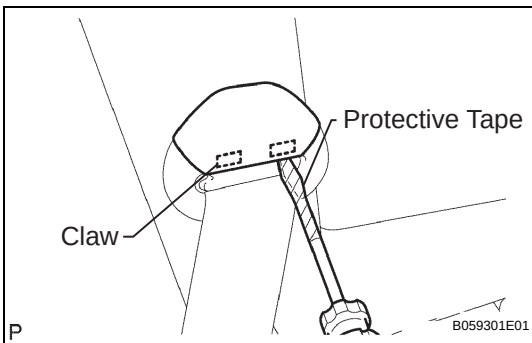


28. REMOVE ROOF SIDE GARNISH INNER LH

- Using a screwdriver, remove the seat belt anchor cover.

HINT:

Tape the screwdriver tip before use.


- Remove the bolt and rear seat 3-point belt.

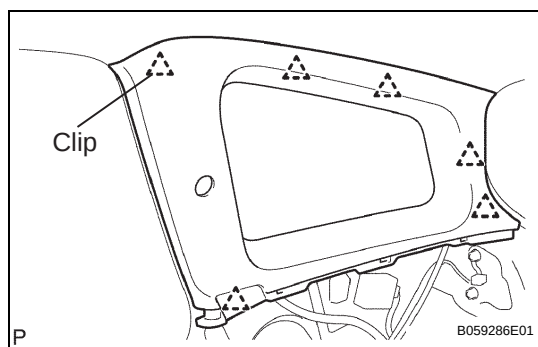

- (c) Using a screwdriver, remove the roof side garnish.
HINT:
Tape the screwdriver tip before use.

29. REMOVE ROOF SIDE GARNISH INNER RH

- HINT:
Use the same procedures described for the LH side.

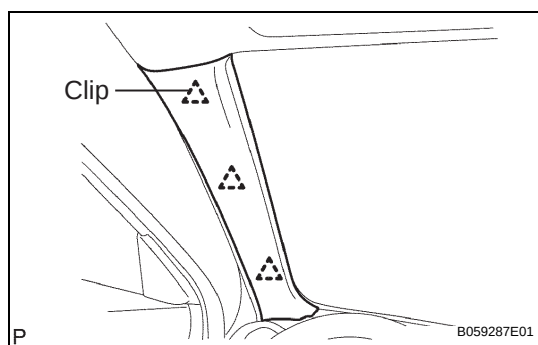

30. REMOVE FRONT PILLAR GARNISH LH

- (a) Using a screwdriver, remove the pillar garnish.
HINT:
Tape the screwdriver tip before use.

31. REMOVE FRONT PILLAR GARNISH RH

- HINT:
Use the same procedures described for the LH side.




32. REMOVE VISOR ASSEMBLY LH

- (a) Remove the 2 screws and visor.


33. REMOVE VISOR ASSEMBLY RH

- (a) Remove the 2 screws and visor.

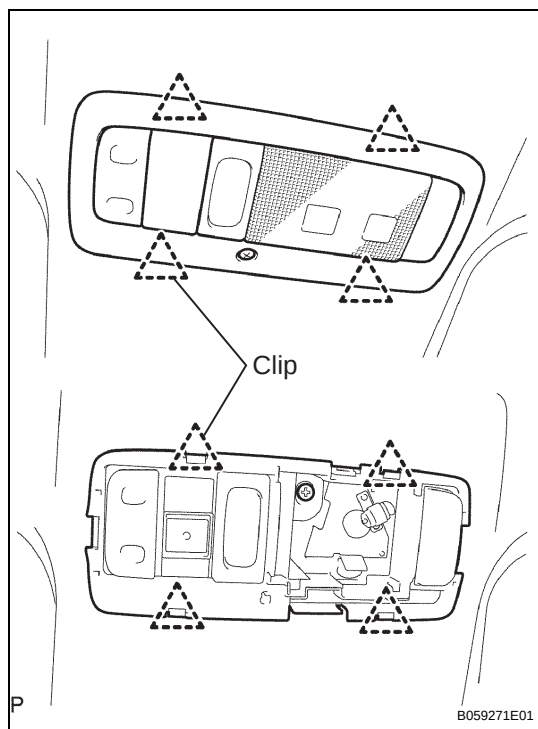

34. REMOVE MAP LIGHT ASSEMBLY

- (a) Remove the screw.
(b) Using a screwdriver, disengage the 4 clips and remove the light lens and cover.
HINT:
Tape the screwdriver tip before use.
(c) Remove the screw.
(d) Using a screwdriver, remove the map light.
HINT:
Tape the screwdriver tip before use.

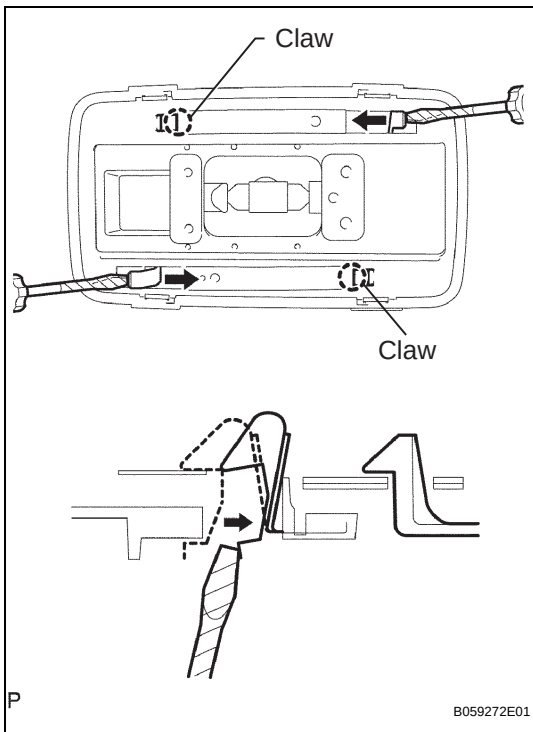


35. REMOVE NO. 1 INTERIOR LIGHT ASSEMBLY

- Using a screwdriver, remove the lens cover.
- Using a screwdriver, remove the room light, as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

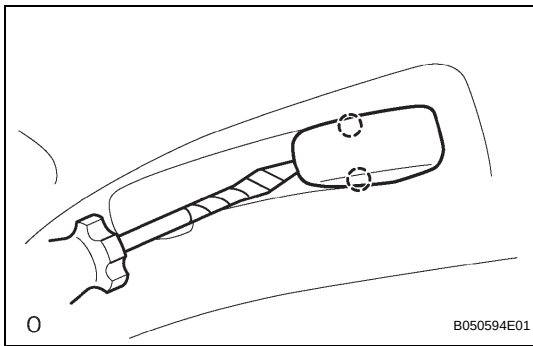


36. REMOVE ASSIST GRIP SUB-ASSEMBLY

- Using a screwdriver, remove the 2 grip covers.
- Remove the 2 screws and assist grip.

HINT:

Tape the screwdriver tip before use.

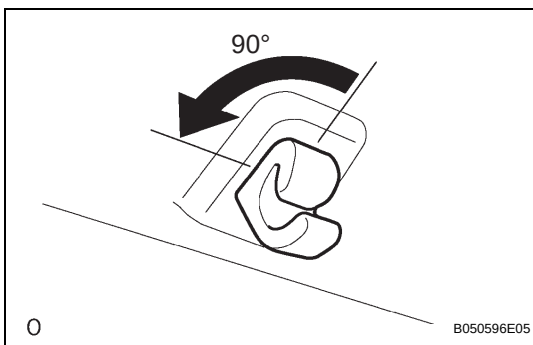

37. REMOVE VISOR HOLDER

- Remove the visor holder by turning it 90° counterclockwise.

38. REMOVE SUN ROOF OPENING TRIM MOULDING (w/ SLIDING ROOF)