


Chrysler Aspen 2006 – 2009 fuse box diagram

Fuses (Interior)

The fuse block contains blade-type mini-fuses, relays, and circuit breakers for high-current circuits. It is located in the left kick panel. It is accessible through a snap-in cover.

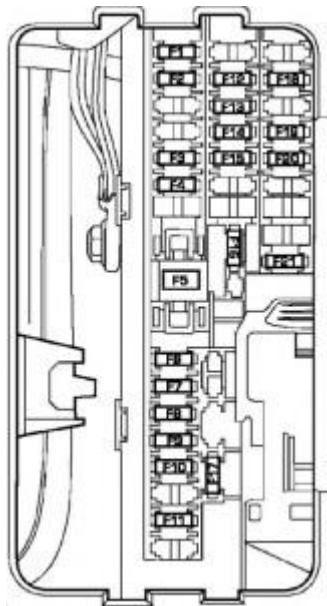

Chrysler Aspen – fuse box – interior

Cavity	Mini fuse/color	Description
F1	15 Amp Blue	Instrument Cluster Battery Feed
F2	10 Amp Red	Spare
F3	10 Amp Red	Ignition Run/Start for Next Generation Controller (NGC), Integrated Power Module (IPM), AC Relay and Fuel Pump Relay
F4	10 Amp Red	Door Node and NonMemory Power Mirror Switch Battery Feed

F5	(2) 10 Amp Red	Airbags (2 Fuses in Yellow Holder)
F6	2 Amp Clear	Ignition Run/Start Unlock
F7	25 Amp Natural	Radio Battery Feed
F8	10 Amp Red	Ignition Run/Start for Cluster/Transfer Case/Seat Sw. Back lighting
F9	10 Amp Red	Satellite Digital Audio Receiver (SDAR)/ Digital Video Disc (DVD) Battery Feed
F10	10 Amp Red	Spare
F11	10 Amp Red	Heated Mirrors
F12	20 Amp Yellow	Cluster Battery Feed
F13	10 Amp Red	Ignition Run HVAC Module/Heated Rear Glass (EBL) Relay
F14	10 Amp Red	ABS Module Ignition Run
F15	15 Amp Blue	Battery Feed Blue Tooth, Compass/Trip Computer (CMTC), Sentry Key Diagnostics
F16	20 Amp Yellow	Reconfigurable Power Outlets
F17	20 Amp Yellow	Ignition Run / Rear Park Assist / Second Row Heated Seats

F18	20 Amp Yellow	Cigar Lighter Ignition
F19	10 Amp Red	Spare Fuse
F20	15 Amp Blue	Heating & Air Conditioning w/ATC Only Battery Feed
F21	25 Amp Natural	Amplifier Battery Feed

Fuses (Power Distribution Center)

Power distribution center located in the left side of the engine compartment.

Cavity	Cartidge/fuse relay	Mini fuse	Description
1	30	—	Starter
2	30	—	Front Wiper
3	40	—	Brake Batt
4	30	—	JB Feed Acc # 2
5	40	—	Power Seats
6	30	—	Run Remote Relay Feed
7	40	—	Blower Motor Relay Feed
8	40	—	JB Feed Acc Delay

9	Spare	—	Spare
10	30	—	ASD
11	40	—	Power Liftgate (If Equipped)
12	40	—	JB Feed / Heated Rear Glass (EBL)/ T Case Brake
13	30	—	JB Feed RR
14	40	—	ESP Pump
15	50	—	JB Feed
16	—	10	Spare
17	—	Spare	Spare
18	—	20	Fuel Pump
19	—	20	Next Generation Controller (NGC)
20	—	25	115v Power Inverter
21	—	20	ABS Batt
22	—	20	Next Generation Controller (NGC) Batt
23	—	20	Trailer Tow

24	—	15	A/C Clutch
25	—	15	Stop Lamp Switch
26	—	Spare	Spare
27	—	20	Run/Start Relay Feed
28	—	Spare	Spare
29	Relay	—	Run Start
30	Relay	—	Run Remote
31	Spare	—	—
32	Relay	—	Starter
33	Relay	—	Electronic Automatic Transaxle (EATX)
34	Relay	—	AC Clutch
35	Relay	—	Fuel Pump Rly
36	Spare	—	Spare
37	Relay	—	Stop Lamp Switch
38	Spare	—	Spare

39	Relay	—	Blower Motor
40	Relay	—	Auto Shut Down (ASD) Rly

Fuses (Integrated Power Module)

Integrated Power Module is located in the left side of the engine compartment.

Cavity	Cartridge fuse/ relay	Mini fuse	Description
1	Relay	—	Wiper On/Off Rly
2	Relay	—	Wiper Hi/Lo Rly
3	Relay	—	Horn Rly
4	Relay	—	Rear Wiper Rly
5	Relay	—	Lt Trailer-Tow Stop/ Turn Rly
6	Relay	—	Rt Trailer-Tow Stop/ Turn Rly
7	Relay	—	Park Lamps Rly
8	—	10	Lt Park Lamps
9	—	10	Trailer-Tow Park Lamps
10	—	10	Rt Park Lamps
11	Relay	—	Radiator Fan Hi Rly

12	—	20	Front Control Module (FCM) Batt #4
13	—	20	Front Control Module (FCM) Batt #2
14	—	20	Adjustable Pedal
15	—	20	Ft Fog Lamps
16	—	20	Horn
17	—	20	Rear Wiper
18	—	20	Front Control Module (FCM) Batt #1
19	—	20	Lt Trailer-Tow Stop/ Turn
20	—	20	Front Control Module (FCM) Batt #3
21	—	20	Rt Trailer-Tow Stop/ Turn
22	30	—	Front Control Module (FCM) BATT # 5
23	40	—	Radiator Fan
24	Relay	—	Radiator Fan Lo Rly
25	Relay	—	Ft Fog Lamps Rly
26	Relay	—	Adjustable Pedal Rly

27	—	30	Ignition Off Draw (IOD) #1
28	—	30	Ignition Off Draw (IOD) #2
29	—	—	Spare
30	—	—	Spare